

Model: VIP IR-5 KIT, VIP 1R-10 KIT For MCS-2500, MCS-4000, MGA-9000, and ETB

Page: 1 Of 3

Installation Instructions

INSTALLATION MUST BE PERFORMED BY QUALIFIED SNAP-ON/SUN PERSONNEL ONLY

INSTALLATION OVERVIEW: ___

This kit is for the installation of the VIP 1 R-5 AND VI P-1 R-1 O for the MCS-2500, MCS-4000, MGA-9000, and the ETB. The kit includes all the parts **necessary** to correctly install VIP-1 R.

PREREQUISITE:

MCS-2500 must have a PC Interface kit #1 091-0313-01 and Power Distribution kit

#1091-0316-01.

MCS-4000 must have a PC Interface kit #1 091-0235-01.
MGA-9000 must have a PC interface kit #1 091-0235-02.
ETB must have a PC Interface kit #AA-800.

PARTS & ACCESSORIES LIST FOR: _____

PART NUMBER	DESCRIPTION	-5 QTY	-10 QTY
0552-0043	GM and FORD Coil Adapter	1	1
0552-0044	GM External Coil Adapter	1	1
0552-0045	GM Micro Pack Adapter	1	1
1747-0101	Pattern, Pickup, Chrome	1	1
1747-0102	HEI Pickup	1	1
6004-0462	Volt./Ohm Test Lead, Pink, 10ft		1
6004-0462-01	Volt/Ohm Test lead, Pink, 5ft	1	
6004-0544-01	Pattern, Dual, Assembly, Blue, 5ft	1	
6004-0544-02	Pattern, Dual, Assembly, Black, 10ft		1
6004-0763-01	Pattern Lead Conventional, Blue, 5ft	1	
6004-0763-02	Pattern Lead Conventional, Blue, 10ft		1
6004-0768-01	Cable Assembly, Pod	1	1
6005-0182-01	Universal Test Lead Assembly, 5ft	1	
6005-0182-02	Universal Test Lead Assembly, 10ft		1
7009-2376-02	VIP-1 Assembly	1	1
7009-2325-01	Trigger Pickup and Lead Assembly, Red, 5ft	1	
7009-2325-02	Trigger Pickup and Lead Assembly, red, 10ft		1
0692-2315-01	Installation Instructions	1	1
0692-1834-01	SEL 1403c, Questionnaire	1	1
0692-1034-01	Label, Key Board	1	1
0692-2317-01	Operator's Manual	1	1

REQUIRED TOOLS: ___

- COMPLETE ISSUED TOOL KIT
- ANTI-STATIC KIT

INSTALLATION INSTRUCTIONS: _____



WARNING!

USE STANDARD ANTI-STATIC PROCEDURES WHILE PERFORMING THIS PROCEDURE

- 1. After performing the initial checkout and any necessary repairs, switch off the tester and disconnect it from the power source.
- 2. Connect the POD Cable Assembly (6004-0768-01) from the VIP-1 R assembly connector to the VIP-1 R connector on the back of the tester.
- 3. NOTE: Make sure both the beige seals are installed. If one is missing order PN 4162-0947.
- 4. Connect the Trigger Pickup and Lead Assembly (7009-2325--) to the Trigger Pickup Lead connector on the VIP-1 R assembly.
- 5. Connect the Universal Test Lead Assembly (6005-01 **82-**)** to the Universal Test Lead Connector on the VIP-1 R Assembly.
- 6. Connect the Volt/Ohm Test Lead Assembly (6004- 0462-*) to the Volt/Ohm Connector on the VIP-1 R Assembly.
- 7. Connect the Pattern Pickup (1747-01 01) to the Conventional Pattern Lead (6004-0763-*).
- 8. Connect the Pattern Pickup Assembly from the previous step to the Pattern Pickup Connector on the VIP-1R.
- 9. Clean the keyboard surface to remove dirt and dust. Peel the backing off the Keyboard Label (0692-1 034-01) and place the label around the function keys as shown in Figure 1.

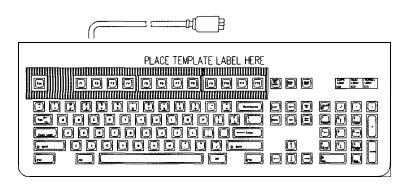


Figure 1 Keyboard Label

- 10. Place Adapter (0552-0043), Adapter (0552-0044), Adapter (0552-0045), HEI Pickup (1747-01 O2) and Dual Pattern Lead Assembly (6004-0544-") in the Storage Drawer.
- ** The dash number of the leads depends on the dash number of the kit being installed. See the parts list on page one for dash numbers.

**** *****************

* INSTALLATION COMPLETE *

CHECKOUT PROCEDURE:

- **1**. Connect tester to AC power and turn on.
- 2. Select 1. VIP Engine Analyzer.
- 3. Select Continue.
- 4. Select 1. ID, then 3. Vehicle Code.
- 5. **Type 115,** then select Continue.
- 6. Select 3. Pin Point, then 1. Engine Data.
- 7. Connect the VIP-1 R to an IS-1 OOA and set it to 8 Cylinders, Delta KV on, and Ignition on.
- 8. Verify RPM, Dwell, KV, and Battery volts for proper operation.

**** **********

* CHECKOUT COMPLETE •