



WHEELTRONIC LTD.

INSTALLATION and OPERATION MANUAL

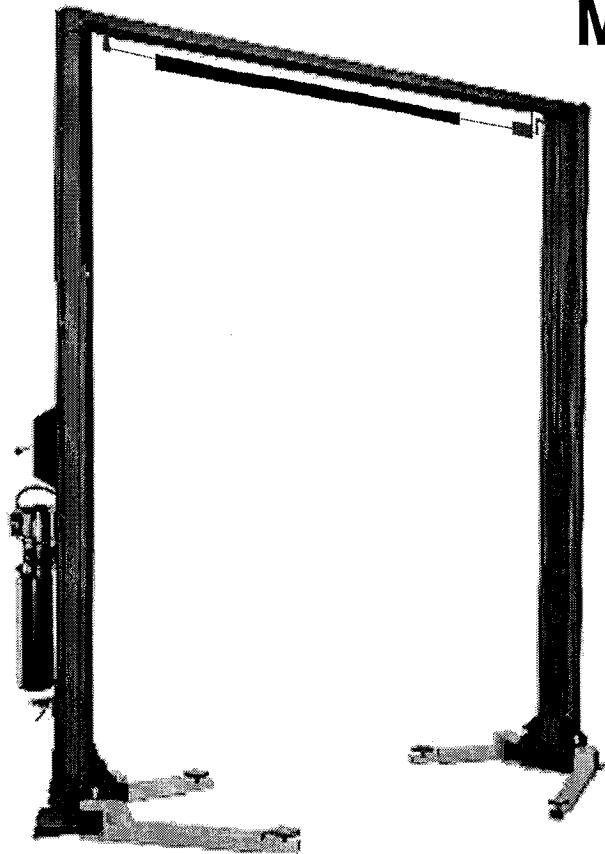

CE



VECTOR
(MODEL 11144VS)
11000 LB.


**READ and SAVE THIS
INSTRUCTION MANUAL**

OCT. 1999 6-1614

• 594 •


WHEELTRONIC LTD.

EXPLODED VIEWS AND PARTS LISTS

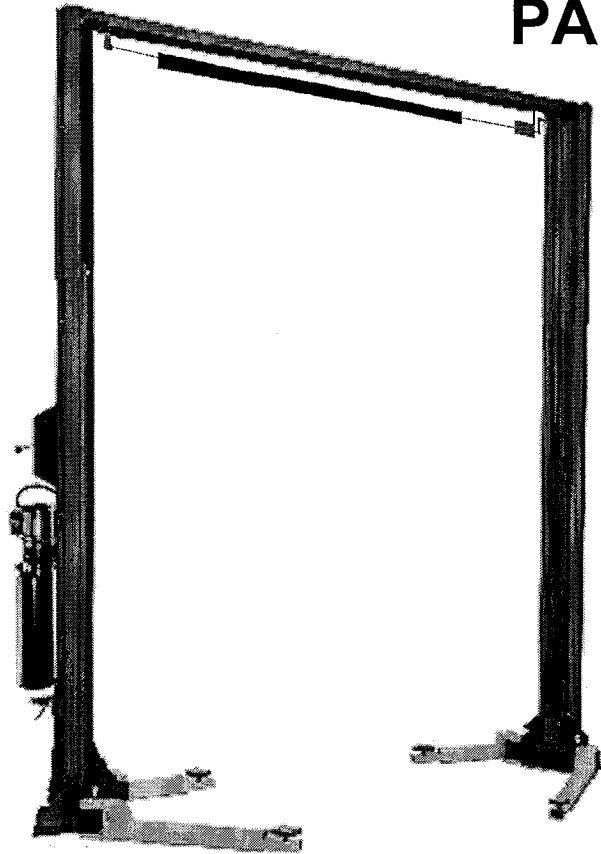

CE



VECTOR
(MODEL 11144VS)
11000 LB.

**READ and SAVE THIS
INSTRUCTION MANUAL**

OCT. 1999 6-1614

TABLE OF CONTENTS

PAGE

| | |
|--|----|
| 1. SAFETY AND OPERATING INSTRUCTIONS | 1 |
| 2. SPECIFICATIONS | 2 |
| 3. CONTENTS | 3 |
| 4. INSTALLATION REQUIREMENTS AND TOOLS | 4 |
| 5. INSTALLATION INSTRUCTIONS | 5 |
| 5.1 BAY LAYOUT | 6 |
| 5.2 SAFETY SHUT-OFF BAR INSTALLATION | 7 |
| 5.3 SAFETY SHUT-OFF BAR ADJUSTMENT | 8 |
| 5.4 TOWER POSITIONING AND SETUP | 9 |
| 5.5 ARM INSTALLATION | 10 |
| 5.6 POWER PACK INSTALLATION | 11 |
| 5.7 HYDRAULIC SYSTEM INSTALLATION..... | 13 |
| 5.8 SAFETY RELEASE CABLE ROUTING AND ADJUSTMENT..... | 15 |
| 5.9 HYDRAULIC SYSTEM BLEEDING AND LEVELING PROCEDURE | 17 |
| 5.10 HYDRAULIC ADJUSTMENT PROCEDURE..... | 18 |
| 5.11 TOWER POSITIONING AND ANCHORING..... | 19 |
| 5.12 SHIMMING OF THE REMAINING TOWER..... | 20 |
| 5.13 ARM LOCKS ADJUSTMENT | 21 |
| 6. PERIODIC MAINTENANCE..... | 22 |
| 7. SAFETY AWARENESS - AUTOMOTIVE LIFT INSTITUTE (ALI)..... | 23 |
| 8. PARTS MANUAL | |
| 8.1 LIFT ASSEMBLY DIAGRAM..... | 25 |
| 8.2 LIFT PARTS LIST..... | 26 |
| 8.3 HYDRAULIC SYSTEM DIAGRAM..... | 28 |
| 8.4 HYDRAULIC PART LIST..... | 29 |
| 8.5 POWER PACK DIAGRAM..... | 30 |
| 8.6 POWER PACK PART LIST..... | 31 |

1. SAFETY AND OPERATING INSTRUCTIONS

1. Read all instructions.
2. Inspect lift daily. Do not operate if it malfunctions or problems have been encountered.
3. Never attempt to overload the lift. The manufacturer's rated capacity is shown on the identification label on the power side column.
Do not override the operating controls or the warranty will be void.
4. Only trained and authorized personnel should operate the lift. Do not allow customers or bystanders to operate the lift or be in the lift area.
5. Position the lift support pads to contact the vehicle manufacturer's recommended lifting points. Raise the lift until the pads contact the vehicle. Check pads for secure contact with the vehicle, then raise the lift to the desired working height.
6. Some pickup trucks may require an optional truck adapter to clear running boards or other accessories.

NOTE: Always use all 4 arms to raise and support vehicle.

7. **Caution! Never work under the lift unless the mechanical safety locks are engaged.**
8. Note that the removal or installation of some vehicle parts may cause a critical load shift in the center of gravity and may cause the vehicle to become unstable. Refer to the vehicle manufacturer's service manual for recommended procedures.
9. Always keep the lift area free of obstruction and debris. Grease and oil spills should always be cleaned up immediately.
10. Never raise vehicle with passengers inside.
11. Before lowering check area for any obstructions.
12. Before driving vehicle between the towers, position the arms to the drive-through position to ensure unobstructed clearance. Do not hit or run over arms as this could damage the lift and/or vehicle.
13. Before removing the vehicle from the lift area, position the arms to the drive-through position to prevent damage to the lift and /or vehicle.
14. Care must be taken as burns can occur from touching hot parts.
15. Do not operate equipment with a damaged cord or if the equipment has been dropped or damaged – until a qualified serviceman has examined it.
16. Do not let cord hang over table, bench or counter or come in contact with hot manifolds or moving fan blades.
17. If an extension cord is necessary, a cord with a current rating of two or more than that of the equipment should be used. Cords rated for less current than the equipment may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.
18. Always unplug the equipment from electrical outlet when not in use. Never use the cord to pull the plug from the outlet. Grasp plug and pull to disconnect.

2. SPECIFICATIONS

Capacity:
 Overall Width:
 Width Between Columns:
 Drive-Thru Width:
 Overall Height:
 Under Bar Clearance:
 Height to Lowered Lift Pads:
 Height to Raised Low Lift Pad:
 Height to Raised High Lift Pad:
 Retracted Arm Length:
 Extended Arm Length:
 Maximum Lifting Height:
 Lift Time:
 Power Requirements (Standard):

| | |
|----------------------------|---------|
| 11000 lbs. | 5000 kg |
| 140 3/4" | 3575mm |
| 120" | 3048mm |
| 106 1/2" | 2705mm |
| 144" | 3658mm |
| 140" | 3556mm |
| 5" | 127mm |
| 6 3/4" | 171mm |
| 9 3/4" | 248mm |
| 32 1/4" | 819mm |
| 51" | 1295mm |
| 78 1/4" | 1988mm |
| 45 seconds | |
| 230 Volts AC, 1 Ph., 60Hz. | |

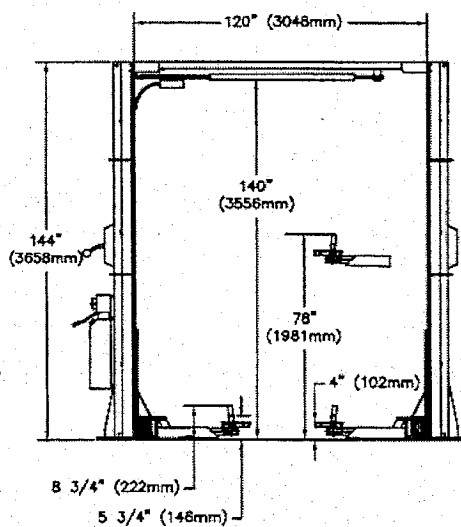


Figure 1

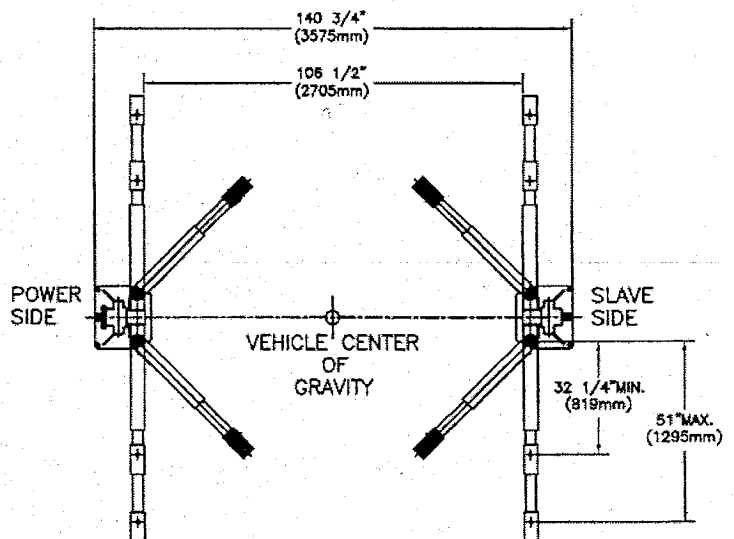


Figure 2

3. CONTENTS

The complete lift is contained in two (2) packages:

1. The **main structural components** are packed in a steel frame.
2. The remaining parts are packed in an **accessory box**.

Main Structural Components includes:

- 1pc. Power side tower and carriage assembly
- 1pc. Slave side tower and carriage assembly
- 1pc. Crossmember
- 1pc. Hydraulic line for crossmember

Accessory box contents:

- 4pcs. Locking arm ass'y w/arm pins
- 2pcs. Safety Covers w/Decals
- 1pc. Power Pack
- 1pc. Safety release cable assembly
- 1pc. Valve Block (C/W Fittings)
- 1pc. Safety shut-off microswitch assembly
- 1pc. Hardware package w/Packing List
- 1pc. Owner's manual
- 1pc. ALI manual "Lifting It Right"
- 1pc. Automotive Lift Safety Tips
- 1pc. Automotive Lift, Operation, Inspection and Maintenance manual
- 1pc. "ALI" Quick Reference Guide

4. INSTALLATION REQUIREMENTS AND TOOLS

IMPORTANT: It is the user's responsibility to provide a satisfactory installation area for the lift. Lifts should only be installed on level concrete floors with a minimum thickness of five (5) inches or 130 mm. Concrete must have a minimum strength of 4000 psi or 30 MPa and should be aged thirty (30) days prior to installation. Please consult the architect, contractor or engineer if doubt exists as to the strength and feasibility of the floor to enable proper lift installation and operation.

It is the user's responsibility to provide all wiring for electrical hook-up prior to installation and to insure that the electrical installation conforms to local building codes. Where required, it is the user's responsibility to provide an electrical isolation switch located in close proximity to the lift that will enable emergency stop capability and isolate electrical power from the lift for any servicing requirements.

Tools Required:

1. 16ft. Measuring Tape
2. Chalk Line
3. Rotary Hammer Drill
4. diameter Masonry Drill Bit
5. Hammer
6. SAE Wrenches and Ratchet Set
7. 2ft. Level
8. 4ft. Level
9. Crow Bar
10. One 12ft. Step Ladder
11. Side Cutters
12. Screwdrivers
13. 15ft. Bleeder Hose (Clear) w/ 3/8" JIC Swivel F fitting on one end
14. 4"x4" Wooden Blocks (for unpackaging)

5. INSTALLATION INSTRUCTIONS


When the lift arrives on site, please read the owner's manual and check for any freight damages. Also, check the contents to make sure no parts are missing before starting installation. Gather all the tools listed and make sure the installation instructions are fully understood before commencing installation.

UNPACKING PROCEDURE

1. **Important!** Place the main structural components on wooden blocks so that the steel frames can be removed.
2. Remove plastic wrapping.
3. Remove crossmember, and hydraulic line.
4. Remove steel frames.
5. Lay towers on floor with the carriage side up.
6. Check the installation area for obstructions. (Lights, Heating Ducts, Ceiling, Floor Drains...etc.)
7. Prepare the bay by selecting the location of the lift relative to the walls. Clear area of all packaging materials to avoid trip hazards. Draw a chalk line on the floor to represent the center line of the bay and a second chalk line crossing at 90° for locating the lift towers. Refer to **Figure 3**.

5.1 BAY LAYOUT

Figure 3

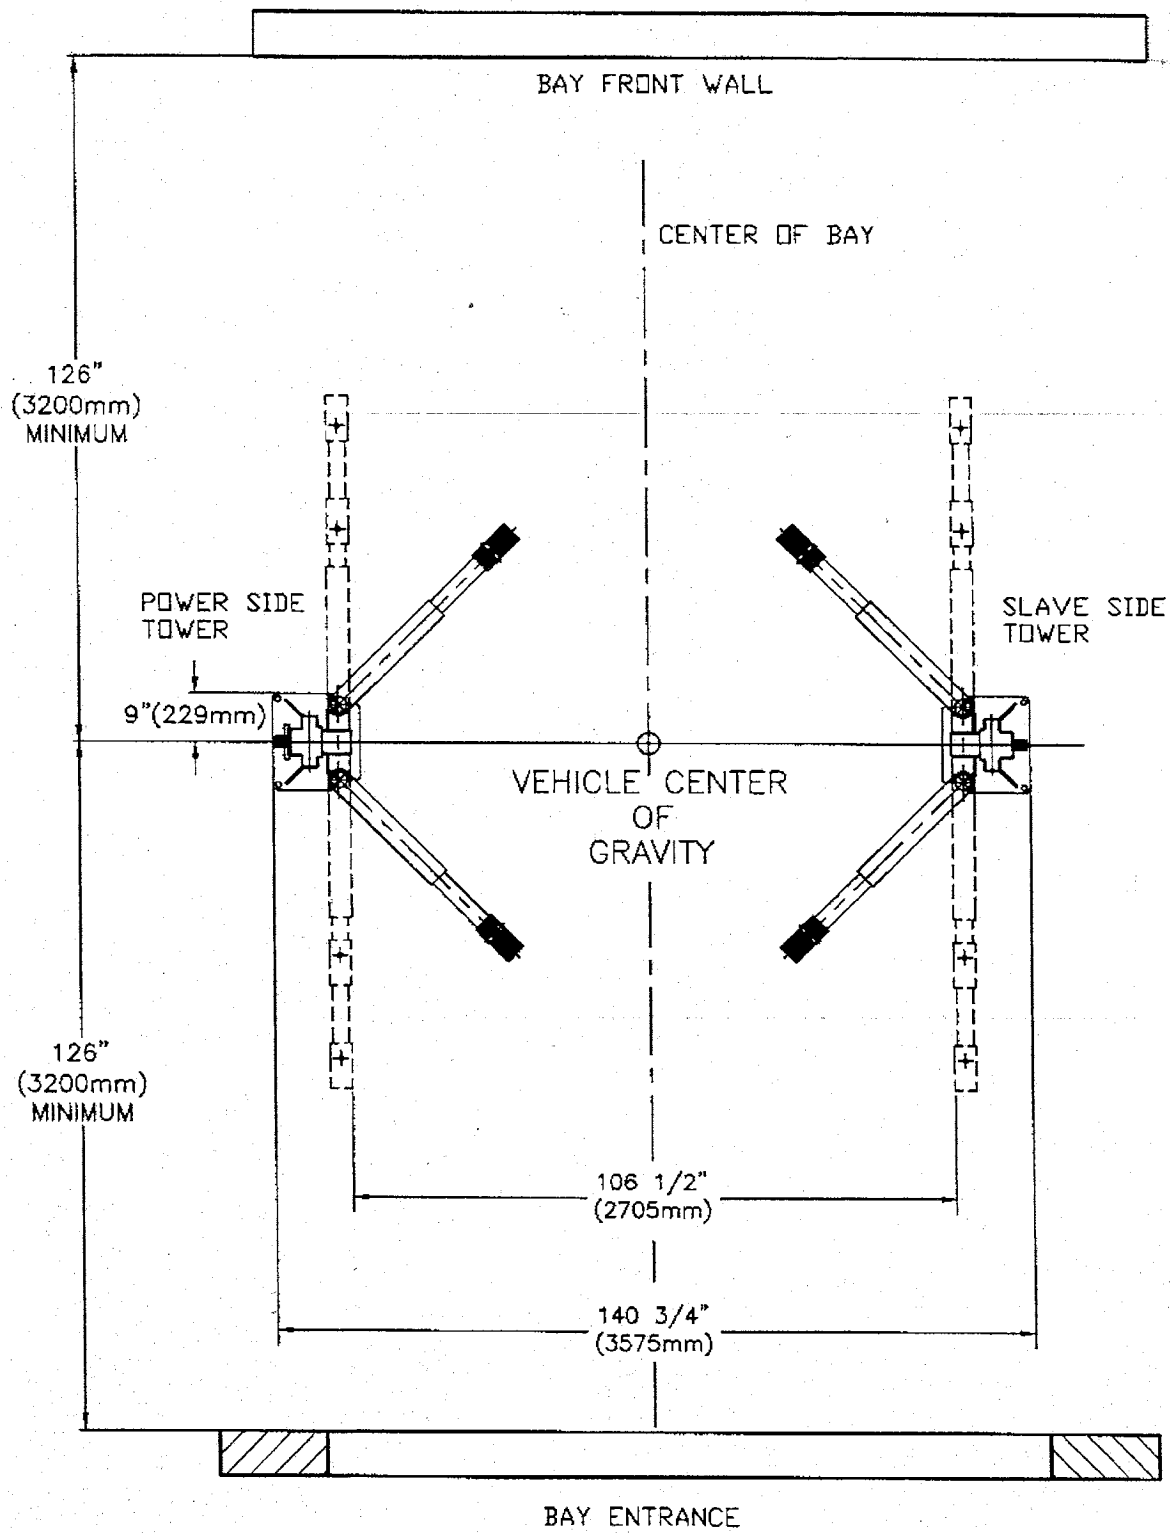


5.2 SAFETY SHUT-OFF BAR INSTALLATION

Note: The safety shut off will disconnect the power to the power pack when an obstruction touches the padded bar or the carriages reach their maximum extension. The safety shut off switch is factory pre-wired. Refer to Figure 4 and Figure 5.

Note: This procedure can be done on the floor.

1. Attach the actuator mounting bracket (1-1378) to the crossmember using hex head bolt 1/4" NC x 3/4" lg. bolt (6-0178), lockwasher 1/4" dia. (6-0056), and hex nut 1/4" NC (6-0032).
2. Attach the actuator bar assembly to the actuator mounting bracket assembly using hex head bolt 1/4" NC x 1 1/4" lg. (6-0027), lockwasher (6-0056), and hex nut 1/4" NC (6-0032).
3. Slide the safety shut-off microswitch assembly over open end of actuator bar and bolt the assembly to the crossmember using hex head bolt 1/4" NC x 3/4" lg. (6-0178), lockwasher (6-0056), and hex nut 1/4" NC (6-0032).
4. Bolt actuator extension (1-1379) onto open end of actuator bar using (2x) hex head bolt 1/4" NC x 1 1/4" lg. (6-0027), lockwasher (6-0056), and hex nut 1/4" NC (6-0032).

Figure 4

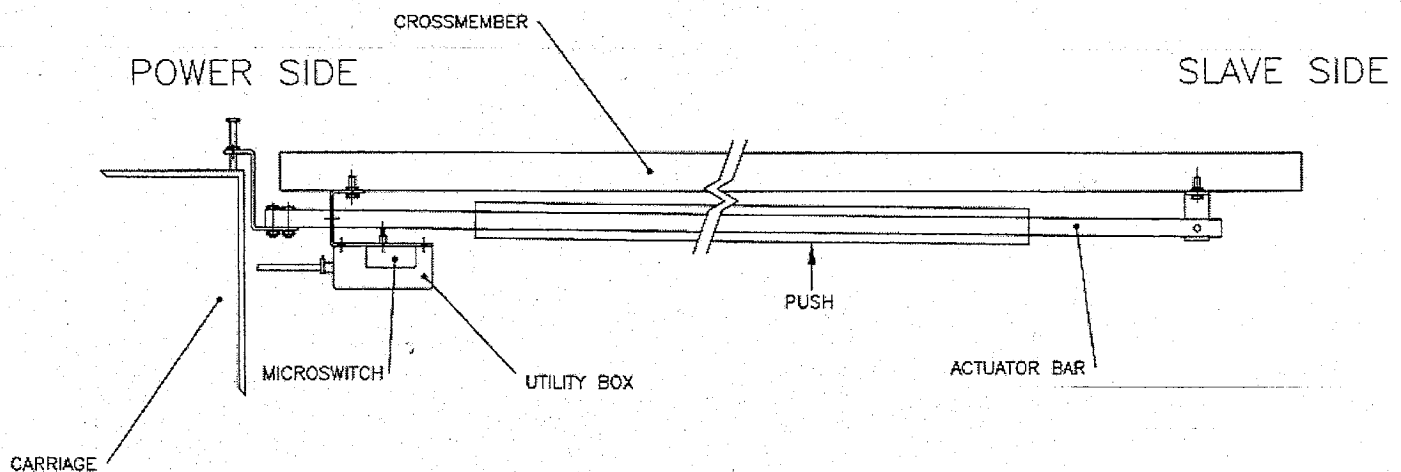


5.3 SAFETY SHUT-OFF BAR ADJUSTMENT

Note: This procedure must be done last.

1. When the lift is fully installed, leveled, and operational, extend the carriages to their full upper limit.
2. Lower the carriages about 1/4" to 1/2".
3. Adjust the stopper bolt by threading the upper nut towards the head, and the lower nut towards the bottom.
4. The bottom of the bolt should be touching the top of the carriage.
5. Tighten both stopper nuts onto the actuator bar extension.

Figure 5

POWER SIDE

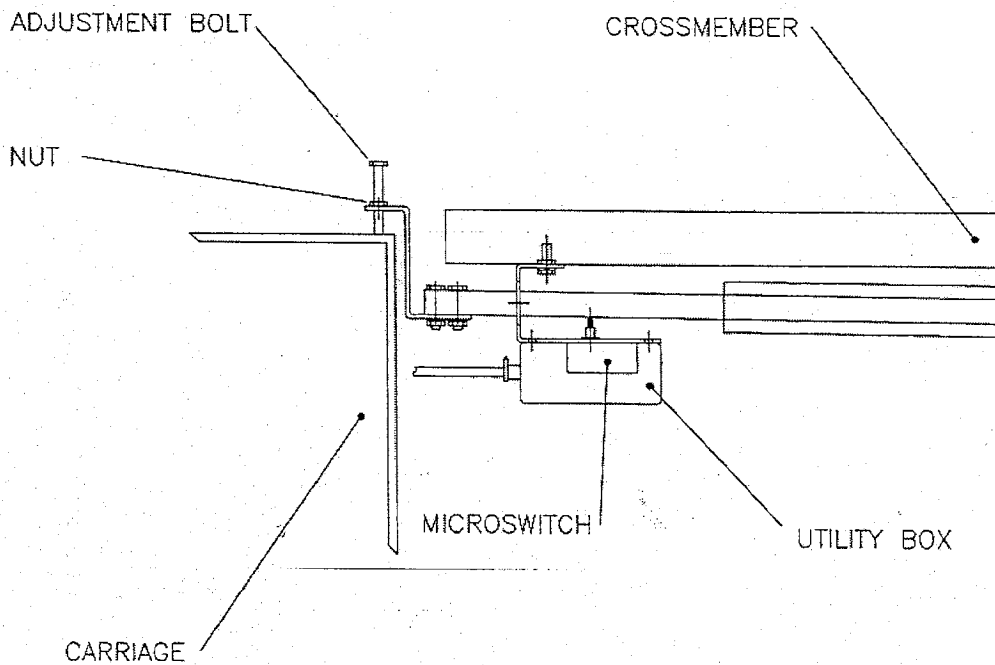

5.4 TOWER POSITIONING AND SETUP

1. Locate the power side and slave side tower to the relative position as shown on **Figure 3**. Double check all dimensions.
2. Using a step ladder, install the crossmember. Raise and place the crossmember mounting hooks over the top of the tower. Install and **tighten** the crossmember using four (4) 1/2"-13UNC x 1 1/2" LG. hex head bolts, flat washers, lockwashers and hex nuts.
3. Check the towers to make sure they are located, and positioned in the correct location. Refer to **Figure 3**.


5.5 ARM INSTALLATION

1. Remove (4) 5/16"-18UNC x 3/4"LG. hex head bolts that are locking the arm pins to the arm. Install arms to carriages. Install so that the shorter arms (with the 30° bend) are on the front, and the long arms on the rear. Refer to **Figure 6**.
2. Grease and insert arm pins. Align notch on arm pins to the tapped hole on the arm. Using the 5/16" hex head bolts removed in previous step, reinstall and tighten securely.

NOTE: Arm locking device to be installed in Section 5.13.

ARM INSTALLATION

Figure 6

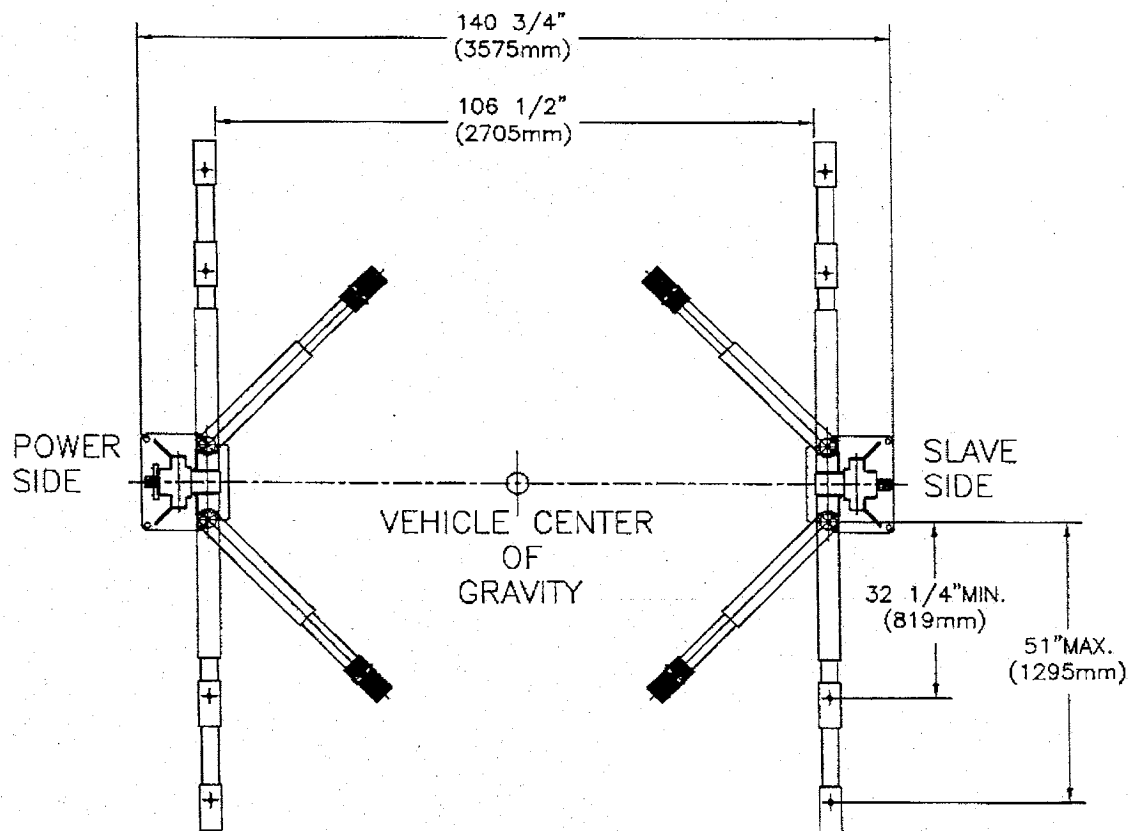


5.6 POWER PACK INSTALLATION

1. Remove the **red** plastic cap located at the rear of the power pack, and install the 90° fitting (page 28, item 18) located in the hardware kit.
2. Bolt power pack to the mounting bracket on the power side tower using four (4) 5/16"-18UNC x 1"LG. hex head bolts, lock washers, flat washers and nuts. Do not tighten.
3. A **certified electrician** must connect the 230Volt/Single phase power to the motor. The electrical diagram is provided, refer to **Figure 8**.


POWER PACK DETAILS

Figure 7

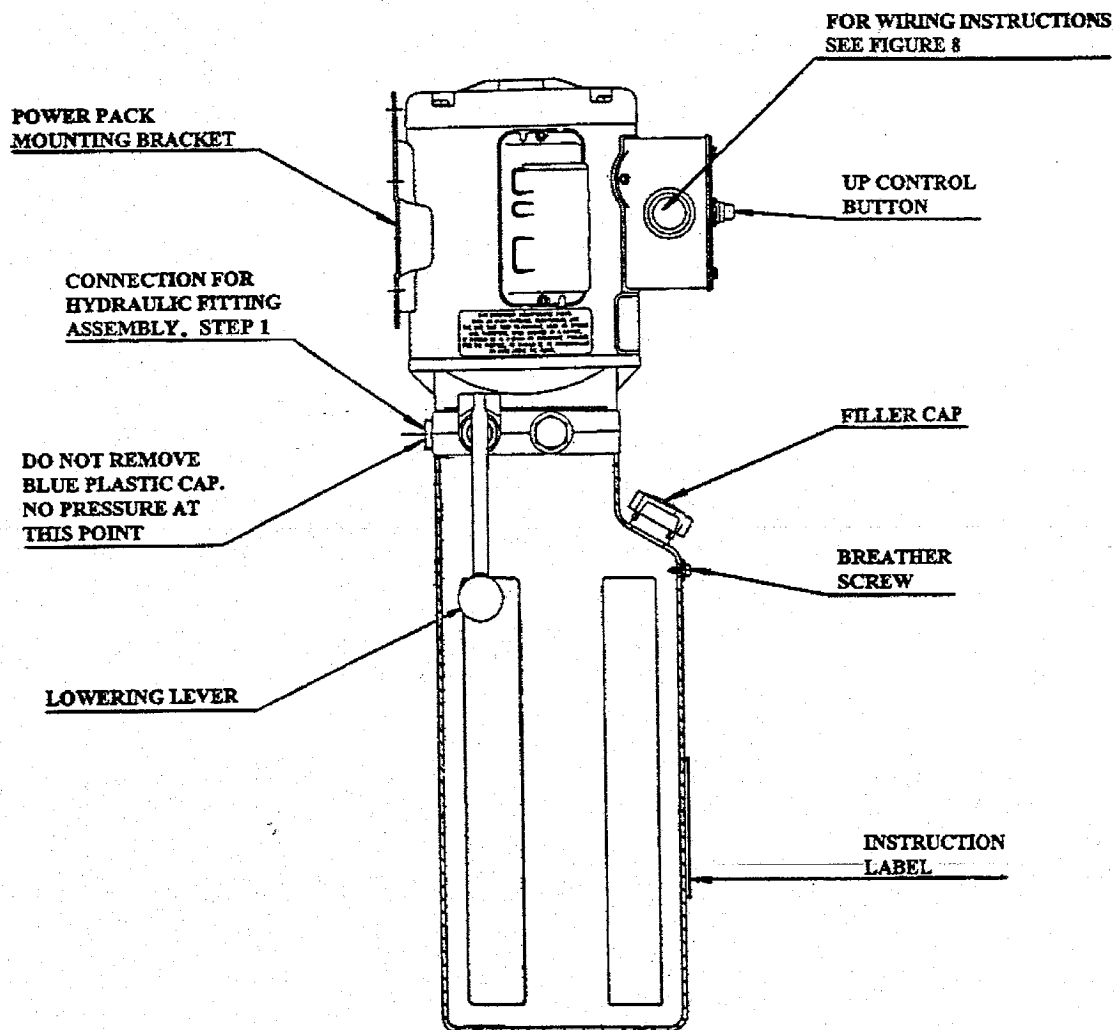


ELECTRICAL DIAGRAM

Figure 8

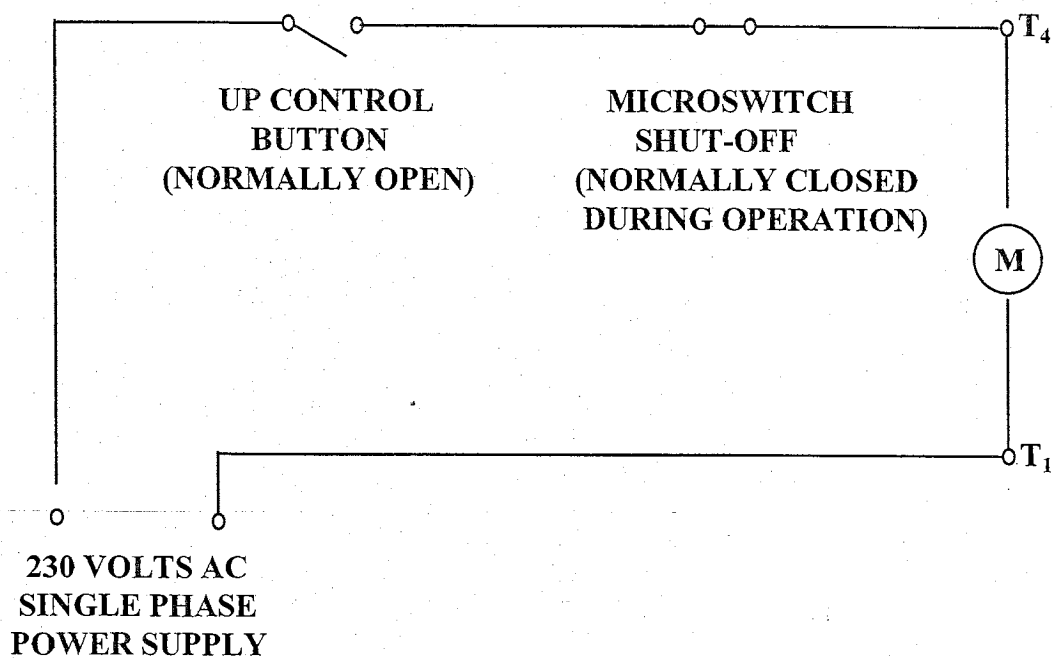

HYDRAULIC SYSTEM CONNECTIONS

Figure 9

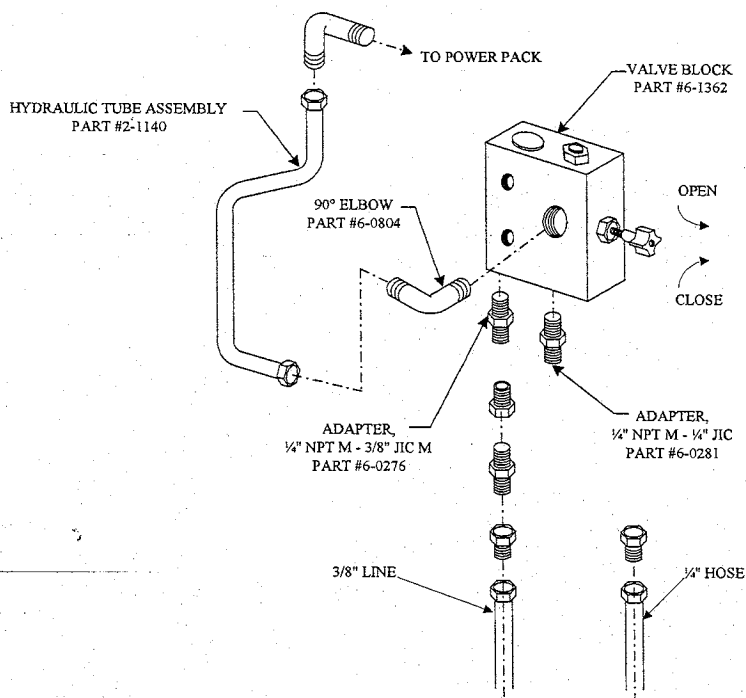

5.7 HYDRAULIC SYSTEM INSTALLATION


Refer to **Figure 9** and **10**, and page 28 on the Hydraulic System Part List.

Note: Save hydraulic caps and plugs for future use.

1. Do not tighten any hydraulic fittings until all connections have been made.
2. Remove plug from item 17. Install item 17 (page 28) to the 90° fitting on the power pack (item 18).
3. Install the valve block to the power side tower using items 23 & 5.
4. On the power side cylinder, remove the cap off item 28 at the bottom rear and install item 27.
5. Attach item 27 to item 53 on the valve block.
6. At the bottom of the power side cylinder, remove the 1/4" cap from item 25 and attach it to item 51 on valve block.
7. Attach the other end of item 17 to the 90° fitting (item 18) on the valve block.
8. Remove the two caps on item 39 and place it in the crossmember. Connect the slave side end of this line to a bulkhead fitting (item 1) attached to the hydraulic line (item 6).
9. Connect the power side end to the bulkhead fitting (item 1) attached to the hydraulic line (item 30).
10. TIGHTEN ALL HYDRAULIC CONNECTIONS.
Caution: Over tightening could cause the flare seal to break.
11. Remove filler cap from power pack, and fill reservoir with 3.5 Gal. (13.2 L) of ISO32 hydraulic oil (10 weight hydraulic oil). Remove breather screw when filling and replace when full. Refer to **Figure 7**.

HYDRAULIC SYSTEM SCHEMATIC

Figure 10

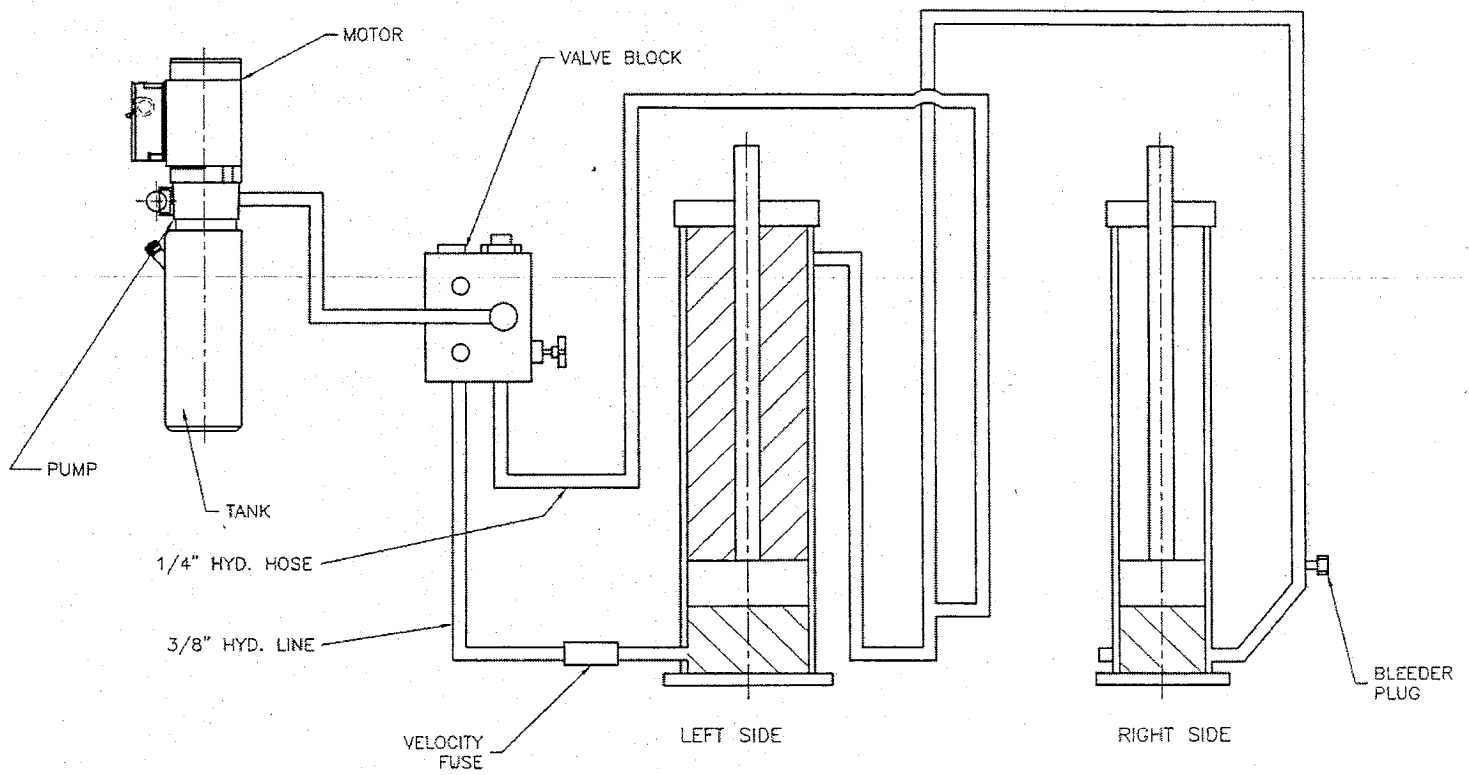

5.8 SAFETY RELEASE CABLE ROUTING AND ADJUSTMENT

The mechanical safety automatically engages. To release the mechanical safety, you must first raise the lift approximately 2", then pull the safety release lever down. This disengages the power side safety dog and activates the safety cable to release the slave side safety dog.

1. Refer to **Figure 11** for safety release cable routing. The cable end which has a collar belongs to the slave side tower. The threaded end belongs to the power side tower.
2. Start routing from the slave side of crossmember. Feed the cable over the small pulley, then guide the cable down along the inside of the slave side roll formed tower channel. Pull the cable out through the opening in the back of the slave side tower near the safety dog.
3. Guide the cable up under the pulley towards the end of the safety dog. Use a 1/4" shoulder bolt to mount the collar end of the cable to the safety dog. Tighten the shoulder bolt securely.
4. Repeat step 2 for the power side tower.
5. Install one 1/4"-20unc hex nut on the threaded end of the cable. Feed the threaded end of the cable through the hole in the bracket attached at the end of the safety dog. Install another 1/4"-20unc hex nut as shown in **Figure 12**. **Do not tighten at this stage.**
6. Install safety release handle onto the power side safety dog. Lock into position using one 1/2"-13unc hex nut.
7. Adjust the safety release cable on the power side mechanism by loosening the two
8. hex nuts so that the cable lengths can be adjusted. Adjust cable lengths so that both safety dogs travel from full engagement position to full release position when the safety
9. release handle is pulled. **Tighten both hex nuts against the bracket firmly when adjustment is completed.**

SAFETY RELEASE CABLE ROUTING AND ADJUSTMENT

Figure 11


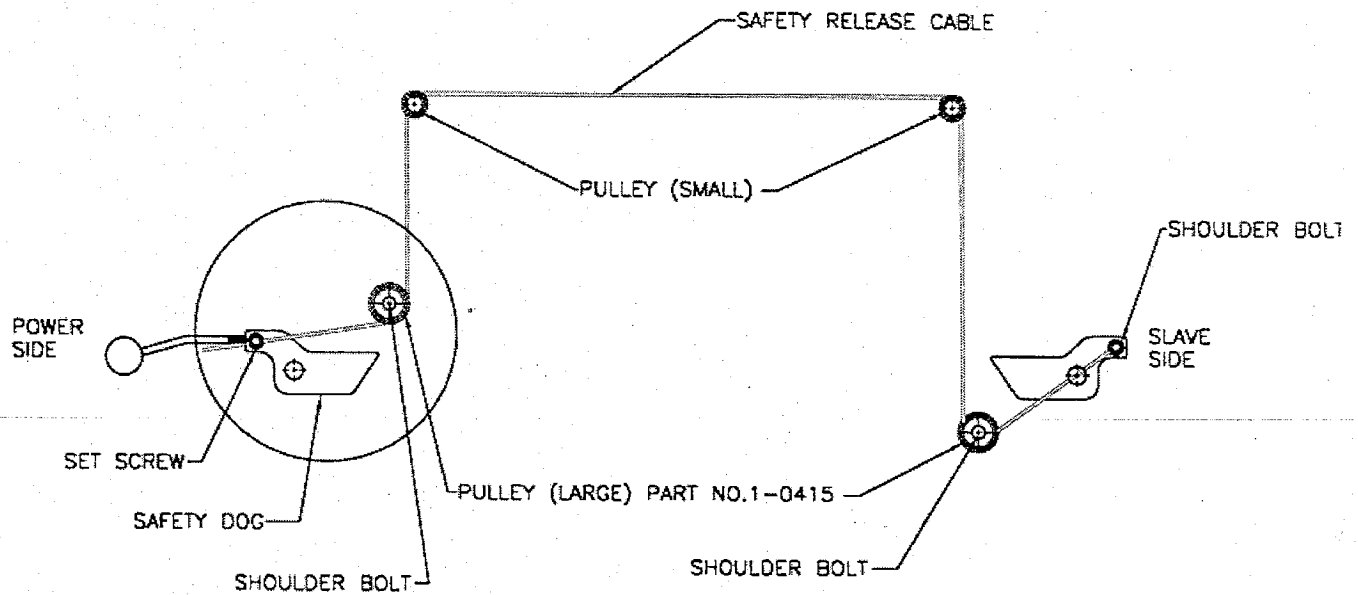


Figure 12

POWER
SIDE

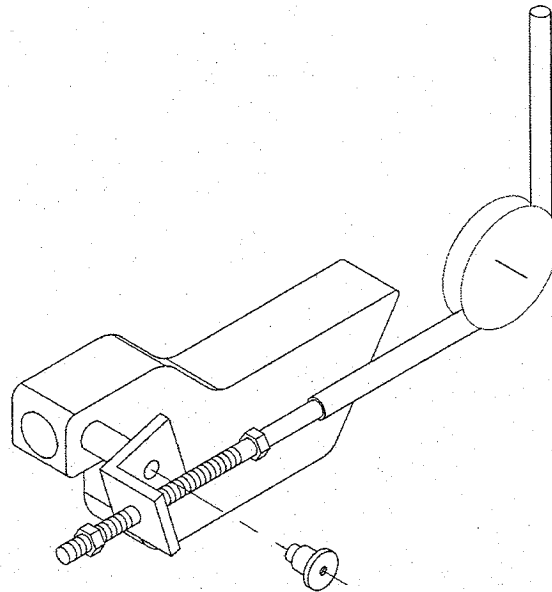

5.9 HYDRAULIC SYSTEM BLEEDING AND LEVELING PROCEDURE

1. Ensure that both carriages are fully lowered.
2. Remove the bleeder cap from the "T" fitting at the bottom of the slave side cylinder.
3. Attach a 15ft. clear bleeding hose to the same fitting, and place the open end of the hose into the power pack's reservoir's filler neck or in a container in which the oil came in for reuse. Hose should be secured during the bleeding procedure.
4. Close the by-pass valve, and power up until the power side carriage reaches the carriage stops.
5. Open the by-pass valve, and power up until oil is seen flowing out of the bleeder hose. (No Air Bubbles). Bleed at least 1 gal. of hydraulic fluid through the system.
6. Remove the bleeding hose and reinstall the bleeder cap. Replace breather/filler cap.
7. Power up until slave side carriage reaches the carriage stops.
8. Close the by-pass valve and lower lift (both sides) until both carriages are fully collapsed. Power up and lower (14") lift a few times. When lift is fully down, open the by-pass valve and raise the slave side 2-3" higher than the power side. Close the by-pass valve.
9. Power up, and lower lift onto the first safety, on the power side. Open the by-pass valve and lower slave side onto the same first safety. Close the by-pass valve. Lift is now synchronized hydraulically.
10. Both power and slave sides must be completely down.
11. Check and add hydraulic fluid to power pack before cycling lift.
12. Install safety covers, and safety release lever knob. Securely.
13. Set up a vehicle on the lift after anchoring to make sure hydraulics are operating properly.

5.10 HYDRAULIC ADJUSTMENT PROCEDURE

Important! Should your lift come out of synchronization, i.e. one carriage is higher than the other, it is necessary to level the lift hydraulically.

When **slave** side is **higher** than the power side:

1. Lower lift on to the first safety on the power side.
2. Open by-pass valve. Push the down control lever. This will cause the slave side carriage to be lowered. Stop lowering when the slave side carriage stops on the first safety.

When **power** side is **higher** than the slave side:

1. Open the by-pass valve, raise lift until the slave side carriage is approximately 1-2" higher than the power side carriage. Stop raising and close by-pass valve.
2. Lower lift by pushing the down control lever. Stop lowering when the power side carriage touches the first safety.
3. Next, open the by-pass valve. Push the down control lever so that the slave side carriage lowers. Stop lowering when the slave side carriage touches the first safety. Close the by-pass valve.




5.11 TOWER POSITIONING AND ANCHORING

WARNING! Failure to follow these instructions may cause an unsafe operating condition.

WARNING! Before proceeding with installation, review Section 4: Installation & Tools.

1. Using a 4ft. level on top of the crossmember, determine which column is higher (Fig. 13).
2. Using 2 ft. level on the sides of the high column, ensure that the column is level in the vertical position (Fig. 14). Use shims under the column baseplate to hold the column level. Ensure that the base plate is completely supported by shims where it does not contact the floor (Fig. 15).

WARNING! Do not use more than $\frac{1}{2}$ " (13mm) of shims. Anchor bolts supplied allow for a maximum of $\frac{1}{2}$ " (13mm) of shim. If more than $\frac{1}{2}$ " (13mm) of shims are required, **DO NOT** proceed with installation and contact Product Manufacturer / Supplier for further details.

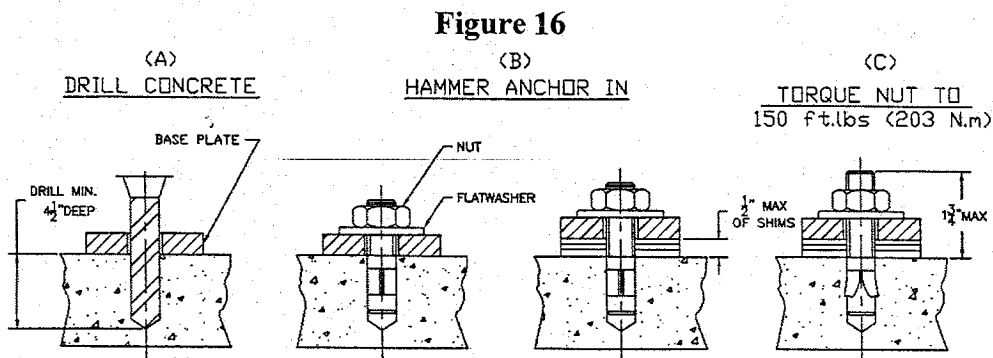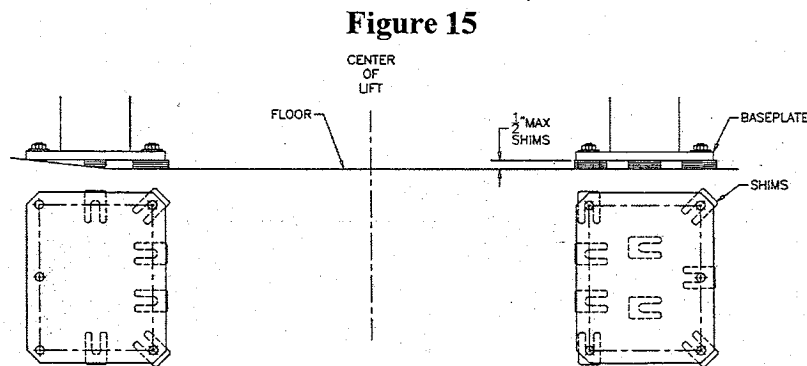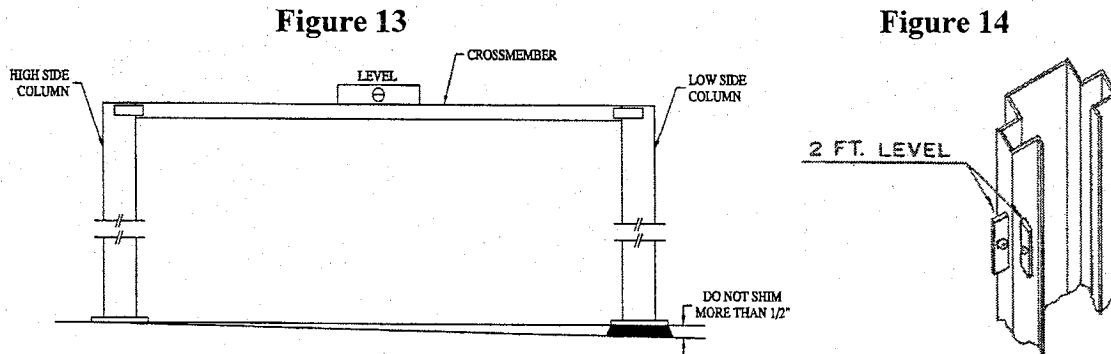

3. Refer to Bay Layout (**Fig. 3**) to ensure that the column is still in the proper position. Using a rotary hammer drill with a 3/4" masonry drill bit, drill holes in the floor on the high side column using the tower baseplate as a template. Make sure that the 3/4" masonry drill is in good condition (**Fig 16 (A)**).
4. Carefully clean out drilling dust from the anchor holes. Hammer in the anchor bolts (**Fig. 16(B)**). Hand tighten all anchor bolts.
5. Reconfirm that the column is level front to rear and side to side (**Fig. 14**). Add or remove shims as required.
6. Torque all anchor bolts to 150 ft-lbs. (203 Nm), continually checking that the column is level as you proceed. If anchor bolts do not tighten to 150 ft-lbs. OR project more than 1 3/4" above the concrete surface (**Fig 16(C)**), the concrete MUST be replaced by an appropriate concrete pad. (*Consult Product Manufacturer / Supplier for further details*).

5.12 SHIMMING OF THE REMAINING TOWER

1. Using a 4ft. level on the crossmember (**Fig. 13**) and a 2ft. level on the low side column(**Fig.14**), shim underneath the baseplate until the crossmember and column are level. Ensure that the baseplate is completely supported by shims where it does not contact the floor (**Fig 15**).

WARNING! *Do not use more than 1/2" (13mm) of shims. Anchor bolts supplied allow for a maximum of 1/2" (13mm) of shim. If more than 1/2" (13mm) of shims are required, DO NOT proceed with installation and contact Product Manufacturer / Supplier for further details.*

2. Refer to Bay Layout (**Fig. 3**) to ensure that the column is still in the proper position. Using a rotary hammer drill with a 3/4" masonry drill bit, drill holes in the floor on the low side column using the column baseplate as a template. Make sure that the 3/4" masonry drill is in good condition (**Fig 16 (A)**).
3. Carefully clean out drilling dust from the anchor holes. Hammer in the anchor bolts (**Fig. 16(B)**). Hand tighten all anchor bolts.
4. Reconfirm that the crossmember is level (**Fig. 13**) and that the column is level front to rear and side to side (**Fig. 14**). Add or remove shims as required.
5. Torque all anchor bolts to 150 ft-lbs. (203 Nm), continually checking that the crossmember and column are level as you proceed. If anchor bolts do not tighten to 150 ft-lbs. OR project more than 1 3/4" above the concrete surface (**Fig 16(C)**), the concrete MUST be replaced by an appropriate concrete pad. (*Consult Product Manufacturer / Supplier for further details*).
6. Verify that the entire lift is level both horizontally and vertically to ensure optimum lifting performance.


***Perform a monthly inspection and torque all anchor bolts to 150 ft-lbs. (203 Nm).**

1.13 ARM LOCKS ADJUSTMENT

The arm locks are designed to automatically engage when the lift is raised and disengage when the lift is fully lowered. To adjust, refer to **Figure 17**.

ARM LOCK ADJUSTMENT


Figure 17

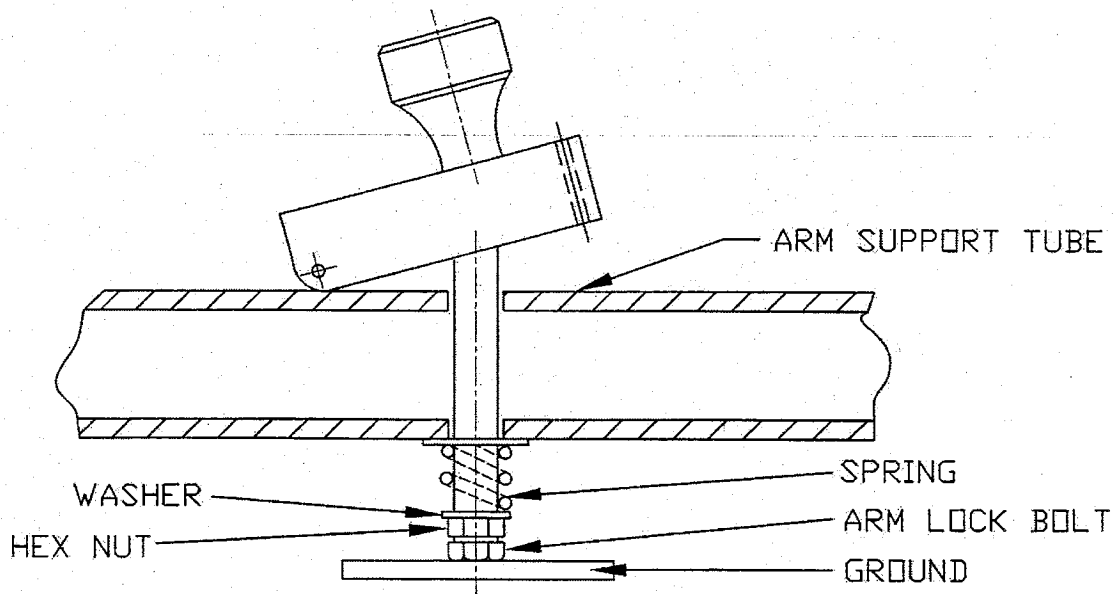

6. PERIODIC MAINTENANCE

1. Inspect lift daily, to assure the mechanical safety is operating properly.
2. Check the telescopic arms for movement. Clean any grease or oil from the lifting adapters.
3. Raise and lower the lift at the beginning of each shift, without a vehicle on, to verify the lift is leveled and operating properly. Perform hydraulic leveling procedure when the lift is out of level.
4. Lubricate safety dog mechanisms with penetrating oil monthly.
5. Grease arm pins supports monthly.
6. Check hydraulic fittings for tightness.
7. Annual lift inspection as per Automotive Lift Operation, Inspection and Maintenance (ALOIM).
8. Apply a small amount of grease to glide bearing tracks periodically.
9. Check bolts on the carriage stops for tightness. Note: The carriage stop on the slave side tower should have the thicker side facing downwards, and on the power side facing upwards. Refer to **Figure 18**.


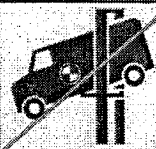
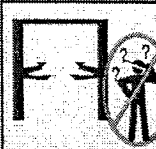






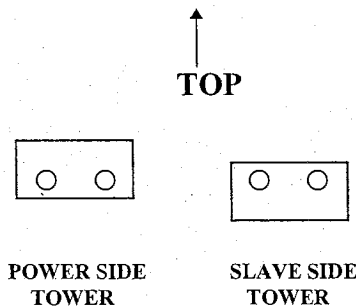



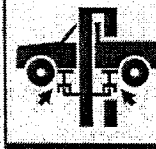
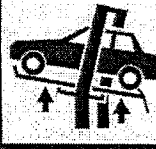
Figure 18



10. Check lift for synchronization periodically.
11. Change hydraulic oil every two years.


NOTE: If lift locks while in the fully raised position this will indicate that the hydraulic system has not been inspected or maintained as recommended. This is a safety back-up system. If you are unclear call your local representative immediately.

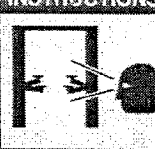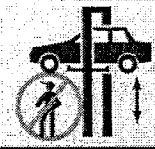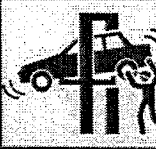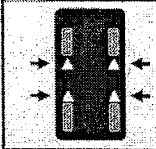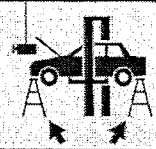7. SAFETY AWARENESS - AUTOMOTIVE LIFT INSTITUTE (ALI)

| | | | | | |
|---|---|---|---|---|---|
| ⚠ WARNING  Clear area if vehicle is in danger of falling. | ⚠ WARNING  Position vehicle with center of gravity midway between adapters. | ⚠ CAUTION  Lift to be used by trained operator only. | ⚠ CAUTION  Authorized personnel only in lift area. | SAFETY INSTRUCTIONS  Read operating and safety manuals before using lift. | SAFETY INSTRUCTIONS  Proper maintenance and inspection is necessary for safe operation. |
| ⚠ WARNING  Remain clear of lift when raising or lowering vehicle. | ⚠ WARNING  Avoid excessive rocking of vehicle while on lift. | ⚠ CAUTION  Use vehicle manufacturer's lift points. | ⚠ CAUTION  Always use safety stands when removing or installing heavy components. | SAFETY INSTRUCTIONS  Do not operate a damaged lift. | <p>The photographs and pictographs shown are generic in nature and are meant to generally represent hazards common to all automotive lifts regardless of specific style.</p> <p>Funding for the development and validation of these labels was provided by the Automotive Lift Institute, P.O. Box 33118, Indianapolis, IN 46233-0118. They are protected by copyright. Set of labels may be obtained from ALI or its member companies.</p> <p>© 2007 ALI, Inc. ALI 001-001</p> |
| ⚠ WARNING  Do not override self-closing lift controls. | ⚠ WARNING  Keep feet clear of lift while lowering. | ⚠ CAUTION  Use height extenders when necessary to ensure good contact. | ⚠ CAUTION  Auxiliary adapters may reduce load capacity. | | |

Warning Labels for 2-post surface mounted lifts. Daily review of these Safety Messages and Warnings is suggested.

TWIN POST PARTS LIST

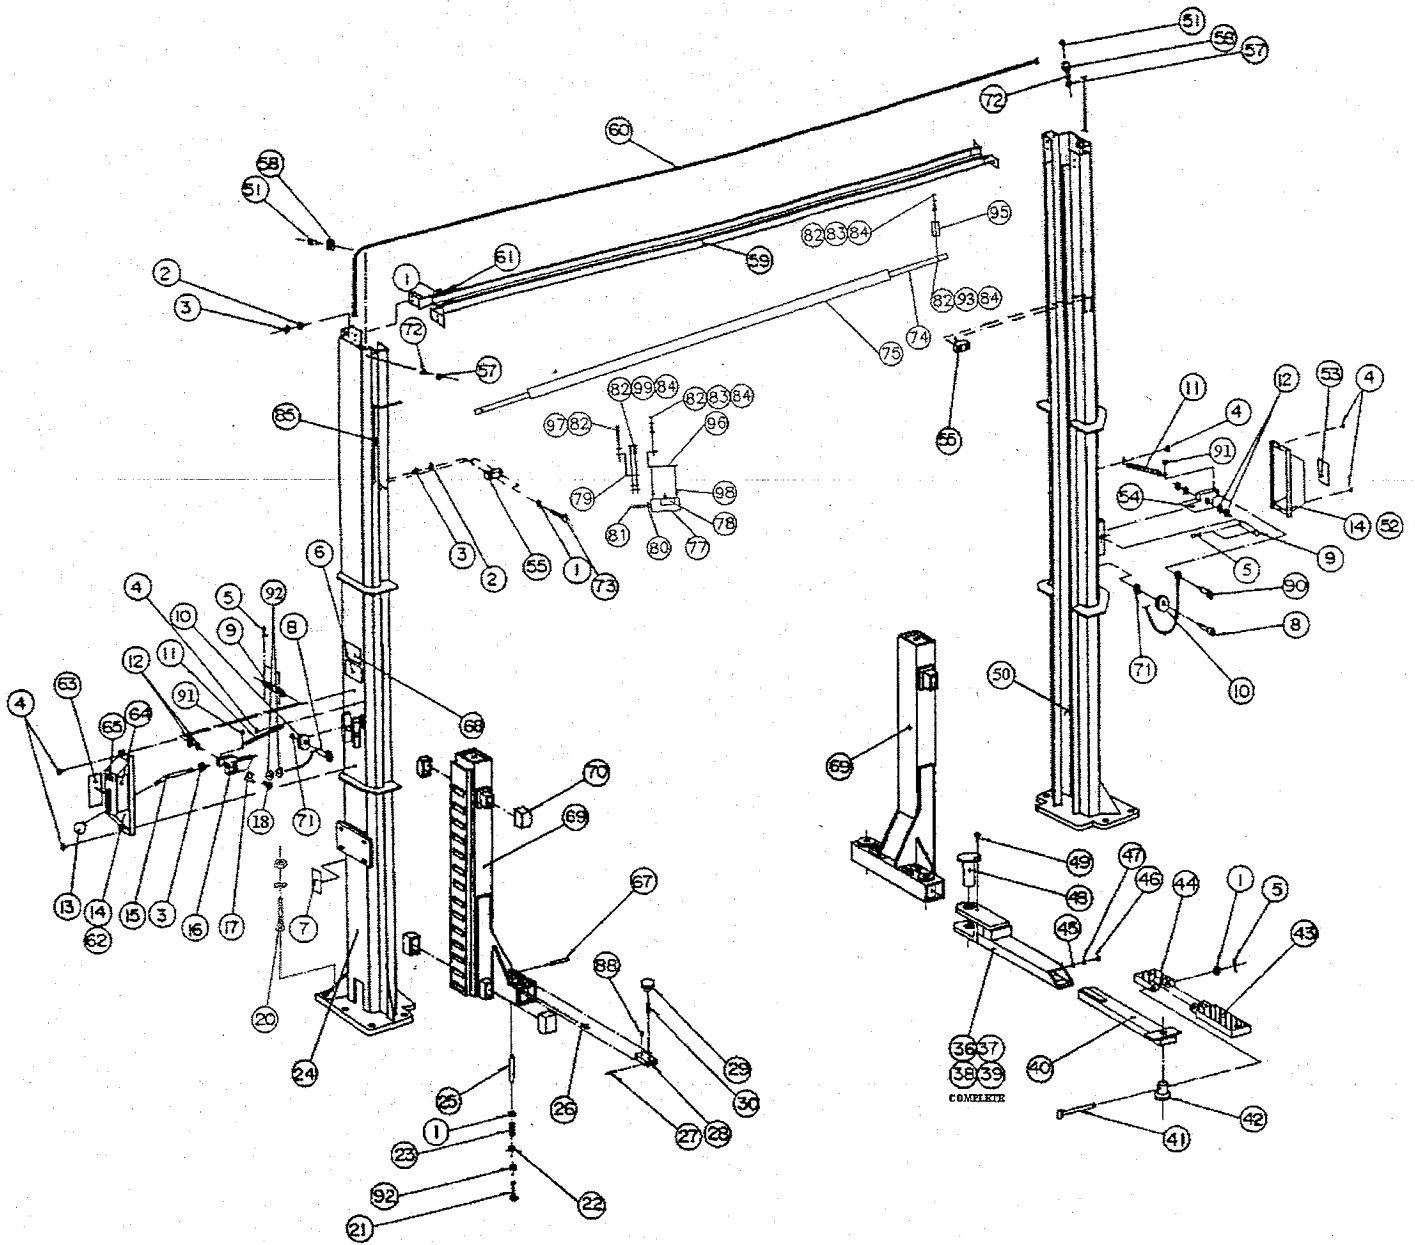


TWIN POST PART LIST

| ITEM | QTY. | DESCRIPTION | PART # |
|------|------|---|--------|
| 1 | 24 | FLAT WASHER, 1/2"ID SAE | 6-0248 |
| 2 | 16 | LOCKWASHER, 1/2"ID | 6-0059 |
| 3 | 17 | HEX NUT, 1/2"-13UNC | 6-0035 |
| 4 | 6 | SELF TAPPING SCREW, #12 x 1/2"LG. | 6-1134 |
| 5 | 8 | COTTER PIN, 1/8"DIA. x 1"LG. | 6-0267 |
| 6 | 1 | ALI/ETL DECAL | 6-0996 |
| 7 | 1 | "HYDRAULIC LEVELING " DECAL | 6-1583 |
| 8 | 2 | SHOULDER BOLT, 3/8"DIA. x 1"LG. | 6-0206 |
| 9 | 2 | SAFETY PIN | 1-0938 |
| 10 | 2 | SAFETY PULLEY | 1-0415 |
| 11 | 2 | SAFETY SPRING | 1-1115 |
| 12 | 8 | FLAT WASHER, 5/16"ID x 1"OD x 1/16"THK. | 6-0808 |
| 13 | 1 | PLASTIC KNOB | 6-1135 |
| 14 | 2 | SAFETY COVER | 3-0439 |
| 15 | 1 | SAFETY RELEASE HANDLE | 1-1113 |
| 16 | 1 | SAFETY DOG, POWER SIDE | 2-0902 |
| 17 | 1 | CABLE CONNECTING BRACKET | 1-1291 |
| 18 | 4 | COTTER PIN, 1/8" x 2"LG. | 6-0115 |
| 20 | 10 | WEDGE ANCHOR, 3/4"-10UNC x 5 1/2"LG. (c/w washers & nuts) | 6-1379 |
| 21 | 4 | HEX BOLT, 1/4"-20UNC x 2"LG. | 6-0741 |
| 22 | 4 | 1/4"ID FENDER WASHER | 6-0626 |
| 23 | 4 | PLUNGER SPRING | 1-0939 |
| 24 | 1 | TOWER WELDMENT, LEFT SIDE | 4-0612 |
| 25 | 4 | PIVOT PLUNGER | 1-0745 |
| 26 | 4 | GREASE FITTING | 6-0000 |
| 27 | 4 | ROLL PIN, 1/8"DIA. X 1"LG. | 6-0437 |
| 28 | 4 | RACK | 2-0249 |
| 29 | 4 | KNOB | 1-0208 |
| 30 | 4 | THREADED ROD, 3/8"-16UNC x 1 1/2"LG. | 1-1135 |
| 36 | 2 | LONG OUTER ARM TUBE WELDMENT, F.L., R.R. | 3-0657 |
| 37 | 2 | LONG OUTER ARM TUBE WELDMENT, F.R., R.L. | 3-0656 |
| 38 | 2 | LONG LOCKING ARM ASSEMBLY, F.L., R.R. | 4-0616 |
| 39 | 2 | LONG LOCKING ARM ASSEMBLY, F.R., R.L. | 4-0617 |
| 40 | 4 | LONG INNER ARM WELDMENT | 2-1273 |
| 41 | 4 | CENTER PIN | 1-1099 |
| 42 | 4 | ADAPTER PIN | 1-1091 |
| 43 | 4 | HIGH STEP POSITION ADAPTER | 3-0582 |
| 44 | 4 | LOW POSITION ADAPTER | 3-0583 |
| 45 | 4 | FLATWASHER, 3/8"ID. | 6-0062 |
| 46 | 4 | HEX BOLT, 3/8"-16UNC x 3/4"LG. | 6-0030 |
| 47 | 4 | LOCKWASHER, 3/8"ID. | 6-0058 |
| 48 | 4 | ARM PIN WELDMENT | 2-0929 |

| ITEM | QTY. | DESCRIPTION | PART # |
|------|------|-------------------------------------|--------|
| 49 | 4 | HEX BOLT, 5/16"-18UNC x 3/4"LG. | 6-0423 |
| 50 | 1 | TOWER WELDMENT, RIGHT SIDE | 4-0611 |
| 51 | 2 | SHOULDER BOLT, 3/8"DIA. x 5/8"LG. | 6-0069 |
| 52 | 1 | SAFETY COVER w/DECALS, SLAVE SIDE | 0-0203 |
| 53 | 1 | "SAFETY INSTRUCTIONS" DECAL | 6-0594 |
| 54 | 1 | SAFETY DOG, SLAVE SIDE | 2-0872 |
| 55 | 4 | CARRIAGE STOP | 1-1119 |
| 57 | 2 | HEX NUT, 5/16"-18UNC | 6-0294 |
| 58 | 2 | SAFETY CABLE PULLEY | 1-1116 |
| 59 | 1 | CROSSMEMBER WELDMENT | 2-1281 |
| 60 | 1 | SAFETY RELEASE CABLE, 293 1/2"LG. | 1-1551 |
| 61 | 8 | HEX BOLT, 1/2"-13UNC x 1 1/4"LG. | 6-0046 |
| 62 | 1 | SAFETY COVER w/DECALS, POWER SIDE | 0-0204 |
| 63 | 1 | "WARNING" DECAL | 6-0595 |
| 64 | 1 | "CAUTION" DECAL | 6-0592 |
| 65 | 1 | "SAFETY RELEASE" DECAL | 6-0603 |
| 67 | 4 | PIVOT PIN | 1-0333 |
| 68 | 1 | SERIAL # TAG | 6-1172 |
| 69 | 2 | CARRIAGE WELDMENT | 4-0613 |
| 70 | 8 | GLIDE BEARING | 2-0772 |
| 71 | 2 | FLAT WASHER, 5/16" I.D. | 6-0295 |
| 72 | 2 | LOCKWASHER, 5/16" I.D. | 6-0296 |
| 73 | 8 | HEX BOLT, 1/2" - 13UNC x 2 1/4"LG. | 6-0315 |
| 74 | 1 | ACTUATOR BAR | 1-1439 |
| 75 | 1 | FOAM GUARD | 6-1404 |
| 77 | 1 | ELECTRICAL UTILITY BOX | 6-1403 |
| 78 | 1 | MICROSWITCH | 6-0916 |
| 79 | 1 | ACTUATOR EXTENSION | 1-1379 |
| 80 | 1 | CABLE CONNECTOR | 6-1133 |
| 81 | 1 | ELEC. CABLE 12/3 x 117"LG. SOW | 6-1173 |
| 82 | 7 | HEX HD. NUT 1/4"NC | 6-0032 |
| 83 | 3 | HEX HD. BOLT, 1/4"NC x 3/4"LG. | 6-0178 |
| 84 | 6 | LOCKWASHER 1/4" DIA | 6-0056 |
| 85 | 3 | ELECTRICAL CABLE CLIP, 5/8" | 6-1759 |
| 88 | 4 | SET SCREW., 1/4"-20UNC X 1/2"LG. | 6-0438 |
| 90 | 1 | SHOULDER BOLT, 3/8"DIA. X 1 1/2"LG. | 6-0801 |
| 91 | 2 | SELF-TAPPING SCREW, #10 X 3/8"LG. | 6-0169 |
| 92 | 6 | HEX NUT, 1/4"NC | 6-0032 |
| 93 | 1 | HEX HD. BOLT, 1/4"NC X 1 1/2"LG. | 6-0205 |
| 95 | 1 | ACTUATOR MTG. BRACKET | 1-1378 |
| 96 | 1 | LIMIT SWITCH MTG. BRACKET | 2-1143 |
| 97 | 1 | HEX HD. BOLT 1/4" - 20UNC X 2"LG. | 6-0741 |
| 98 | 2 | 6/32 SCREW (ELECTRICAL BOX) | 6-1466 |
| 99 | 2 | HEX HD. BOLT, 1/4" NC x 1 1/4"LG. | 6-0027 |


TWIN POST HYDRAULICS

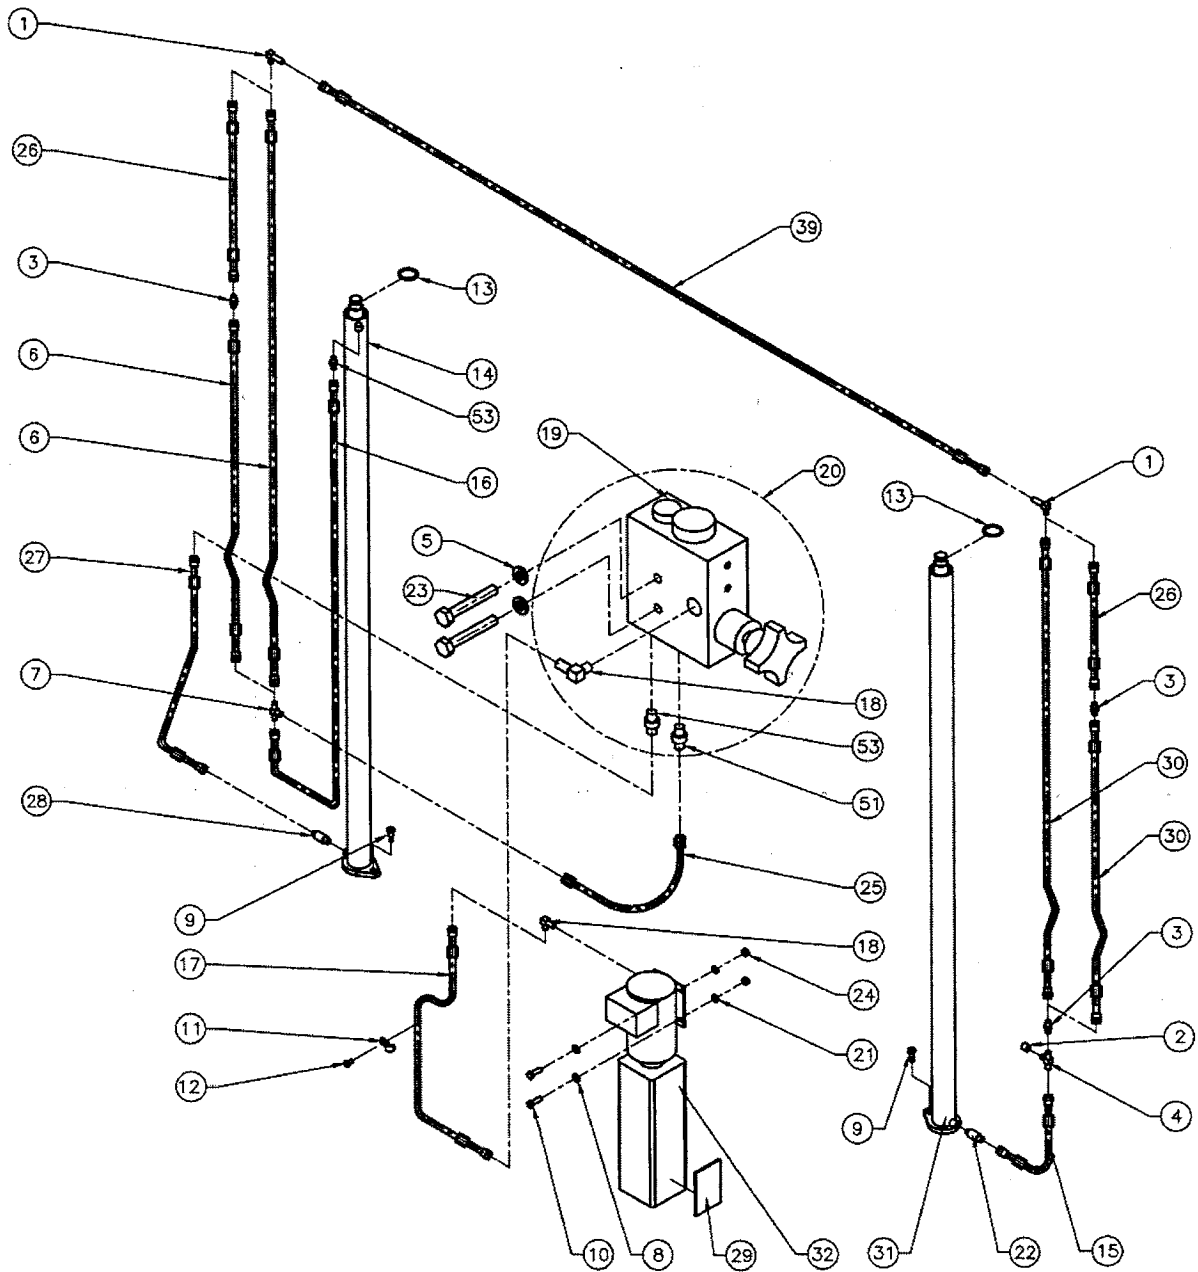

TWIN POST HYDRAULIC PART LIST

| ITEM | QTY. | DESCRIPTION | PART # |
|------|------|--|--------|
| 1 | 2 | ELBOW BULKHEAD 90°, 3/8"JIC-3/8"JIC | 6-0012 |
| 2 | 1 | CAP, 3/8"JIC | 6-0021 |
| 3 | 3 | UNION, 3/8"JIC MALE | 6-0286 |
| 4 | 1 | TEE, 3/8" SWIVEL NUT JIC MALE | 6-0284 |
| 5 | 2 | LOCKWASHER, 1/4" I.D. | 6-0056 |
| 6 | 1 | HYDRAULIC TUBE ASS'Y (2PC. TOWERS) | 2-0719 |
| | 1 | HYDRAULIC TUBE ASS'Y (12FT. TOWERS) | 2-0961 |
| | 1 | HYDRAULIC TUBE ASS'Y (14FT. TOWERS) | 2-1065 |
| 7 | 1 | BRANCH "T" JIC ALL ENDS | 6-1372 |
| 8 | 4 | FLAT WASHER, 5/16"ID | 6-0061 |
| 9 | 2 | SHOULDER BOLT, 1/2" x 5/8"LG. | 6-0425 |
| 10 | 4 | HEX BOLT, 5/16"-18UNC x 1"LG. | 6-0293 |
| 11 | 7 | TUBE CLAMP | 6-0170 |
| 12 | 7 | ROUND HD. BOLT, 1/4"-20UNC x 3/8"LG. | 6-1353 |
| 13 | 2 | CIRCLIP | 6-0340 |
| 14 | 1 | HYDRAULIC CYLINDER ASS'Y, LEFT SIDE | 4-0289 |
| 15 | 1 | HYDRAULIC TUBE ASS'Y | 1-0102 |
| 16 | 1 | HYDRAULIC TUBE ASS'Y | 2-0887 |
| 17 | 1 | HYDRAULIC TUBE ASS'Y | 2-1140 |
| 18 | 2 | ELBOW 90°, 9/16"SAE M-3/8"JIC M | 6-0804 |
| 19 | 1 | HYDRAULIC VALVE BLOCK | 6-1362 |
| 20 | 1 | HYDRAULIC VALVE BLOCK ASS'Y (C/W FITTINGS) | 6-1389 |
| 21 | 4 | LOCKWASHER, 5/16"ID | 6-0674 |
| 22 | 1 | ADAPTER, 3/8"NPT - 3/8"JIC x 2 1/4"LG. | 6-0345 |
| 23 | 2 | HEX HD. BOLT, 1/4"-20UNC x 1 3/4"LG. | 6-0028 |
| 24 | 4 | HEX NUT, 5/16"-18UNC | 6-0294 |
| 25 | 1 | HYDRAULIC HOSE ASS'Y | 1-1341 |
| 26 | 2 | HYDRAULIC TUBE ASS'Y (2PC. TOWERS) | 2-0878 |
| 27 | 1 | HYDRAULIC TUBE ASS'Y | 2-0886 |
| 28 | 1 | VELOCITY FUSE, 4GPM | 6-0422 |
| 29 | 1 | "LIFT OPERATION" DECAL (8K) | 6-1265 |
| | 1 | "LIFT OPERATION" DECAL (9K) | 6-1639 |
| | 1 | "LIFT OPERATION" DECAL (11K) | 6-1266 |
| 30 | 1 | HYDRAULIC TUBE ASS'Y (2PC. TOWERS) | 2-0716 |
| | 1 | HYDRAULIC TUBE ASS'Y (12FT. TOWERS) | 2-0960 |
| | 1 | HYDRAULIC TUBE ASS'Y (14FT. TOWERS) | 2-1064 |
| 31 | 1 | HYDRAULIC CYLINDER ASS'Y, RIGHT SIDE | 3-0735 |
| 32 | 1 | POWER PACK (8K) | 6-1956 |
| | 1 | POWER PACK (9K) | 6-1957 |
| | 1 | POWER PACK (11K) | 6-1176 |
| 39 | 1 | HYDRAULIC TUBE ASS'Y (8/9K) | 2-1537 |
| | 1 | HYDRAULIC TUBE ASS'Y (11K ASYM.) | 2-0959 |
| | 1 | HYDRAULIC TUBE ASS'Y (11K SYM.) | 2-1286 |
| 51 | 1 | ADAPTER, 1/4" NPT MALE - 1/4"JIC MALE | 6-0281 |
| 53 | 2 | ADAPTER, 1/4"NPT MALE - 3/8"JIC MALE | 6-0276 |
| | | GLAND SEAL KIT, RIGHT SIDE (8/9/11K) | 0-0551 |
| | | PISTON SEAL KIT, RIGHT SIDE (8/9/11K) | 0-0159 |
| | | GLAND SEAL KIT, LEFT SIDE (8/9/11K) | 0-0206 |
| | | PISTON SEAL KIT, LEFT SIDE (8/9/11K) | 0-0160 |

POWER PACK

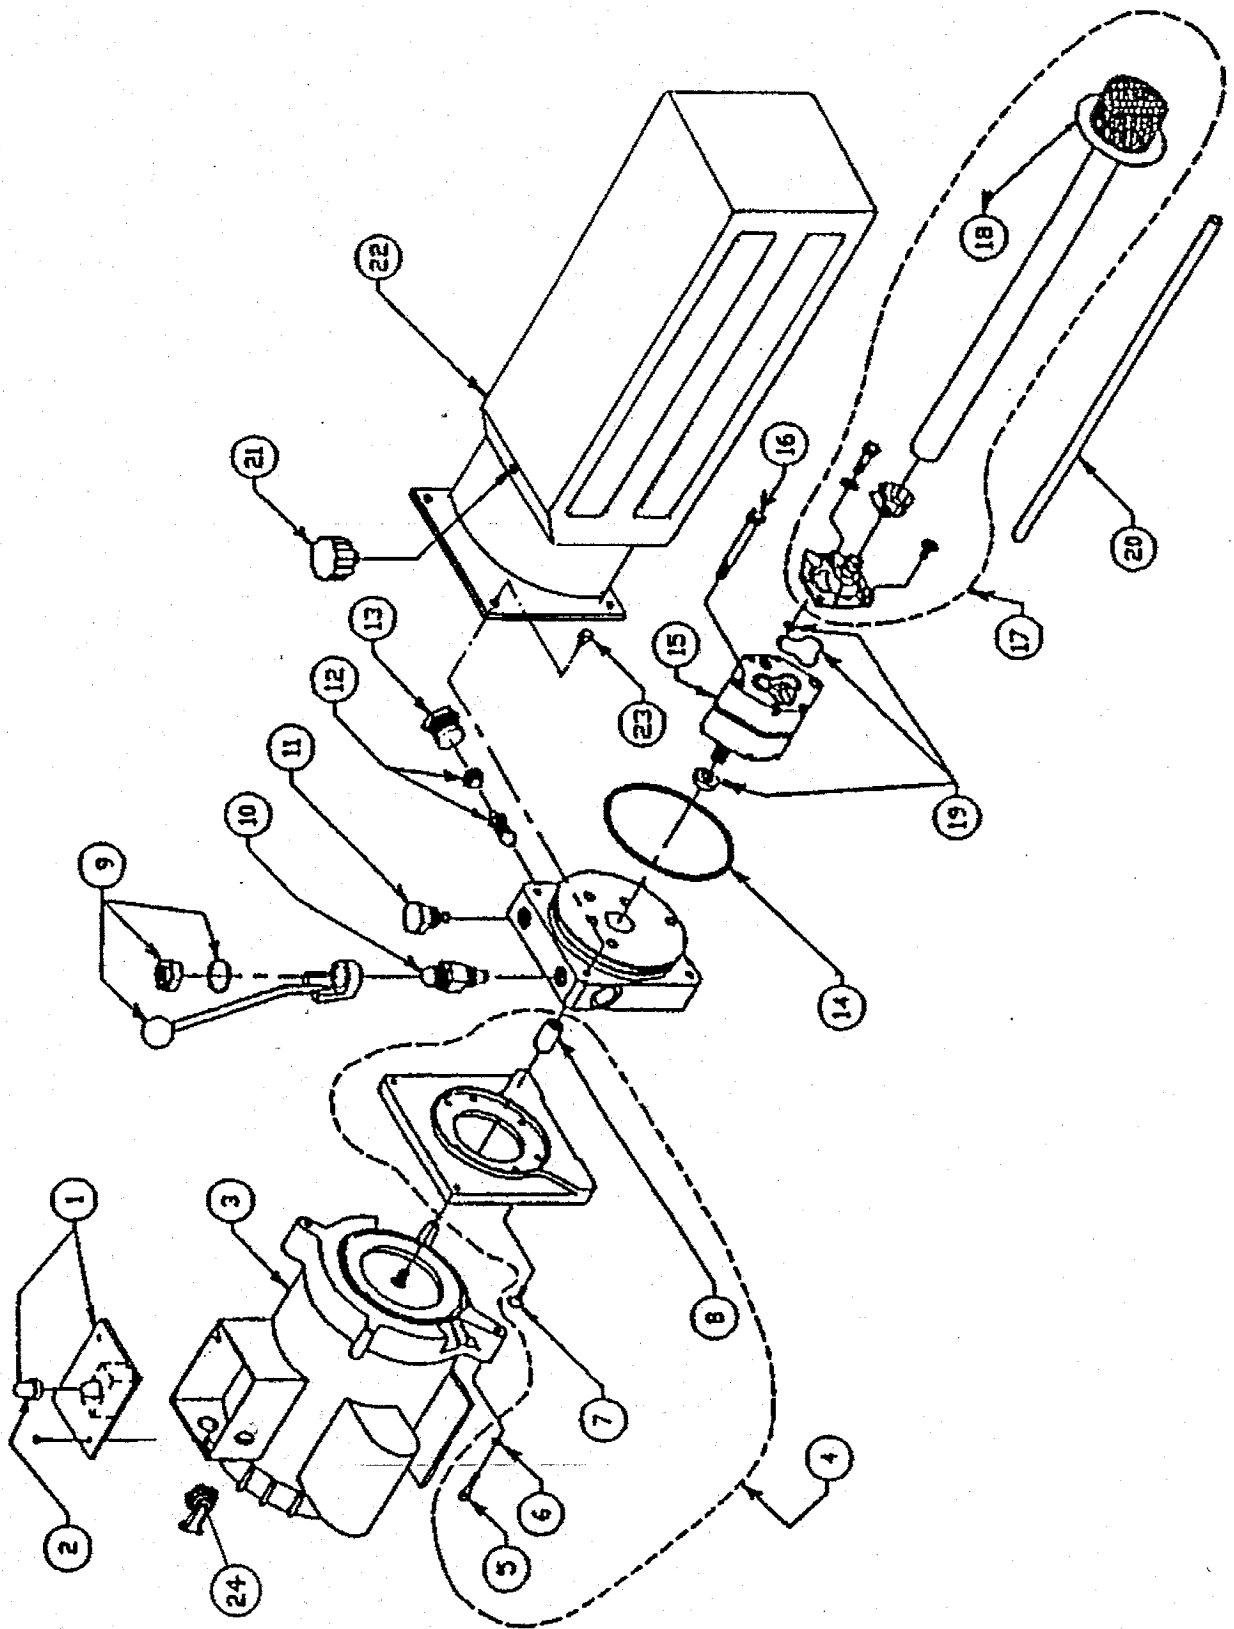

TWIN POST POWER PACK PART LIST

| ITEM | QTY. | DESCRIPTION | PART # |
|------|------|--|--------|
| 1 | 1 | MICROSWITCH | 6-0881 |
| 2 | 1 | MICROSWITCH BOOT | 6-1084 |
| 3 | 1 | MOTOR 230 VAC, 1PH, 60 HZ | 6-0773 |
| 4 | 1 | MOTOR ADAPTER | 0-0197 |
| 5 | 4 | SOCKET HD.CAP SCW, 1/4"-20UNC X 5/8"LG. | 6-1085 |
| 6 | 4 | LOCKWASHER, 1/4" I.D. | 6-0056 |
| 7 | 4 | ALLEN HD. FLAT SCW, 1/4"-20UNC X 3/4"LG. | 6-1086 |
| 8 | 1 | COUPLING | 6-0774 |
| 9 | 1 | RELEASE BRACKET & HANDLE ASSEMBLY | 6-0776 |
| 10 | 1 | VALVE CARTRIDGE RELEASE | 6-0880 |
| 11 | 1 | VALVE CARTRIDGE CHECK | 6-1087 |
| 12 | 1 | FIXED RELIEF VALVE, RV24 | 6-1324 |
| 13 | 1 | RELIEF VALVE.CAP | 6-1089 |
| 14 | 1 | RESERVOIR "O"RING | 6-0875 |
| 15 | 1 | PUMP ASSEMBLY | 6-1960 |
| 16 | 2 | PUMP MOUNTING BOLT | 6-1090 |
| 17 | 1 | INLET PLUMBING KIT | 0-0198 |
| 18 | 1 | INLET HOSE / FILTER ASSEMBLY | 6-0786 |
| 19 | 1 | PUMP "O" RING KIT | 0-0199 |
| 20 | 1 | RETURN TUBE | 6-0783 |
| 21 | 1 | BREATH-ER-FILLER CAP (PLASTIC) | 6-1376 |
| 22 | 1 | RESERVOIR (PLASTIC) | 6-1399 |
| 23 | 4 | RESERVOIR SCREW | 6-1091 |
| 24 | 1 | CABLE CONNECTOR, 3/8" | 6-1133 |

Product Manual Approval Form

Issued by: HELON R.

Date: OCT. 13/99

Manual # 6-1992, 6-1880, 6-1614 Manual Date: OCT. 1999
6-1615, 6-2116

Product: EELR333A, 63-188VS, 11144VS, 42011SS, DLS11012

Approval: Helon R. Helon R., OCT. 13/99
Engineering Representative

Details of Change:

- NEW MANUAL FOR HOFMANN

- NEW HYDRAULICS PARTS LIST.