

# FMC 4770/4870 PARALLEL LIFT

## Operation And Maintenance

---

THOROUGHLY READ THE OPERATORS MANUAL BEFORE OPERATING LIFT.

### ⚠ WARNING

ALWAYS LOWER LIFT ONTO MECHANICAL LEVELING LOCKS BEFORE WORKING UNDER A RAISED LIFT.

### ⚠ WARNING



IF UNEVEN LOWERING IS OBSERVED:

- 1) RELEASE "DOWN" BUTTON
- 2) CHECK FOR OBSTRUCTIONS
- 3) RAISE LIFT UNTIL RUNWAYS ARE EVEN
- 4) REPEAT LOWERING PROCEDURE

### ⚠ WARNING

DO NOT OPEN HYDRAULIC CIRCUIT. HIGH PRESSURE SYSTEM OPERATING AT 3000 PSI. SERVICE USING ONLY FMC FACTORY APPROVED SERVICE PERSONNEL AND PARTS.

---

## BASIC OPERATION

---

### 1. TO RAISE LIFT

Press & hold "UP" button to desired height  
Press "LOCK" button to engage Mechanical Leveling Locks.

### 2. TO LOWER LIFT

Press & hold "DOWN" button ( Lift will raise off Mechanical Leveling Locks then lower )

---

