


HOFMANN



INSTALLATION and OPERATION MANUAL

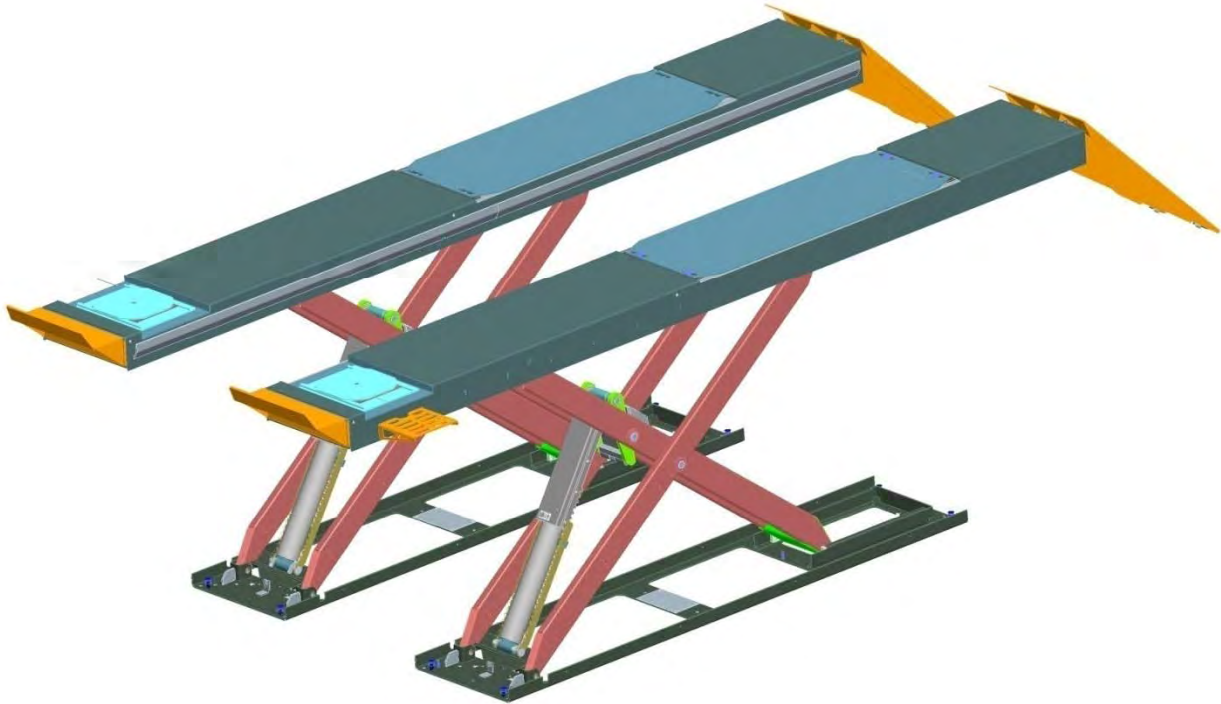

**10K SCISSOR LIFT
MODEL: BLA10(195/205)_
(H, HFM, LL, XLL)**

**READ THIS INSTRUCTION MANUAL THOROUGHLY BEFORE
INSTALLING, OPERATING, SERVICING OR MAINTAINING
THE LIFT.**

SAVE THIS MANUAL.



309 Exchange Avenue • Conway, AR 72032
(800) 251-4500 • (501) 505-2662
Fax (501) 450-2085 • www.hofmann-usa.com



6500 Millcreek Drive • Mississauga, ONT L5N 2W6
(800) 267-2185
Fax (905) 821-2073 • www.hofmann.ca

OCT 2015 REV. -

6-3644

Table of Contents

1.0 IMPORTANT SAFETY INSTRUCTIONS	4
2.0 SAFETY WARNING DECALS	6
3.0 SPECIFICATIONS	7
4.0 CONTENTS	8
5.0 TOOLS REQUIRED FOR INSTALL	9
6.0 INSTALLATION OVERVIEW	9
7.0 INSTALLATION INSTRUCTIONS	10
7.1 Flushmount Bay Layout	12
7.2 Surfacemount Bay Layout.....	13
7.3 Baseframe Location.....	14
7.4 Unpacking the Lift.....	15
7.5 Hydraulic Connections.....	16
7.6 Air Safety and Auxiliary Air Connection	17
7.7 Electrical Connection	19
7.8 Initial Run.....	21
7.9 Level and Support.....	22
7.10 Anchoring Procedure	24
7.11 Grouting Procedure (Optional)	25
8.0 ACCESSORY INSTALLATION	26
8.1 Line Cover Installation.....	28
9.0 LOCKING FRONT TURNPLATES & REAR SLIP PLATES (OPTIONAL)	29
9.1 Installation of Front Turnplates	29
9.2 Console Connections for Locking & Lights	30
10.0 FINAL PROCEDURES	32
10.1 Check of Assembled Lift	32
10.2 Operation Test with Vehicle	32
11.0 LIFT OPERATION	33
11.1 Raising the Lift	33
11.2 Lowering the Lift.....	33
12.0 RECOMMENDED MAINTENANCE	34
12.1 Kicker Greasing Procedure.....	35
12.2 Checking Oil Level for Air Lubricator.....	35
12.3 Maintenance of Turnplate & Slip Plate Locking System (Opt.).....	36
12.4 Adjustment of Safety Locks.....	37
12.5 Lock Out and Tag Out Instructions	38
12.6 Isolation and Verification Procedure:.....	39
12.7 Emergency Operation.....	40
12.8 Maintenance Schedule	42
13.0 TROUBLE SHOOTING	43
14.0 LIFT ASSEMBLY	44
14.1 Lift Parts List.....	45
14.2 REAR SLIP PLATE TRANSFER BALL ARRANGEMENT	47
15.0 HYDRAULIC/AIR PARTS ASSEMBLY	48
15.1 Hydraulic/Air Parts List	49
16.0 Accessory assembly	50
16.1 Front Turnplate	50
16.2 Rear Slip Plate Locking Mechanism.....	52

16.3	Airline Routing for Locking Turnplates and Rear Slip Plates	53
16.4	Rear LED Light Assembly: Exploded View.....	55
16.5	LED Control Box	57
16.6	Air Switch for Light Kit	58
17.0	CONSOLE ASSEMBLY.....	59
17.1	Console Parts List	60
17.2	Console Pneumatic / Filtering System	61
17.3	Console: Pneumatic & Filtering System - Locking & Light System (Optional)	62
17.4	Console Labeling	63
18.0	POWER PACK ASSEMBLY	64
19.0	AVAILABLE ACCESSORIES.....	67



1.0 IMPORTANT SAFETY INSTRUCTIONS

When using this lift, basic safety precautions should always be followed, including the following:

1. Only trained and authorized personnel should operate the lift or rolling jacks. Do not allow customers or bystanders to operate the lift or be in the shop area while lift is in use.
2. Read all instructions in this manual and on the lift thoroughly before installing, operating, servicing or maintaining the lift. Thoroughly train all employees in the use and care of lift and rolling jacks.
3. Inspect the lift DAILY. Do not operate if it malfunctions or problems have been encountered.
4. Ensure no one is standing in front or behind the lift while vehicle is being driven onto, or backed off the lift.
5. Before driving vehicle on, make sure lift is in the fully down position.
6. Before removing vehicle from the lift, make sure lift is in the fully down position and ensure that all tools have been removed from the deck surfaces.
7. Always raise the lift off safety locks before lowering.
8. Do not allow rear tires or portion of the vehicle to interfere with approach ramp.
9. Be sure front wheel stops are always installed on the lift.
10. Never allow front wheels to strike the front wheel stops.
11. Always use wheel chocks to keep the vehicle from rolling freely on the runways. Wheel chocks should be used at front and back of the same wheel.
12. Never attempt to overload the lift. The manufacturer's rated capacity is shown on the identification label on side of the deck. Do not override the operating controls or safety devices.
13. Do not permit employees or customers on lift when it is either being raised or lowered.
14. Never raise a vehicle with passengers inside.
15. Always stand clear of lift when raising or lowering and observe "Pinch Points" warning.
- 16. CAUTION! Never work under the lift unless mechanical safety locks are engaged.**
17. Always use Personal Protective Equipment (PPE) when installing or servicing the lift.
18. Always keep the lift area free of obstruction and debris. Grease and oil spills should always be cleaned up immediately.
19. Always chock vehicle wheels before raising or lowering the lift.
20. Before lowering check the area for any obstructions including people.
21. To protect against risk of fire, do not operate the lift in the vicinity of open containers of flammable liquids.
22. Adequate ventilation should be provided when working on internal combustion engines.
23. Never open hydraulic lines under pressure.
24. Do not raise or lower the lift with the vehicle on the Jackbeam.

25. For Jackbeam Safety Instructions, see Jackbeam Installation, Operation Manual.

READ AND SAVE THESE INSTRUCTIONS

Installation shall be performed in accordance with ANSO/ALI ALIS, Safety Requirements for Installation and Service of Automotive Lifts.

For additional safety instructions regarding lifting, lift types, warning labels, preparing to lift, vehicle spotting, vehicle lifting, maintaining load stability, emergency procedures, vehicle lowering, lift limitations, lift maintenance, good shop practices, installation, operator training and owner/employer responsibilities, please refer to “Lifting It Right” (ALI/SM) and “Safety Tips” (ALI/ST).

For additional instruction on general requirements for lift operation, please refer to “Automotive Lift-Safety Requirements For Operation, Inspection and Maintenance” (ANSI/ALI ALOIM).



ATTENTION! This lift is intended for indoor installation only. It is prohibited to install this product outdoors. Operating environment temperature range should be 41 – 104 °F (5 – 40 °C). Failure to adhere will result in desertification, loss of warranty, and possible damage to the equipment.

SAFETY INSTRUCTIONS

If attachments, accessories or configuration modifying components that are located in the load path, affect operation of the lift, affect the lift electrical listing or affect intended vehicle accommodation are used on this lift and, if they are not certified for use on this lift, then the certification of this lift shall become null and void. Contact the participant for information pertaining to certified attachments, accessories or configuration modifying components.

www.autolift.org

©2007 by ALI, Inc.

ALI / WLSIA01

2.0 SAFETY WARNING DECALS

Be sure the operator is aware and understands all safety warning labels and follows them accordingly.

Automotive Lift Institute, Inc.





The messages and pictographs shown are generic in nature and are meant to generally represent hazards common to all automotive lifts regardless of specific style.

Funding for the development and validation of these labels was provided by the Automotive Lift Institute, PO Box 85 Cortland, NY 13045.

Replacement label sets may be obtained from the original lift manufacturer and ALI's member companies. They are protected by copyright.

www.autolift.org © 2009 by ALI, Inc. ALI/WL200c

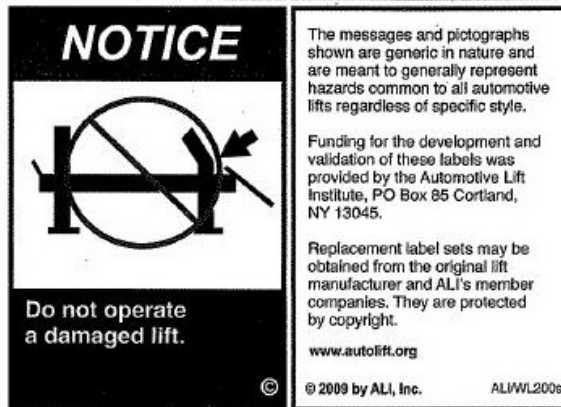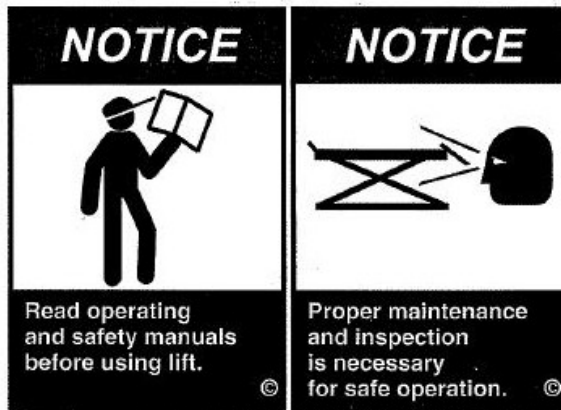

WL200 Series Label Kit



The messages and pictographs shown are generic in nature and are meant to generally represent hazards common to all automotive lifts regardless of specific style.

Funding for the development and validation of these labels was provided by the Automotive Lift Institute, PO Box 85 Cortland, NY 13045.

Replacement label sets may be obtained from the original lift manufacturer and ALI's member companies. They are protected by copyright.

www.autolift.org © 2010 by ALI, Inc. ALI/WL200w

3.0 SPECIFICATIONS

Maximum Capacity:	10 000 lbs	4536 kg
Overall Width (min-max):	92-1/2 -94-1/2 Inches	2350-2400 mm
Overall Length:	172" W/B	265-3/8 Inches
		6741mm

	155" W/B	255-3/8 Inches	6486mm
Maximum Raised Height:		72 Inches	1829 mm
Minimum Lowered Height:		9 Inches	229 mm
Runway Width		26 Inches	660 mm
Lifting Time (approx.):	85 seconds at max. capacity		
Power Requirements:	230V, 1 Ph, 60 Hz, 18A		
Air Supply requirements:	90 to 120 PSI		
Pneumatic Filtration Oil Type:	Snap-On #IM6 or Equivalent		
Hydraulic Oil Capacity:	Tank size: 4.0 gal	Lift uses: 3.0 gal	
Hydraulic Oil Type:	ISO 32 (10 weight) hydraulic oil		
Shipping Weight:	4724 lbs	2143 kg	

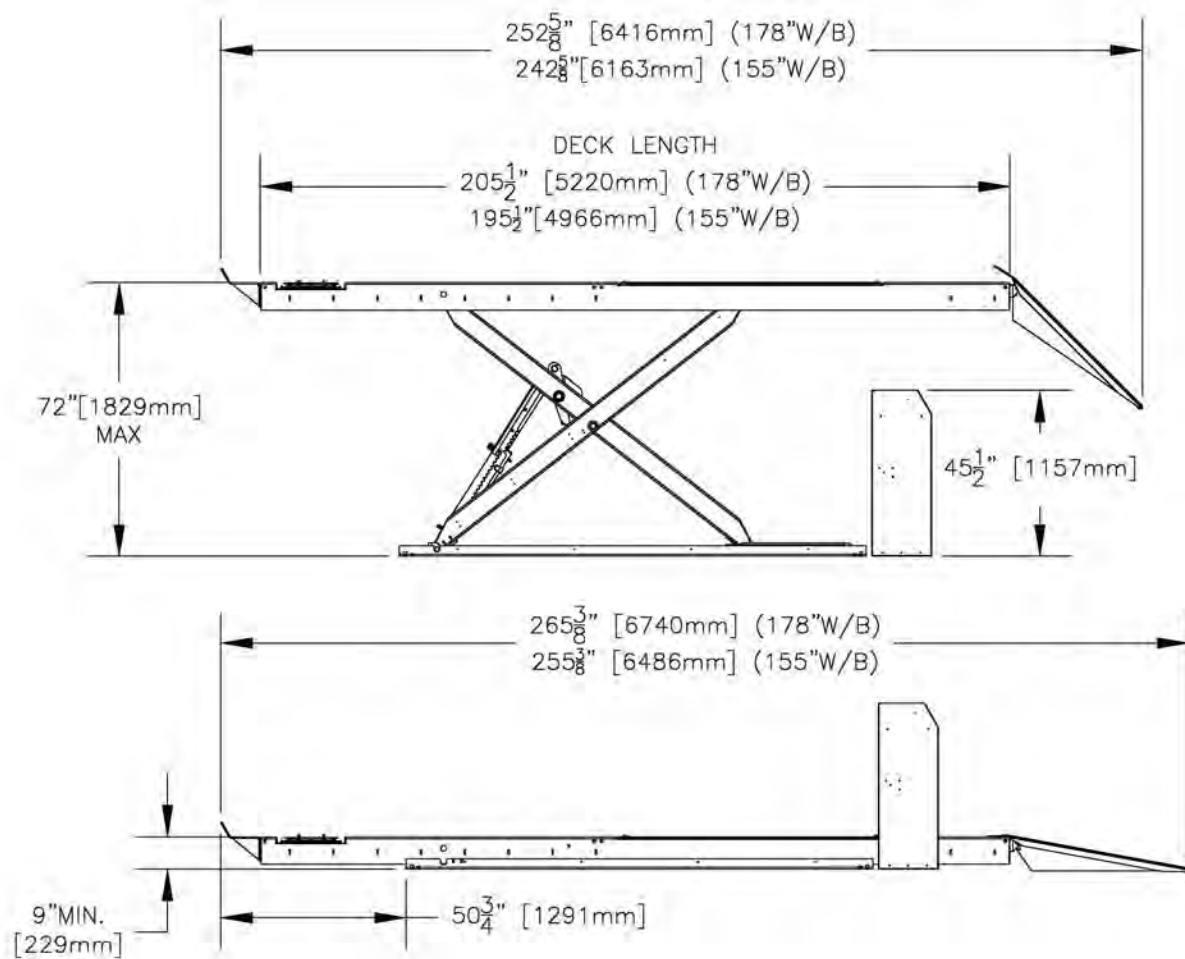


Figure 1 Lift Dimensions

4.0 CONTENTS

The complete lift is contained in two (2) packages:

1. The main structural components are pre-assembled and packaged on top of each other.
2. The remaining parts are packed in a console/accessory box. Refer to the packing slip inside for a list of contents.

Components include:

- 1pc. – Left Side Main Frame Assembly: Runway, Scissors and Base Frame
- 1pc. – Right Side Main Frame Assembly: Runway, Scissors and Base Frame
- 1pc. – Console and accessory box. (See accessory box list for contents)
- 1pc. – Grout container
- 1pc. – Customer care kit including manuals

5.0 TOOLS REQUIRED FOR INSTALL

- Hammer Drill or similar, 1/4" and 1/2" Concrete Drill Bits
- 4' Level
- SAE Wrenches and Sockets
- Hammer
- Pry Bar – 5' Long
- Chalk Line
- Tape Measure
- Side Cutters
- Screw Drivers
- Funnel
- Utility Knife
- Torque Wrench

Recommended:

- Laser Leveler
- Plumb Bob
- Impact Gun
- Boom and/or Engine Hoist
- 8' Sling
- Engine Crane

Note: Apply LOCTITE #242 on required fasteners where symbol is shown.
If fasteners are removed reapply LOCTITE before re-installing.



6.0 INSTALLATION OVERVIEW

This is the order in which this installation is to take place:

1. Layout the Bay
2. Unpacking of Lift
3. Inspect Lift
4. Connect Air Lines
5. Connect Hydraulic Lines
6. Connect Electrical
7. Temporary shimming under Kicker area. **IMPORTANT!!**
8. Initial Run of Lift
9. Level, Shim & Anchor
10. Install Accessories
11. Final Check
12. Clean
13. Train customer on operation of Lift

IMPORTANT: Shop air must be connected to the inlet port of the FRL unit on the console in order for lift to operate.

7.0 INSTALLATION INSTRUCTIONS

When the lift arrives on site, please read the Installation Manual completely. Check the contents to make sure no parts are missing before starting installation. Gather all of the tools listed and make sure that the instructions are fully understood before commencing with the installation.



IMPORTANT: It is the user's responsibility to provide a satisfactory installation area for the lift. Lifts should only be installed on a level concrete floor with a minimum thickness of four and a quarter inches (4¼") or 108 mm. Concrete must have a minimum strength of 3000 PSI or 21 MPa and should be aged thirty (30) days prior to installation. Please consult the architect, contractor or engineer if doubt exists as to the strength and feasibility of the floor to enable proper lift installation and operation.



IMPORTANT: It is the user's responsibility to provide all wiring for electrical hook-up prior to installation and to ensure that the electrical installation conforms to local building codes. Where required, it is the user's responsibility to provide an electrical isolation switch located in close proximity to the lift that will enable emergency stop capability and isolate electrical power from the lift for any servicing requirements.



WARNING: The floor surface must be inspected and the below requirements must be met.

NO Drains.



NO Depressions.

NO Holes or Pits.


In shaded area around lift



If more than ¼" depression in the kicker area (10" span), this area must be filled and leveled.

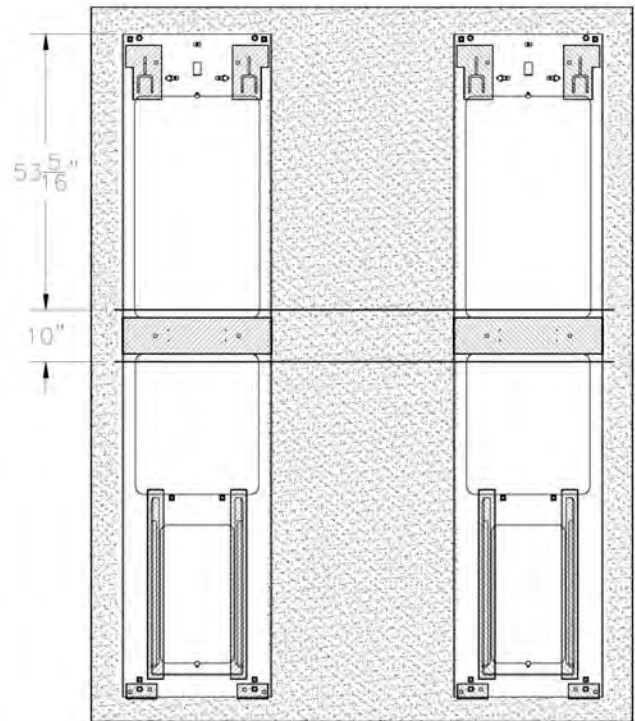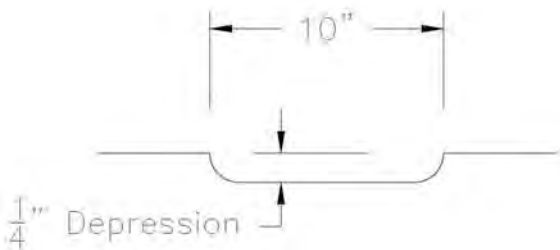

7.1 Flushmount Bay Layout

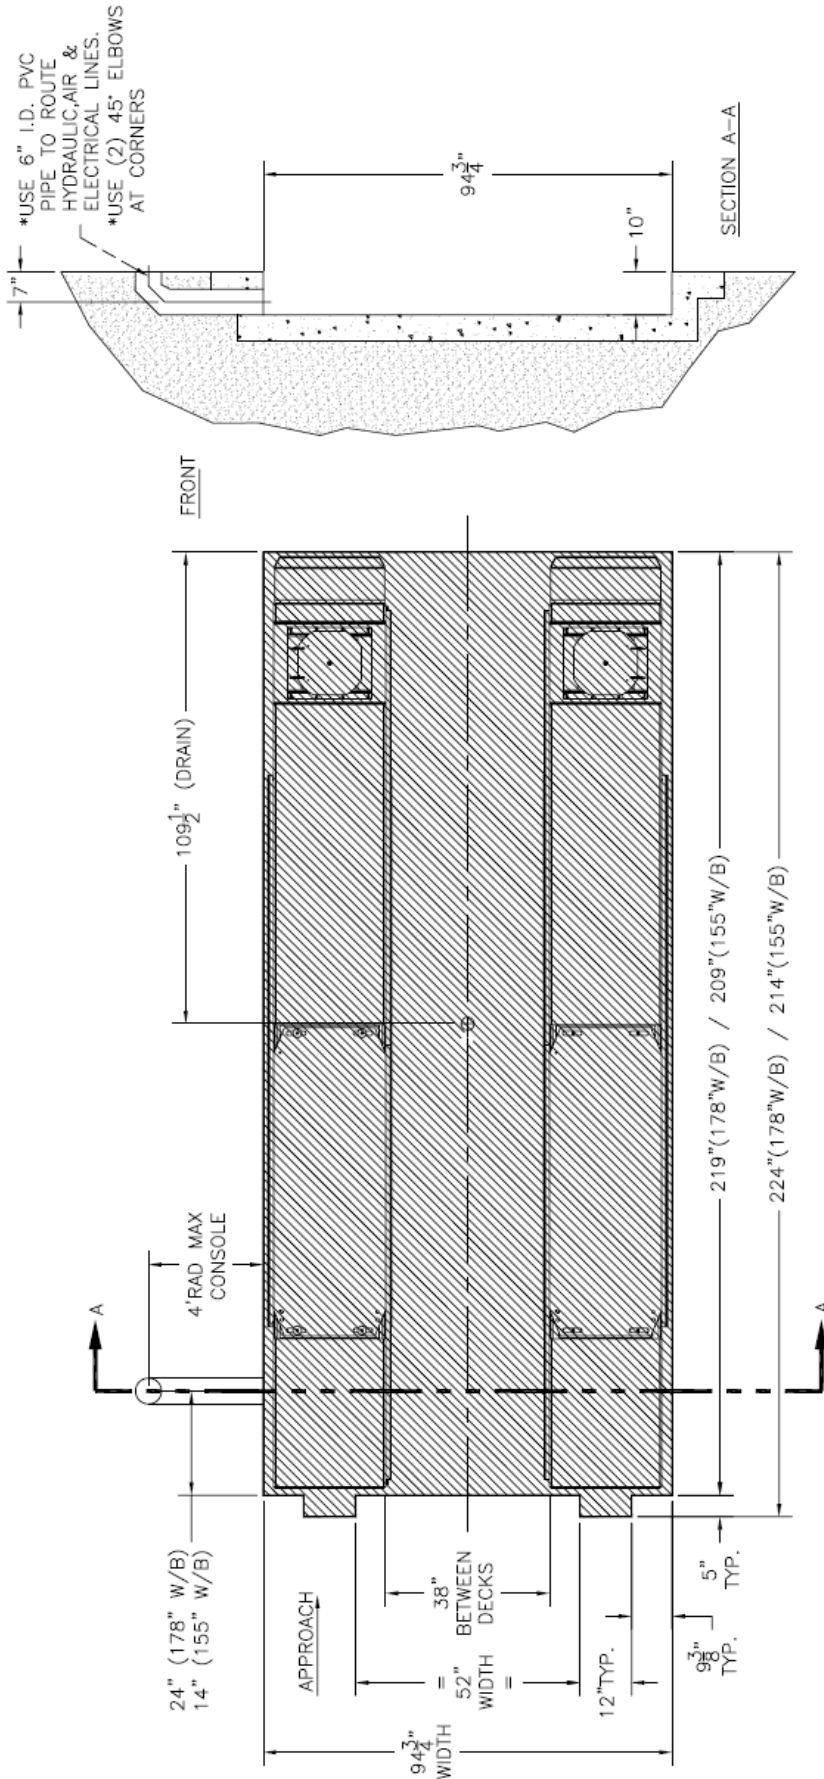


Note: Leave any additional room for any desired aisle or work area. Recommended clearance around the lift is three (3) feet. Ensure clearance conforms to local building and fire codes.

Recommended overhead clearance is a minimum twelve (12) foot ceiling providing 6 feet for the maximum lift height and 6 feet for the supported vehicle. For vehicles taller than 6 feet it is recommended that the user provides additional overhead clearance or a shut off mechanism to stop the lift from raising the vehicle too high.

Please contact customer service for latest installation diagram as it may change without notice.

Figure 2 - Typical Bay Layout (Flush Mount)

7.2 Surfacemount Bay Layout

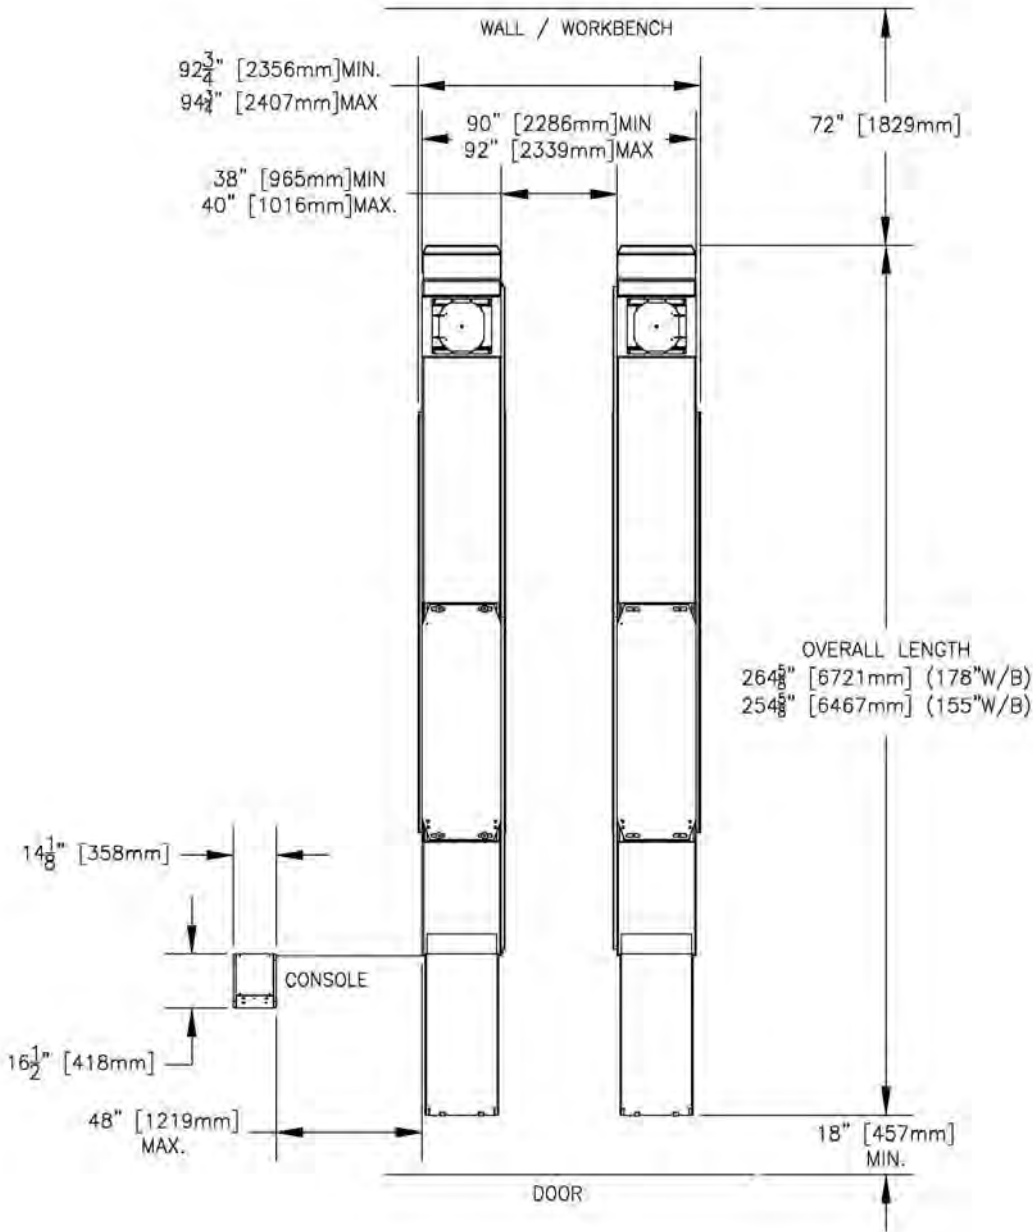


Note: Leave any additional room for any desired aisle or work area.

Recommended clearance around the lift is three (3) feet. Ensure clearance conforms to local building and fire codes.

Recommended overhead clearance is a minimum twelve (12) foot ceiling providing 6 feet for the maximum lift height and 6 feet for the supported vehicle. For vehicles taller than 6 feet it is recommended that the user provides additional overhead clearance or a shut off mechanism to stop the lift from raising the vehicle too high.

Figure 3 - Typical Bay Layout (Surface Mount)

7.3 Baseframe Location

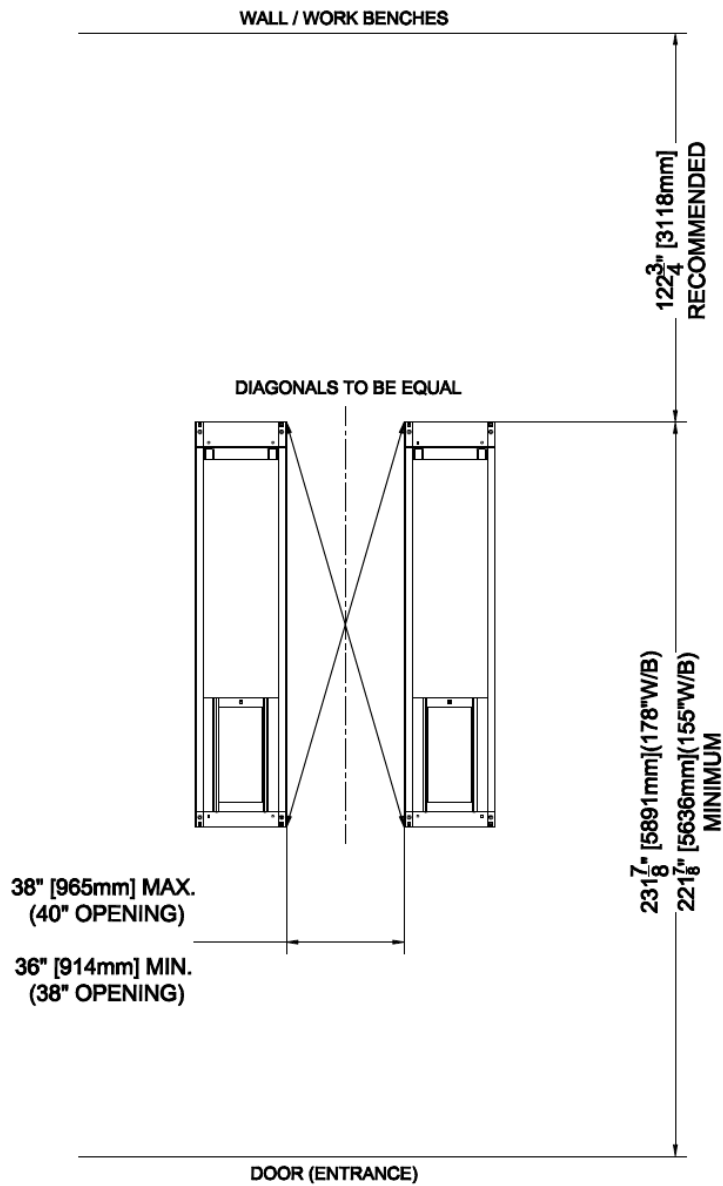

IMPORTANT: DO NOT CUT THE SHIPPING STRAPS HOLDING EACH SCISSOR ASSEMBLY TOGETHER UNTIL INSTRUCTED TO DO SO.

1. With reference to **Figure 3**, the installer should locate the most suitable location in the shop for the lift.
2. Snap a chalk line for the centerline of the lift ensuring that it matches the centerline of the bay door.

*** See Section 6.0 Installation Instructions for the floor surface requirements.**

3. Measure and snap two (2) parallel chalk lines on either side the centerline for the inside edges of the baseframes. Refer to **Figure 4** for the dimensions necessary to provide the desired width between the two runways. A distance of 36" between the baseframes will provide the standard width of 38" between the inside of the runways. This can go to a maximum of 38" to provide 40" between insides of runway.
4. Measure and snap a chalk line parallel to the shop door for the front of the baseframes, a minimum distance of 231-1/8" (178"W/B) / 221-1/8" (155"W/B) is recommended.
5. Before proceeding, ensure that once the runways are installed adequate workspace will remain in front of the lift.

Figure 4: Baseframe Locations



Refer to the minimum requirements listed in the installation and operation manual of any alignment equipment as needed.

7.4 Unpacking the Lift


1. Unpack the console and place it in the desired location at the rear of the lift. The console can be placed on either the left or right hand side of the lift. The console must be located so the operator is always facing the lift.
2. Unpack the runways and lay each baseframe along the chalk lines.



Do not remove the individual strapping on the runways until they have been positioned on the chalk lines.

3. Position the baseframes on chalk lines, and ensure that the runways are parallel. Ensure that both the inside dimensions (front and back) of the baseframes as well as the diagonal distances are equal.
4. Remove the remaining packing straps, and remove the hydraulic hoses and polytubes from under the runway. Hoses are located under the rear portion of the runway and are factory pre-installed.
5. Inspect lift for damage or any irregularities. If any are found, please contact customer service before proceeding.

Note: Do not pull excessively on the hoses as it may strain the connections to the baseframes.

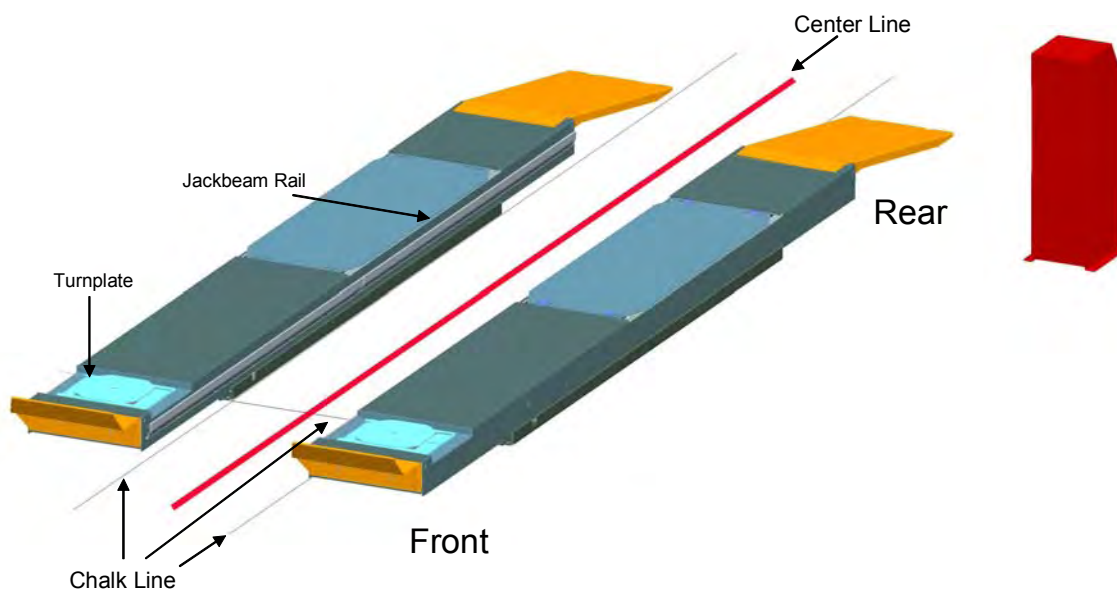

Ensure that the turnplate pockets are at the front, and that Jack Beam rails for each runway face each other.



Ensure there are no holes, depressions, or drains inside the installation area. See Section 6.0 for requirements.

7.5 Hydraulic Connections

1. Open the rear access covers of the console.
2. Unravel all hoses and air lines from each runway and connect the hydraulic lines as shown in **Figure 6**.



- Always make sure that the connections are clean to avoid contaminating the hydraulic system.
- Do not kink hydraulic hoses or air lines.
- Do not remove hydraulic fittings while under pressure..

3. Connect the cylinder hoses (2-2177) to the pump manifold.

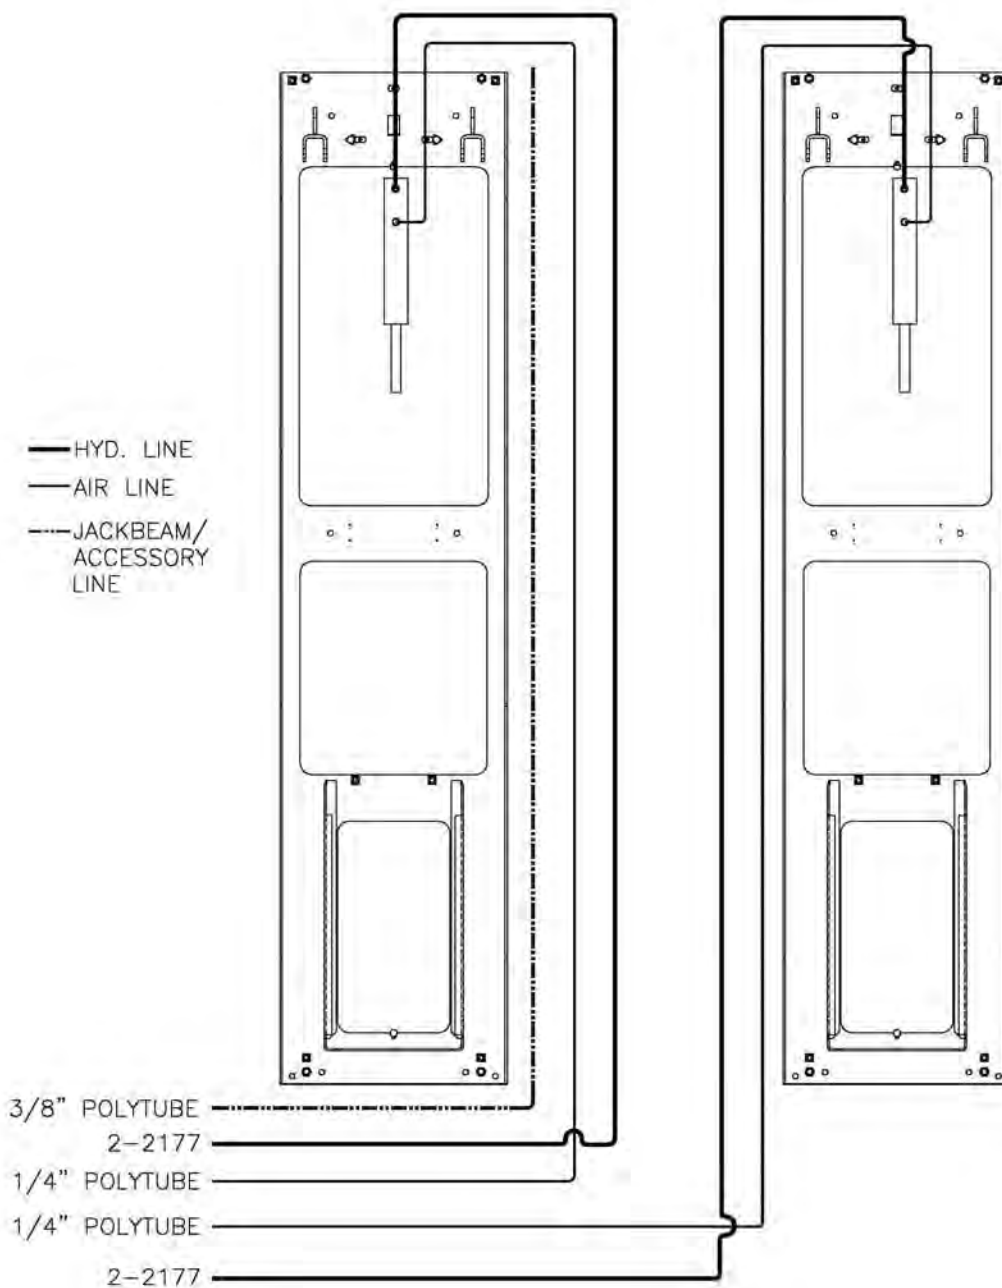


Figure 6 - Air Safety, Auxiliary Air and Hydraulic Connections


7.6 Air Safety and Auxiliary Air Connection



WARNING! WEAR SAFETY GOGGLES AND PRACTICE CAUTION WHILE WORKING WITH COMPRESSED AIR.

1. Uncoil the 1/4" polytube under each deck that is connected to the air release cylinder. Route this line to the 'y' connector in the console.
2. Locate the FRL. The hardware is preassembled on the FRL, remove the two nuts ensuring the screws do not fall.
3. Assemble the FRL unit to the side of the console with the hardware provided on the FRL unit. Orient with supply port to the rear of the console and 90° fitting lined up with the hole in the side of the console.
4. On the inside of the console, assemble the nuts but leave loose, engaging 2 threads.
5. Rotate the FRL such that the 90° fitting passes through the hole. Secure the T-fitting inside the console to the 90° fitting with a wrench.
6. Tighten the nuts to secure the FRL
7. The 3/8" polytube for the auxiliary air connections is coiled under the right side runway. Route this hose to the console and connect it to the tee fitting inside the console.
8. A 3/8" NPT fitting (**not supplied**), is needed to connect shop air supply to the Air Filter / Regulator/ Lubricator Unit. Connect air line to the FRL unit located on the outside of the console.

IMPORTANT: Shop air must be connected to the inlet port at the FRL unit on the console, in order for lift to operate.

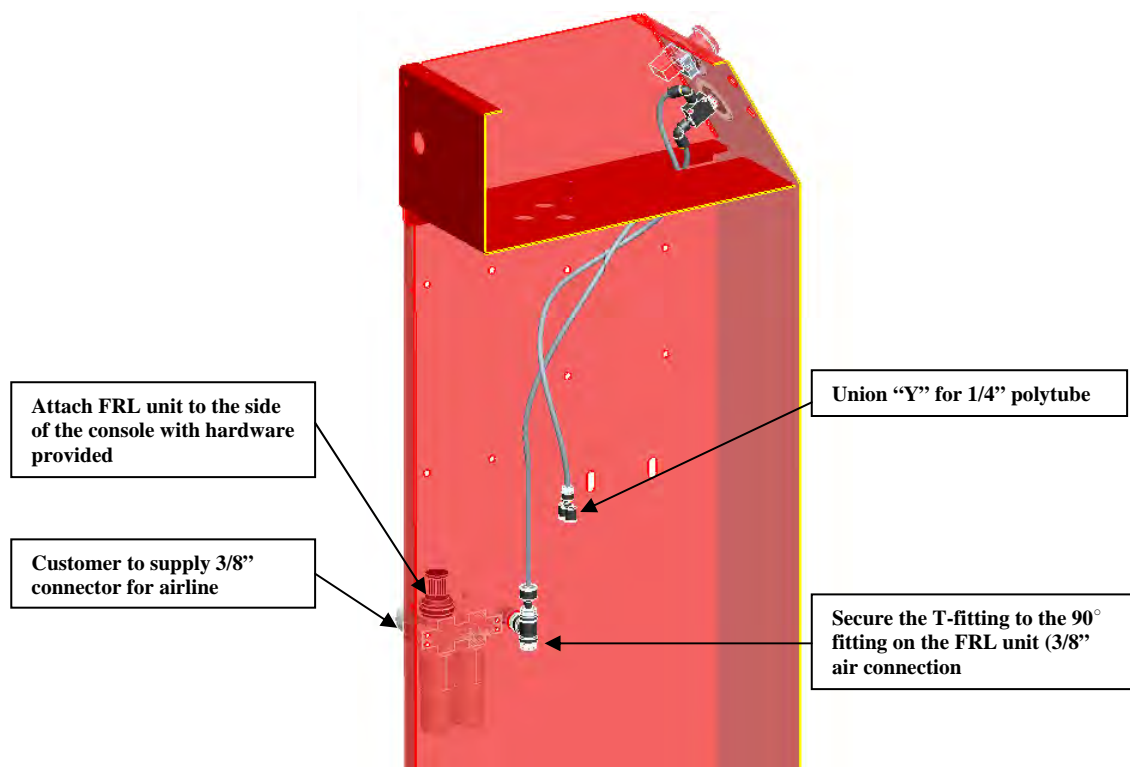




WARNING! REPLENISH THE LUBRICANT AFTER RELEASING THE INLET PRESSURE. LUBRICATION CANNOT TAKE PLACE UNDER A PRESSURIZED CONDITION

9. Unscrew the lubricator bowl by turning it in a counter-clockwise direction
10. Fill the lubricator bowl using **Snap-On Air Motor Oil #IM6** or equivalent. Oil supply to the lubricator should be less than the upper limit of the oil level
 - **The console is equipped with an Air Filter / Lubricator / and Regulator to ensure clean air supply is provided to the safety release cylinders, jackbeams and any other air tools connected to the lift. The air regulator should be set between 90-120 psi.**



IMPORTANT! OIL OTHER THAN ABOVE MAY CAUSE DAMAGE AND DRIPPING FAILURE

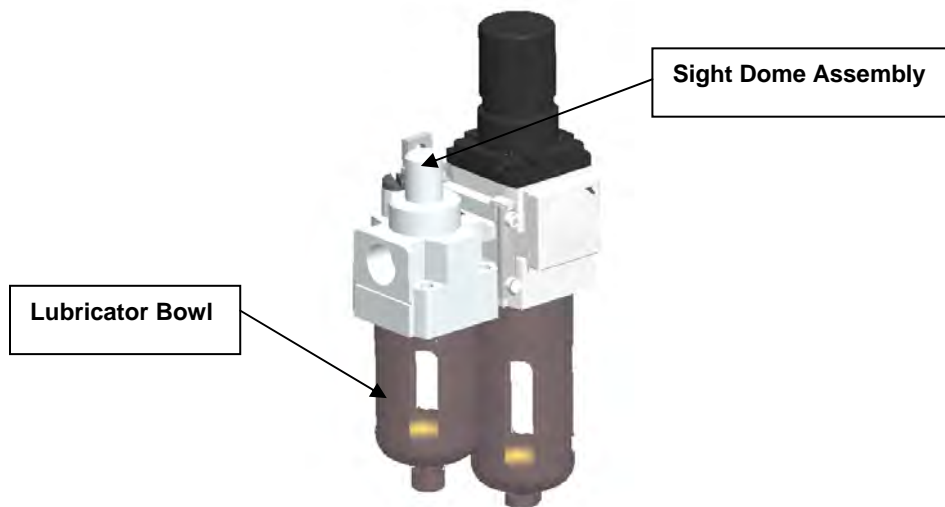

11. Screw in the lubricator bowl again
12. Slowly pressurize the system. Check the sight dome assembly and verify that oil drips.
 - **Note: The regulator has been pre-set to operate at 90 psi.**
 - **Note: The sight dome assembly has been pre-set to provide 3-5 drips per minute**
13. Press up button to raise lift off mechanical safety locks.
 - While holding the air safety release button, press the down button and lower the lift completely to the ground.



14. Check the air system for any leaks.

7.7 Electrical Connection



DANGER! ENSURE THAT ELECTRICAL CONNECTIONS ARE COMPLETED BY A LICENSED ELECTRICIAN! ELECTRICAL SHOCKS CAN CAUSE SERIOUS INJURY OR EVEN DEATH.

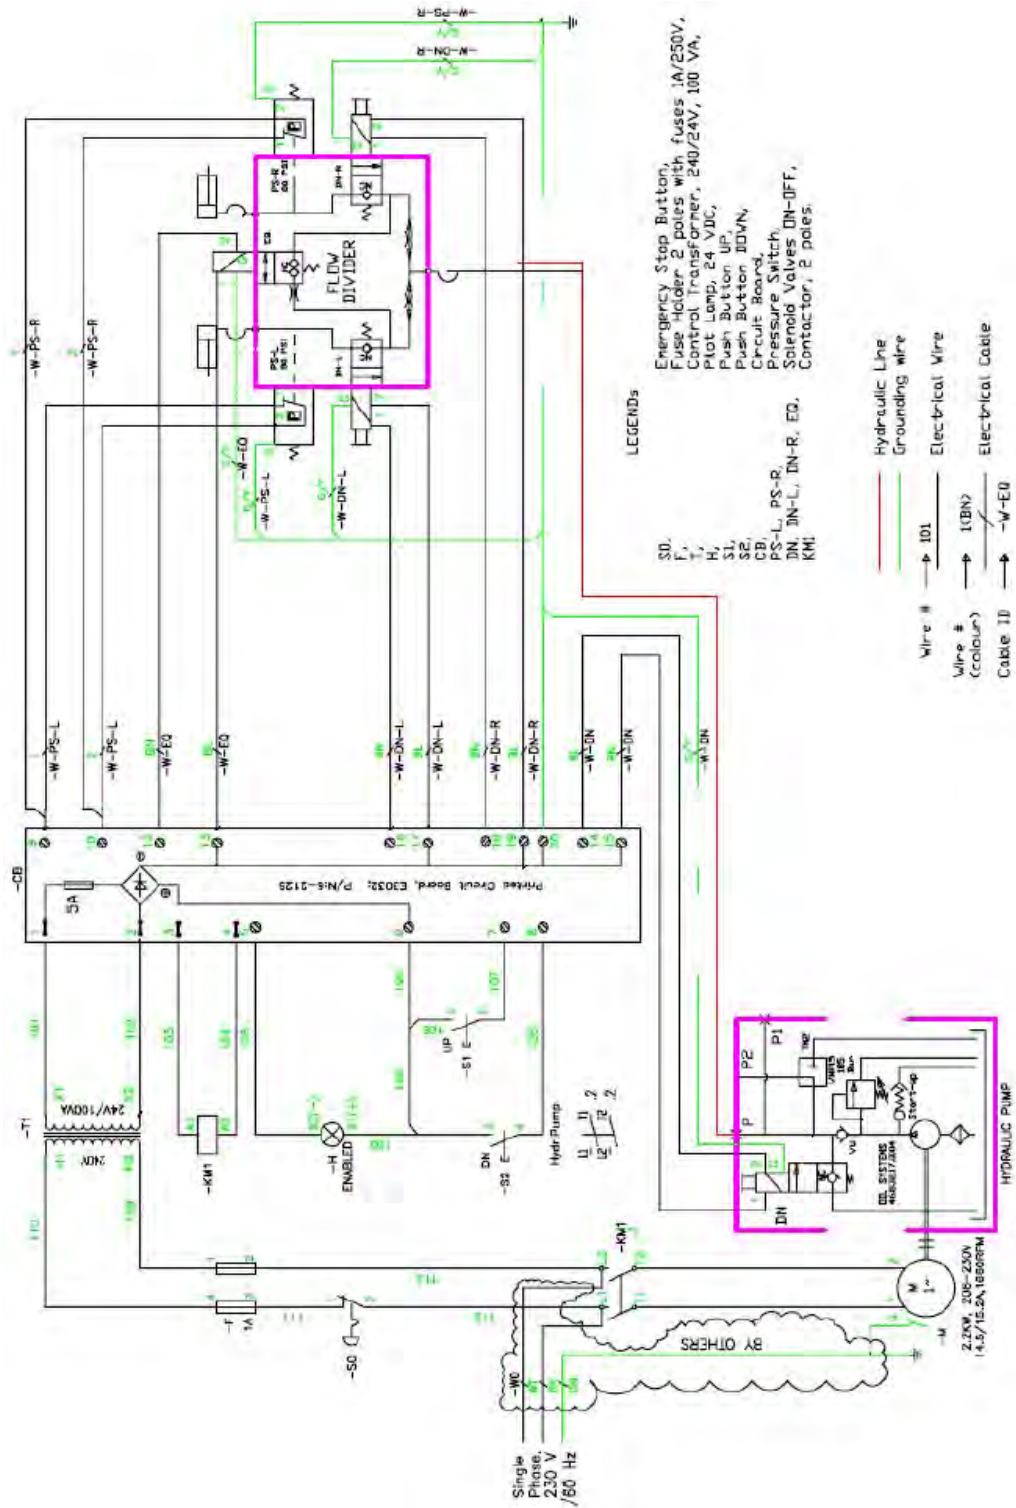


Figure 5a - Electrical Connections

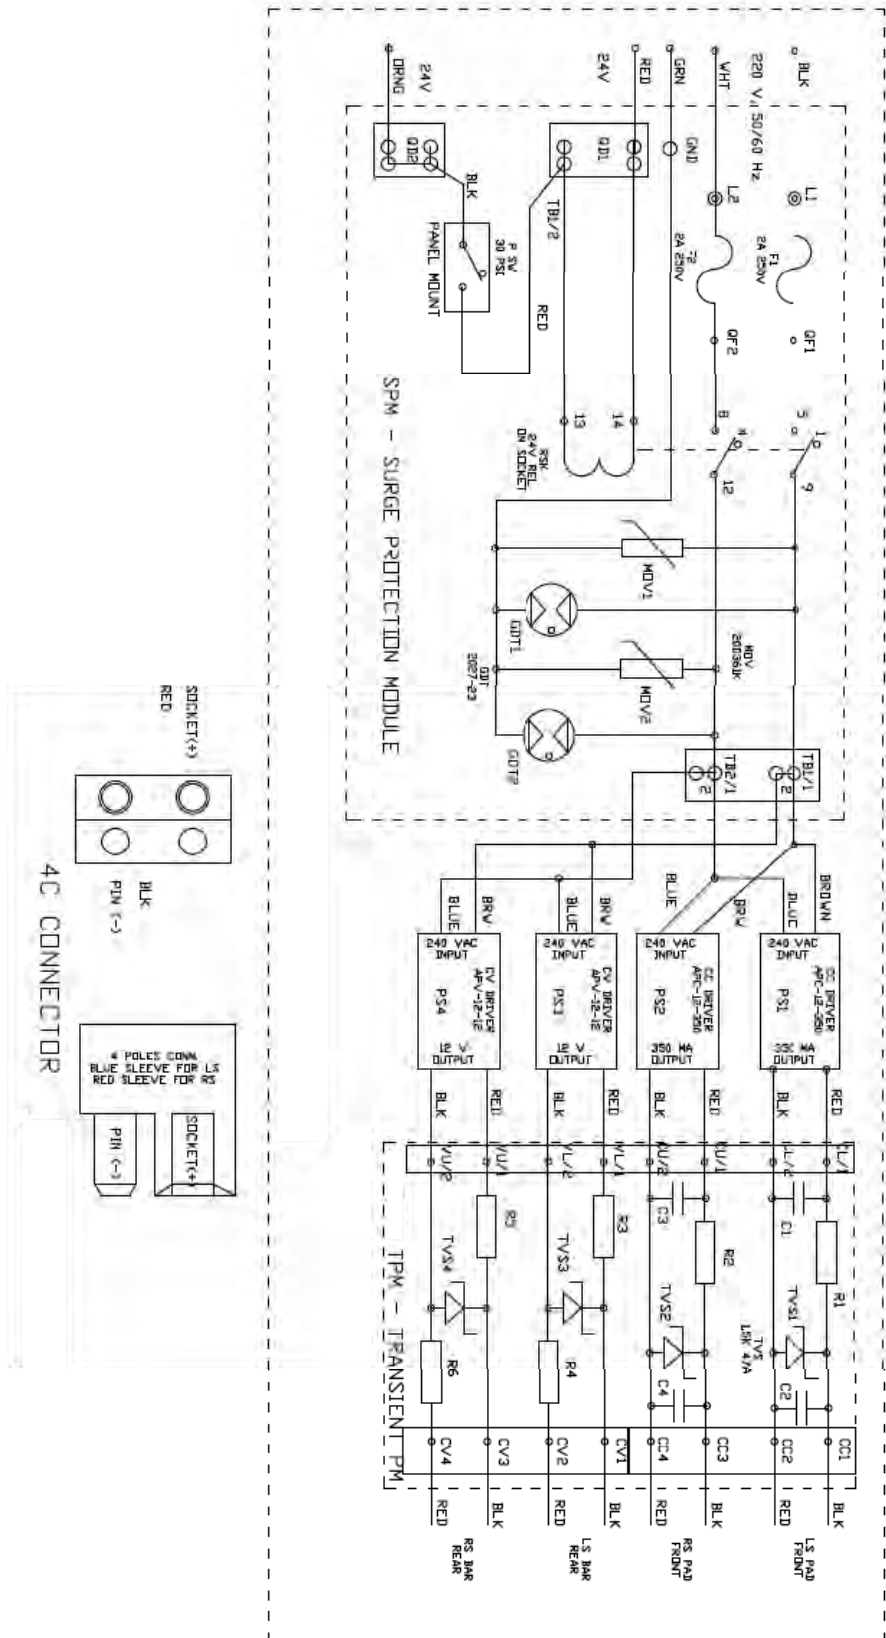


Figure 5b - * Optional LED Driver Box Circuit Connections


7.8 Initial Run



IMPORTANT! BEFORE STARTING THIS PROCEDURE, TEMPORARILY SHIM THE KICKER AREA, IF NEEDED. FAILURE TO DO SO WILL CAUSE DAMAGE TO THE LIFT. (SEE DIAGRAM IN SECTION 7.0)

1. Once the main electrical power supply has been connected, remove console top cover. Remove (3) screw completely and loosen the forth until you are able to rotate the cover out of the way.
2. Using a funnel with a screen filter, add 15 liters / 4 gallons hydraulic fluid (refer to **Section 3.0** for recommended type).
3. Turn the potentiometer adjustment fully clockwise.
⤵ **Do not use excessive force to turn screw.** The potentiometer adjustment is located on the PCB board.
4. Press the UP button until the LED illuminates. (Approximately 12"-14" high)
5. Press and hold the Safety Release button and the DOWN button simultaneously to lower the lift to the ground, until the green LED light goes off. This will release air from the hydraulic system.

Note: If the LED is not illuminated, the lift will not lower – press the up button and raise the lift until the LED comes on. Once the LED is illuminated, the lift can be lowered.

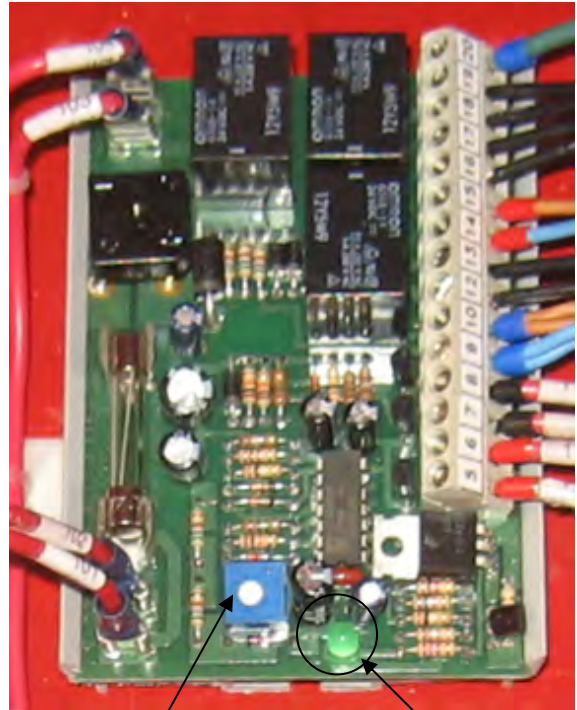

Potentiometer

LED

6. Repeat these steps 5-6 times to completely bleed the system of air. Check the lift for hydraulic leaks at all connections. When complete, turn the potentiometer adjustment fully counter clockwise. ⤴
7. After bleeding, it is recommended that the fitting assemblies located on the flow divider valve, where hydraulic hoses from lift attached be cleaned. **Note: Place the fitting on a workbench and use an air gun to blow through the filter in the opposite direction to flow from the lift.**
8. Reinstall fitting assemblies and connect hydraulic hoses.
9. Reinstall the console top cover.




7.9 Level and Support



NOTICE: CORRECT LEVELING IS IMPORTANT TO ENSURE THE PROPER OPERATION OF THE LIFT. TAKE PRECAUTIONS TO ENSURE ACCURATE LEVEL READINGS WHEN PERFORMING THIS PROCEDURE.

Side-to-side leveling measurements should be taken off the baseframe, and measurements should be taken on each baseframe as well as between the two baseframes. Front-to-back level measurements should be taken on the runways.

1. Press the UP button and raise the lift approximately 3-4 ft off the ground. Check the location of the baseframes compared to **Figure 4**, and make minor adjustments as required.
2. Level the baseframes using the 5/8" leveling bolts provided at each of the four (4) corners.

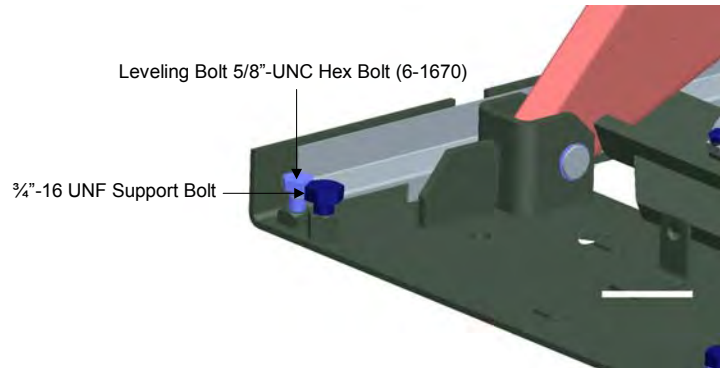

3. Use shims provided to support under glide block area, the kicker area of baseframe and under front hinges. See **Figure 7**.

Note: See section 6.0 Installation Instructions for floor requirements.


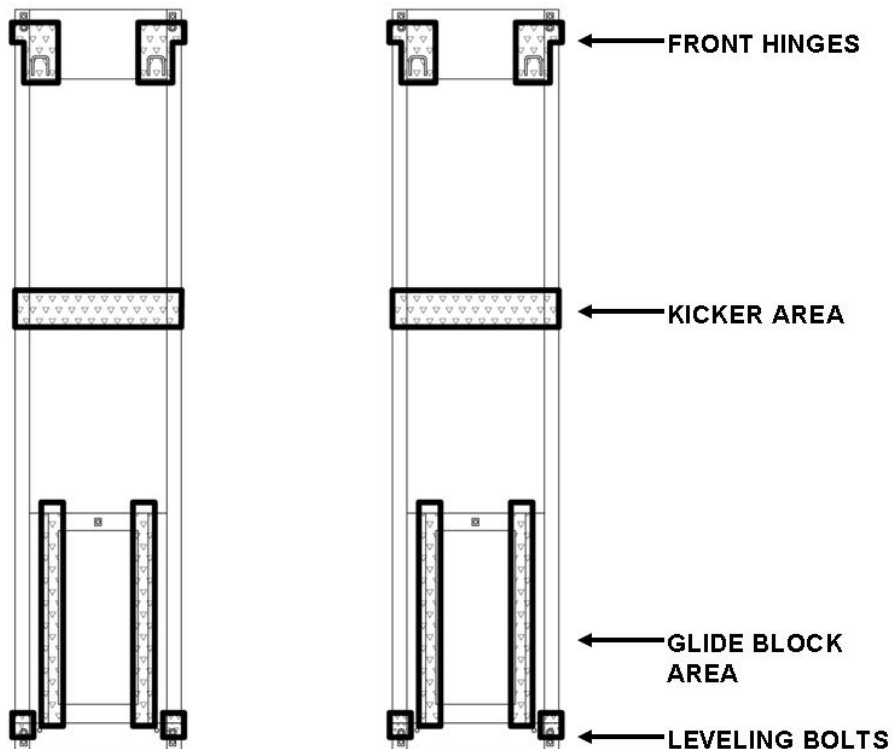


Figure 7 – Shimming


4. Verify that the baseframes are level side-to-side and that the runways are level front-to-back. The front turnplate and rear slip plate are the areas of interest. Check that the spacing between the runways is as desired, and that this spacing is equal at both the front and rear of the lift.

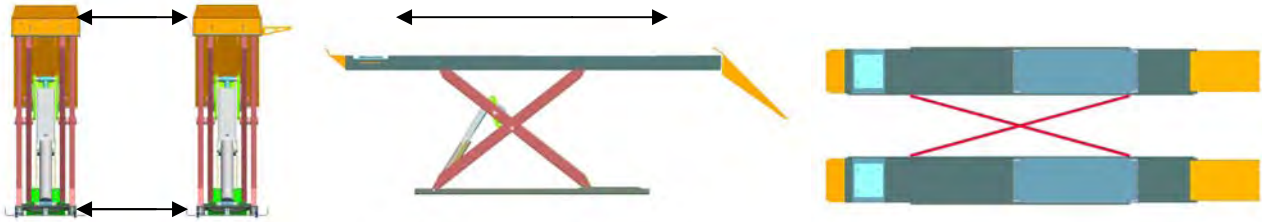

*Check that the diagonal measurements between opposite corners of the baseframes are equal. **Lower and raise the lift and repeat these measurements.**


5. Once lift is level, back off 5/8" leveling bolts so that the base is firmly sitting on the shims. Recheck to make sure the lift is still level and shims are holding properly.

Note: These bolts must be removed once the shims are installed under the base correctly.

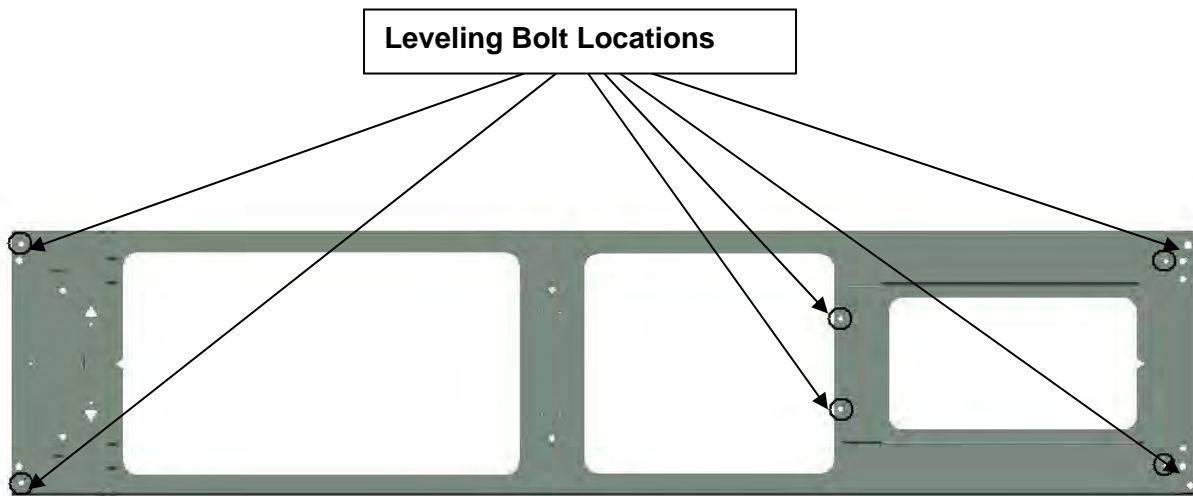

7.10 Anchoring Procedure

1. Lower the lift and measure the distance between the Jackbeam rails at front and rear of the lift.
2. Raise the lift to full height and repeat the measurements, and ensure there are no differences.
3. Using a hammer drill and a 1/2" concrete bit, drill through the floor at each of the six (6) anchor bolt locations on each of the base frames. Make sure that the 1/2" concrete drill bit is in good condition. Refer to **Figure 9** (next page).

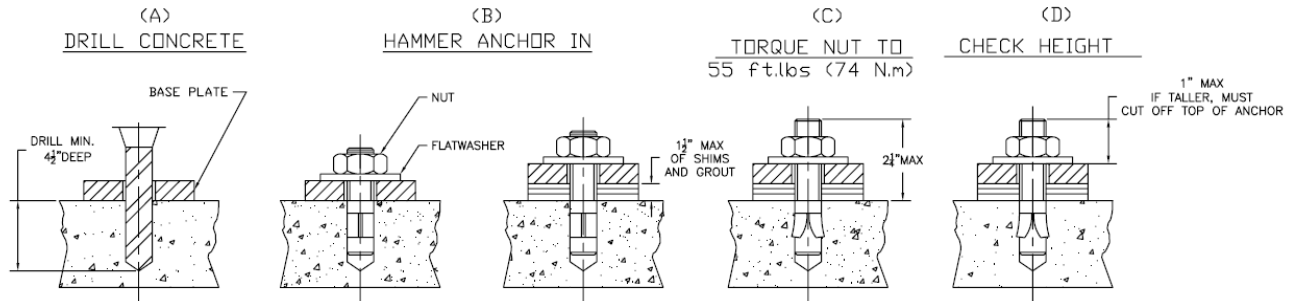


4. Assemble the nuts and washers on the 1/2" x 4 1/2" long wedge anchor bolts supplied ensuring a minimum of six threads are visible below the nut, and hammer in the anchors leaving space for shimming.

NOTE: If more than 1" of the anchor is above ground, the top of the anchor must be trimmed in order for the front cover 22795 to fit.



5. Use shims provided to support around anchor position and hammer anchors until they make contact with the baseplate.
6. Torque all anchor bolts to 40 ft- lbs (54 Nm).

NOTE: The 1/2" x 4 1/2" long wedge anchor bolts supplied must have a maximum of 2 1/4" exposed above the concrete.

NOTE: The wedge anchor must be a minimum of 6 1/8" away from any cracks, edges and joints.

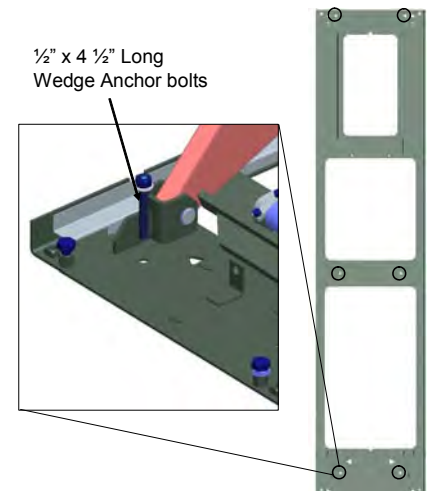

7. Position the console in the final desired location. Refer to **Figure 3**. Using a hammer drill and a 1/4" concrete bit, drill and anchor the console to the floor using the **Nail in Anchors** located in the hardware kit.
8. Check that the 3/4" support bolts on the four (4) corners of the baseframes are adjusted to ensure that the runway is level at fully collapsed position. (9 inches).

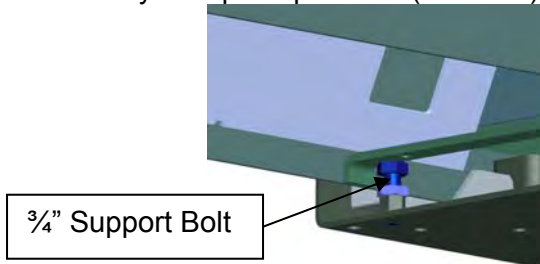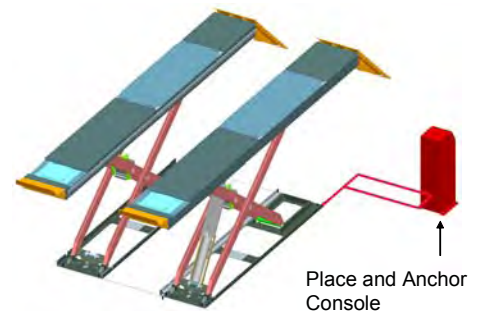

9. Clean kicker area and grease kicker using multipurpose, extreme pressure grease such as Megaplex XD5, NLGI Grade 2 or equivalent. Refer to **Maintenance Section 10.1** for procedure.

7.11 Grouting Procedure (Optional)

1. Pour grouting under the load area of each base frame as shown in **Figure 9**. Ensure that grout is evenly distributed under the frame and finish the edges with a 45 degree chamfer. Refer to specific grouting instructions on the package. Leave a drain area to allow any liquids to escape.
2. **GROUTING MUST FULLY CURE BEFORE PROCEEDING.** Do not operate the lift while grout is curing. Refer to instructions on the package for recommended cure times. [Non-Shrink Grout (3000psi min. in 24hrs, 7000psi min. in 30 days)]


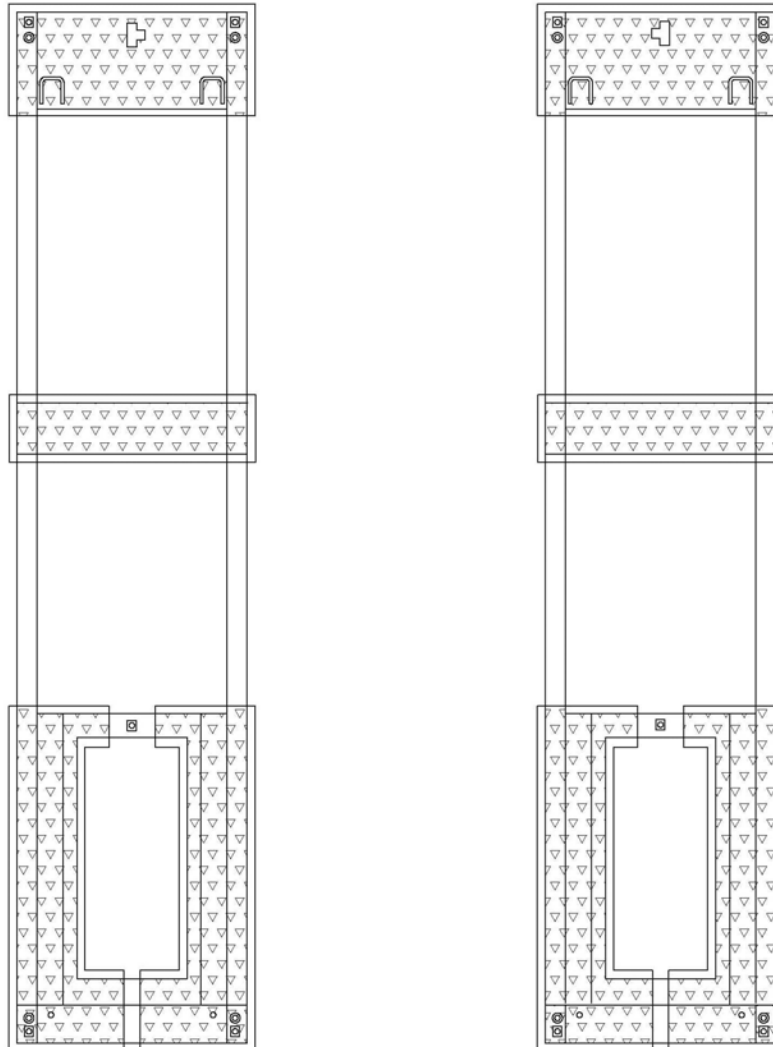


Figure 9 - Grouting Locations


8.0 ACCESSORY INSTALLATION

1. Install the front runway stops located in the accessory box using the ½” hex bolts, washers, lock washers, and hex nuts located in the hardware kit.

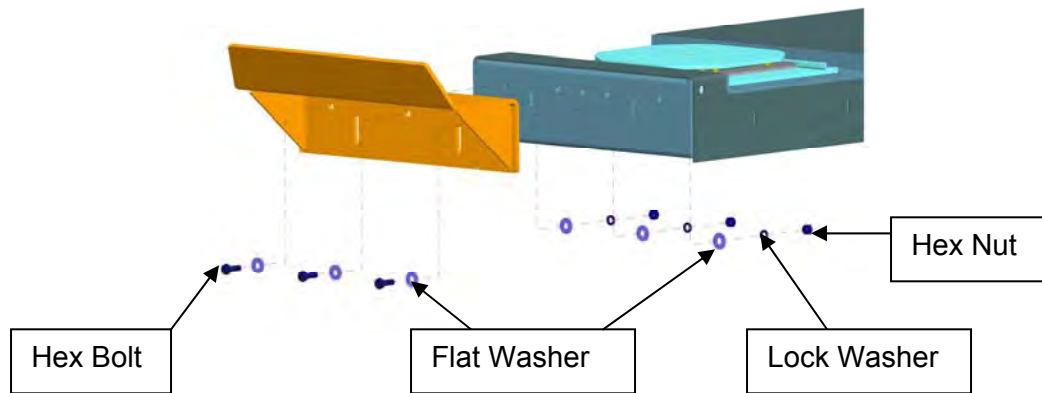


The runway stops are designed as a secondary means to restrain a vehicle from inadvertently rolling off the runways. Property damage and physical injuries may occur if this warning is not adhered to.

2. Install the mounting bracket and then the rear approach ramps using the Approach Ramp Pins located in the accessory box, and the hex head bolts, flat washers, lock washers, hex nuts and cotter pins located in the hardware kit.

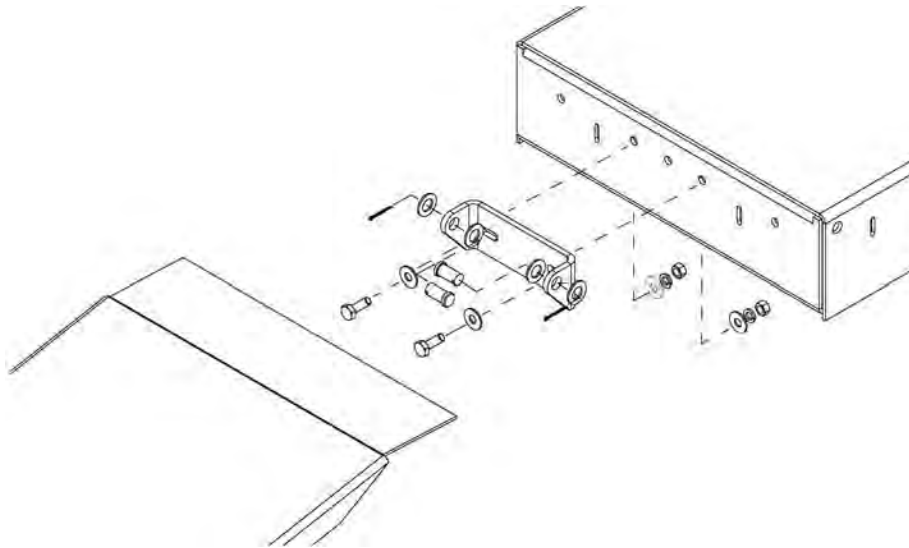

3. Install Jackbeams with reference to the Jackbeam user manual.

4. Position the moveable workstep in the desired location. There are slots along the span of each runway where the workstep can be mounted. When not in use, the workstep can be stored under the front section of the runway.

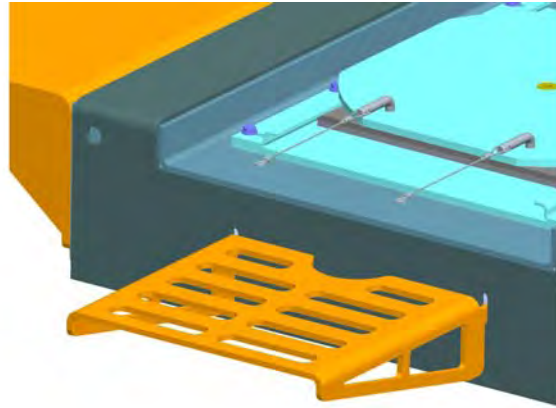

WARNING!! ENSURE THE WORKSTEP IS FULLY ENGAGED PRIOR TO USE. IF MORE THAN ONE WORKSTEP IS IN USE, DO NOT TRY TO STEP ACROSS OR JUMP FROM ONE STEP TO ANOTHER. NEVER USE THE WORKSTEP WHILE THE LIFT IS IN OPERATION. SERIOUS INJURY COULD RESULT FROM IMPROPER USAGE OF THE WORKSTEPS.



WARNING! WORKSTEP MAXIMUM CAPACITY IS 250 LBS.

WARNING! FOR FLUSHMOUNT INSTALLATIONS ENSURE WORKSTEP IS REMOVED BEFORE RAISING OR LOWERING THE LIFT.


8.1 Line Cover Installation

1. Install line covers once console is installed and hydraulic lines are routed.
2. Position line cover "C" behind the right baseframe as shown.
3. Cut 11-3/8" off length of line cover "B" and position it behind the left baseframe as shown. Do not discard the cut piece as it will be used in step 4.

Note: It is important to create square cuts. The use of a sliding miter saw or a simple miter box is recommended.

4. Position the line covers "A" between line cover "C" & "B" and mark where they overlap. Cut each to fit.
5. Using the remaining piece of Line cover "B" from step 2, place as shown below.
6. Position line covers "D" to the console. Cut if required.
7. The number along each side of the line covers represents the quantity of fasteners required to secure them in place. Using a 1/4" concrete drill bit, drill holes as required and install the supplied 1/4" x 1" long nail in anchors (6-0141).

Note: Tapcon or equivalent concrete screws can be used as an option for future removal.

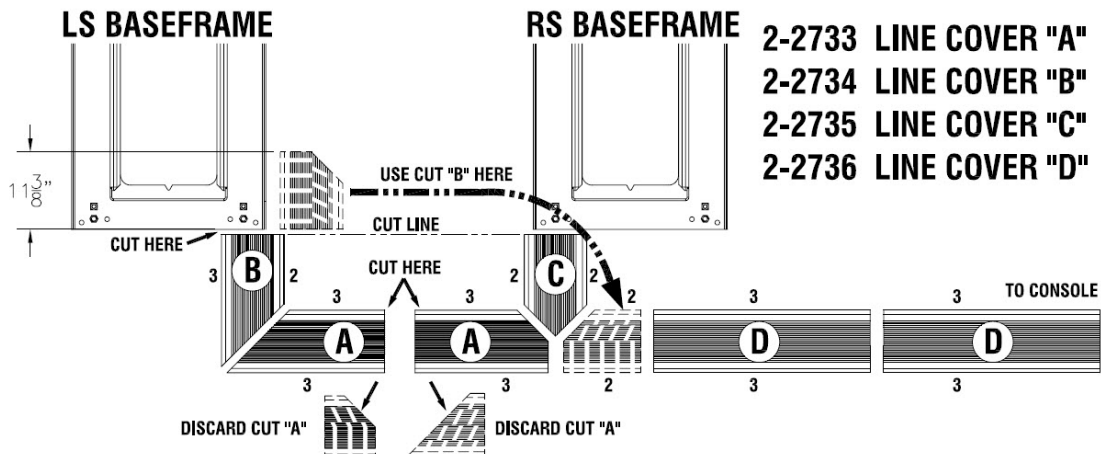

Optional: To locate the consoles on left side of lift, the setup is mirrored with the following changes to the above installation steps:

- Step 3 – use line cover A instead of B.
- Step 4 – use (2) of line cover B.
- Step 5 – use remainder of line cover A from step 3.

Note: If baseframe is shimmed to a point where the line cover does not sit flush due to interference with hoses, the line cover can be heated with a heat gun and then placed over the hoses for a cleaner look.



9.0 LOCKING FRONT TURNPLATES & REAR SLIP PLATES (OPTIONAL)

9.1 Installation of Front Turnplates





Avoid inserting fingers in the front alignment pan cut-out, if position of the turnplate assembly exposes such openings.




Ensure that air supply to the lift is turned off and no person is operating on the console during maintenance of clamping elements of the locking system.



During normal use, the front turnplates and rear slip plates may move rapidly, when locking system is activated. This creates pinch points for your fingers or hands. Keep hands clear of these pinch points when lift air supply is connected. No person shall operate console while maintenance or inspection of the slip plates is in process.

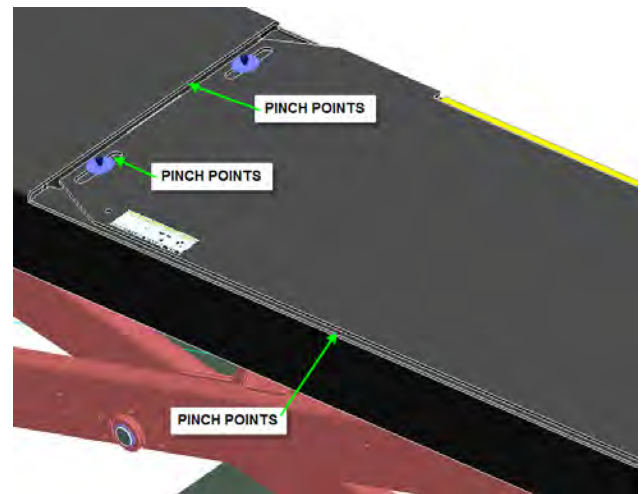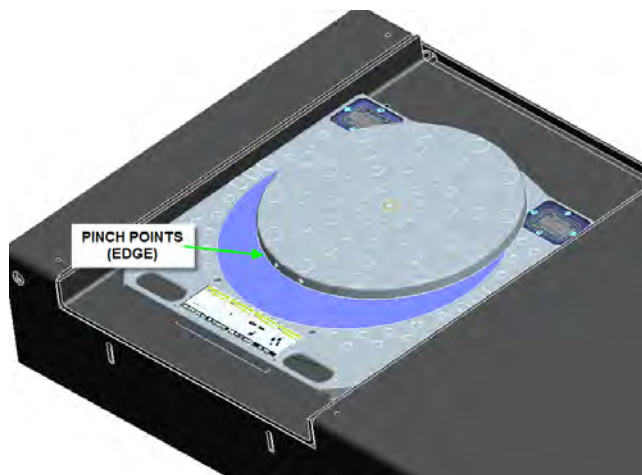


1. Lower lift to a comfort height.
2. Place each front turnplate assembly, one by one, on the front alignment pan on runway. Moving handles of the turn tables should be oriented to the outside of lift [Fig.1].

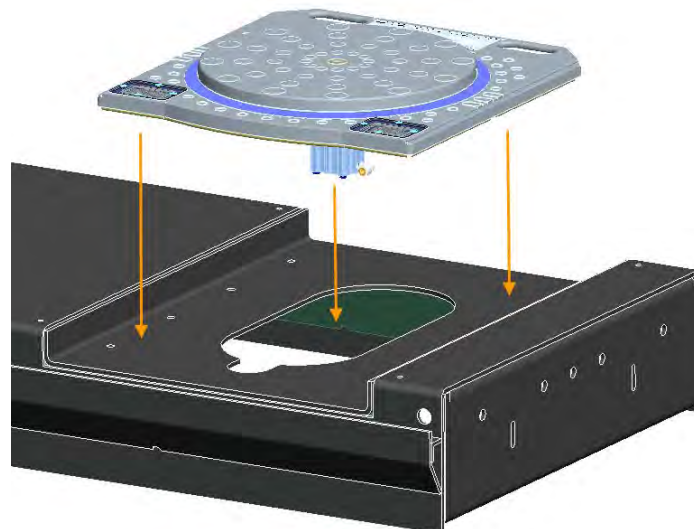

Ensure that the locking system components on the bottom of the turnplate (air cylinder, fittings, and plastic clamping parts) are not hit against the runway during placement.

3. Verify that the turnplate assembly is completely seated in the front alignment pan. Gently slide each turnplate in the alignment pan, left and right, to verify that they can be positioned for different car widths. Do not hit plastic locking ring [Fig.2] forcefully against the edges of the cut-out in the front alignment pan.
4. Connect free ends of front air lines to the turnplate locking cylinder: blue air line to the cylinder port marked with a blue dot and red air line to the cylinder port marked with a red dot [Fig.2].
5. Plug the blue ends of the electrical connector on the turnplate light cord into the electrical connector on the cable at the front [Fig.2].

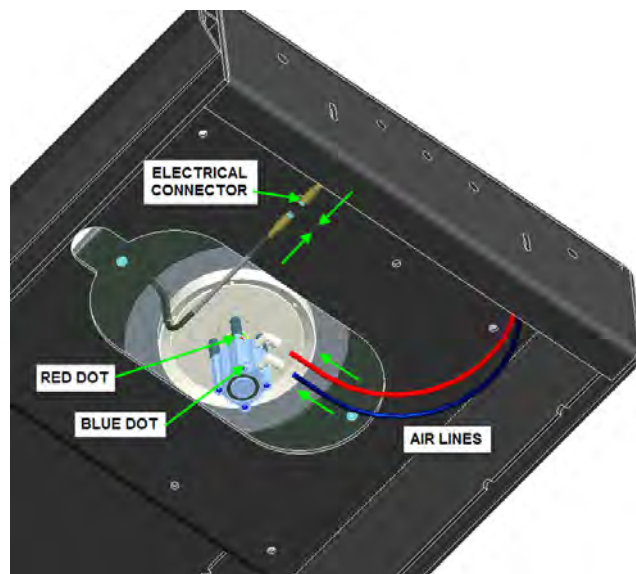


*Note: Objects in pictures may not be exactly as shown.

9.2 Console Connections for Locking & Lights

Locking & Light System

1. Connect the (2) red & blue polytubes from lift to corresponding “y” fitting in the console (see Detail C).
2. Connect the 4mm polytube labeled “Return” to pushlock fitting on the LED driver box. Connect the other 4mm polytube labeled “Supply” to the pushlock “Tee” w/ reducer (see Detail “A”)
3. Connect the red & blue electrical connectors from lift to corresponding red & blue electrical connectors from the LED driver box (see Detail B).

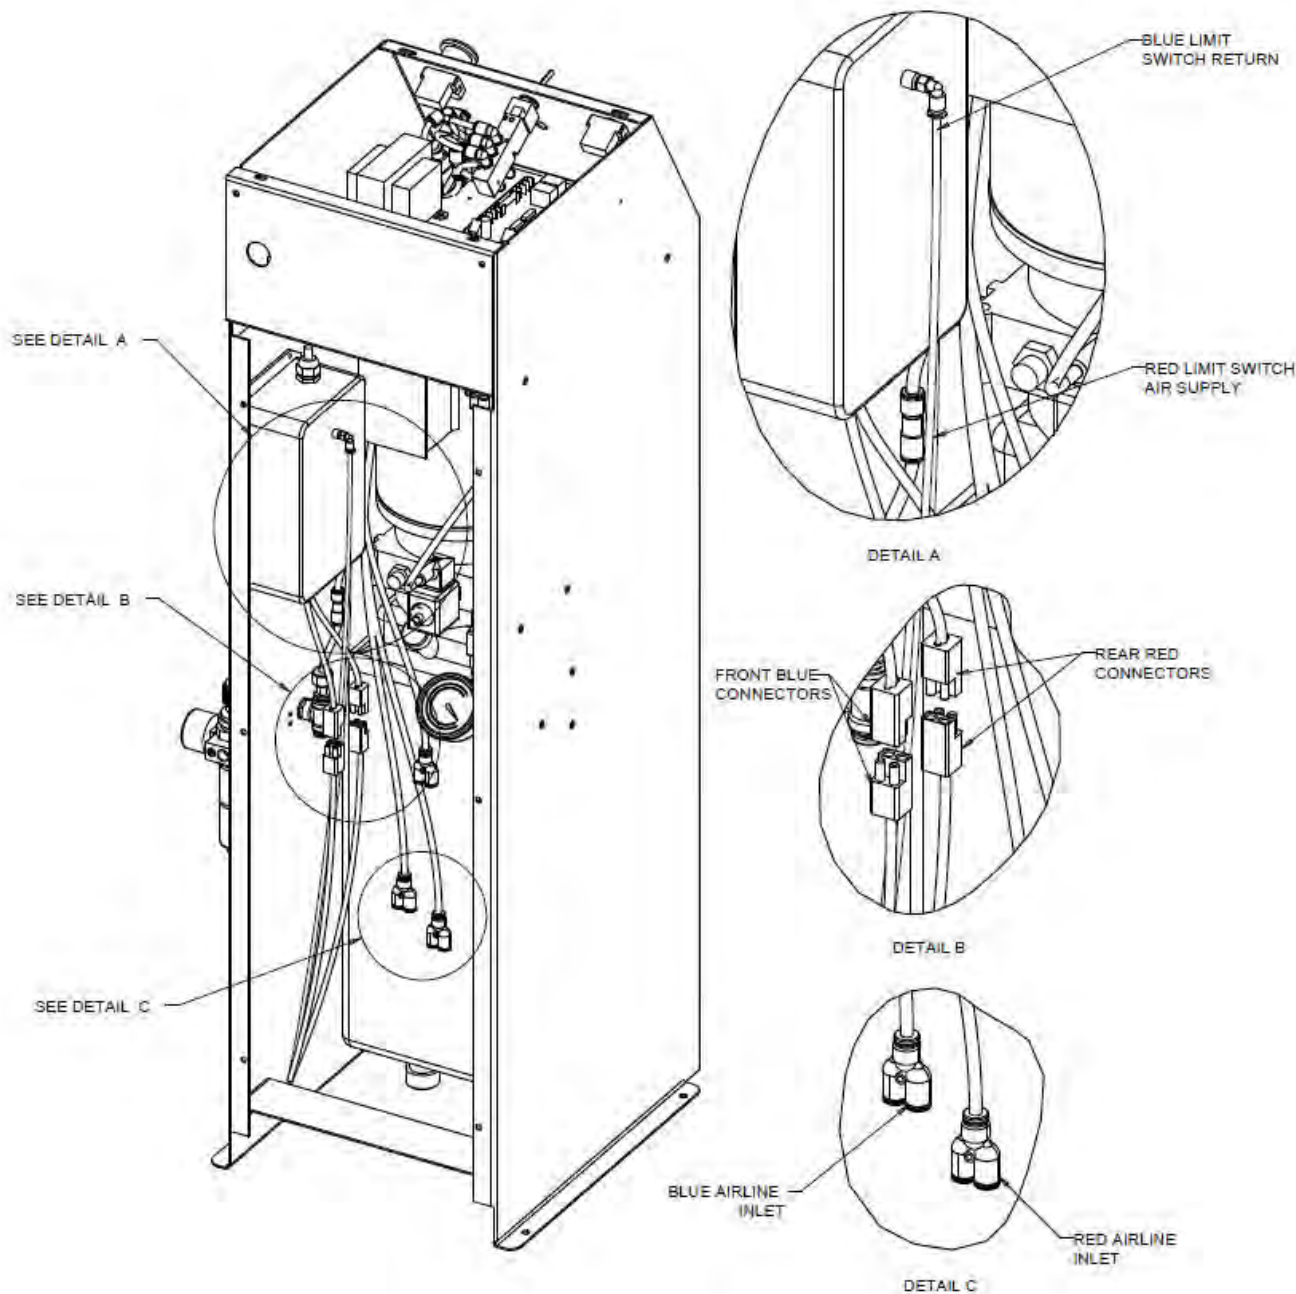

1. Once all connections are made, test system as follows:

- a. **Light System – Lift must be fully collapsed.** Start raising lift, at approximately 30” from the ground, the lights will illuminate. If not, please check that the 4mm polytube connections are correct as they may be reversed.
- b. **Locking System –** On front of console, switch the Slip Plate lever to “Unlock”. All locking plates should be free to move, please verify. Now switch the lever to “Lock”, all locking plates should be centered and locked, please verify. If not, check that all polytube connections are correct and there is 90-120 psi of air pressure.

10.0 FINAL PROCEDURES

10.1 Check of Assembled Lift

1. Final dimension check after anchoring. _____
2. Check for air and hydraulic leaks. _____
3. Re-check level of decks, front to rear, side to side. _____
4. Check all fasteners, tighten if necessary. _____
5. Check torque of anchor bolts (Sect. 7.10) _____
6. Operate lift to full stroke then lower to ground while checking
for proper functionality. Ensure Safety Release is operational. _____
7. Ensure Customer Care Kit is complete and given to operator. _____
 - a. Operation Manual _____
 - b. ANSI / ALI Lift It Right Manual _____
 - c. ANSI / ALI Safety Tip Card _____
 - d. ANSI / ALI ALIS Safety Requirements for Installation
and Service of Automotive Lifts _____
 - e. ANSI / ALI Quick Reference Guide _____
8. Ensure Oil has been added to the Filter / Regulator / Lubricator (Sect. 7.6) _____
9. Train end user on operation of lift. _____

10.2 Operation Test with Vehicle

1. Lower lift to the ground. (Make sure Green Light is OFF) _____
2. Drive vehicle on to lift. _____
3. Raise the lift, and lower onto 3-4 different locking positions until the
full lifting height is reached. Check that all locks are working correctly. _____
4. Check lowering speed and smooth decent rate. _____
5. Lower lift to the ground and drive vehicle off lift. _____

If any problems occur during the final checkout or operation of the lift please contact customer service at 1-800-225-5786

11.0 LIFT OPERATION

11.1 Raising the Lift

1. If the lift is equipped with sliding Jack Beam(s), be sure that the Beam(s) are positioned at the front or mid travel of the lift, fully down, and with the risers removed and stored. Never store Jack Beams at the rear of the lift.
2. Ensure that the lift is fully lowered before attempting to load or unload a vehicle.
3. Ensure that locking pins are in the front turnplates and rear slip plates before driving a vehicle onto the lift.
4. Position the vehicle on the lift ensuring the resulting load on the deck is distributed as evenly as possible. Under no circumstances should a vehicle be lifted if the weight distribution is unbalanced by more than 10% on either side.

NOTE: THE VEHICLE IS POSITIONED CORRECTLY WHEN THE DISTANCE FROM THE CENTER OF THE TIRES TO THE INSIDE EDGE OF THE RUNWAYS IS EQUAL ON BOTH RUNWAYS, FOR BOTH THE FRONT AND REAR TIRES.

5. Chock the vehicle using the wheel chocks provided.
6. Check that there are no obstructions above the lift that could damage the lift or vehicles.
7. Raise the lift by pressing the up button on the control console. Raise the lift until the green light is illuminated. (The lift can only be lowered if the green light is on).
8. Lower the lift onto a mechanical safety lock by pressing the down button. **Continue to hold the DOWN button until the green light goes off. (Approx. 3-10 seconds)**
9. Do not raise or lower the lift with the vehicle on the Jack Beam.



WARNING! NEVER WORK UNDER A VEHICLE OR THE LIFT UNLESS IT IS POSITIONED ON BOTH MECHANICAL SAFETIES!

11.2 Lowering the Lift

NOTE: The lift can only be lowered if the green light is on. If the light is not on, raise the lift until the light turns on. If the lift is at its maximum lifting height, a change in tone may be noticed while raising the lift (This change is the pump working at max relief pressure). Only press the up button until the green light comes on.

1. Lower the vehicle from the Jack beams and remove lift pads and store. If removing the vehicle from the lift, slide Jack Beams to their appropriate position, at the front or mid section of the lift. Check that there are no other obstructions under the lift or vehicle.
2. Raise the lift by pressing the up button until both runways are clear of their mechanical safety locks.
3. Press the air safety release button to release the mechanical safeties.
4. While holding the air safety release button, press the down button and lower the lift to the completely collapsed position.
Continue to hold the DOWN button until the green light goes off.
5. Remove wheel chocks and ensure that locking pins are in the front turnplates and rear slip plates before driving a vehicle off the lift.
6. Be certain that the lift is completely lowered before removing the vehicle from the lift.
7. Do not raise or lower the lift with the vehicle on the Jack Beam.



ATTENTION! THE OPERATOR MUST ALWAYS KEEP THEIR ATTENTION ON THE OPERATION OF THE LIFT WHILE RAISING OR LOWERING. IF AN OBSTRUCTION IS SEEN, RELEASE BOTH THE AIR SAFETY RELEASE BUTTON AND THE DOWN BUTTON TO STOP THE LIFT.

12.0 RECOMMENDED MAINTENANCE


The following maintenance schedule is recommended for ensuring the operation of the lift. A record of maintenance performed should be maintained and any items that resulted in additional service should be noted.

Schedule	Maintenance Required
Daily	Check that the upper and lower glide tracks are clean and free of debris. This area should be checked before raising or lowering the lift.
	Inspect the operation of the lift by raising and lowering the lift fully.
	Check for the proper engagement and release of mechanical safety locks. If bolts are removed for maintenance re-apply LOCTITE #242 before re-assembly
	Check hydraulic lines for leaks and fraying. Frayed hoses must be replaced immediately.
Weekly	Check the fluid level in the reservoir with the lift fully lowered. Top up reservoir with ISO 32 (10 weight) hydraulic oil as needed.
	Check Oil Level in Air Line Lubricator and refill if required (See 11.2)
Monthly	Check anchor bolts for tightness. Torque to 40 ft-lbs if needed.
	Inspect the electrical and mechanical operation of all switches.
	Clean kicker plate and re-grease. See Section 11.1 for procedure and grease requirements. (See Figure 7 for kicker area).
	Inspect runway stop fasteners monthly.
Yearly	Fitting assembly on Flow Divider to be removed and cleaned. See Section 7.8, step 7 for procedure.
5 Year	Change the hydraulic fluid every five years. Use only ISO 32 (10 weight) hydraulic oil.

NOTE: FAILURE TO FOLLOW RECOMMENDATION MAY AFFECT WARRANTY OF LIFT

12.1 Kicker Greasing Procedure

1. Clean both the kicker and the kicker area on the baseframe.
2. Grease kicker using multipurpose, extreme pressure grease such as Megaplex XD5, NLGI Grade 2 or equivalent.
3. Locations to be cleaned and greased are as shown below:

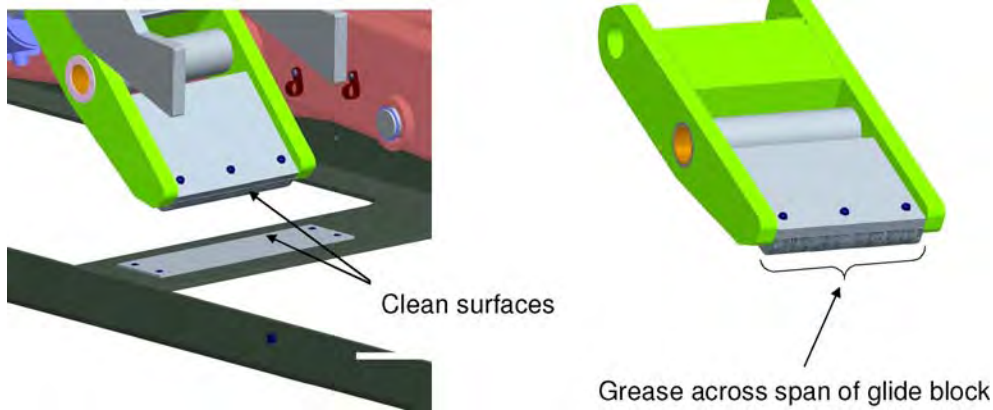

12.2 Checking Oil Level for Air Lubricator


The Air Lubricator is located on the outside of the console to allow for easy monitoring of the oil level. If oil level is low, refill the lubricator bowl using one of the following methods:

Method 1 – Can be done under pressure.

1. Unscrew the lubrication plug assembly
2. Refill the bowl using Snap-On Air Oil #IM6 or equivalent
3. Screw in the lubrication plug assembly
4. Check the number of oil drops again. This does not usually need to be adjusted

Method 2 – Cannot be done under pressure


1. Release inlet pressure from system
2. Unscrew lubricator bowl
3. Fill the lubricator bowl using Snap-On Air Oil #IM-6
4. Screw in lubricator bowl
5. Slowly pressurize system
6. Check the number of oil drops again. This does not usually need to be adjusted

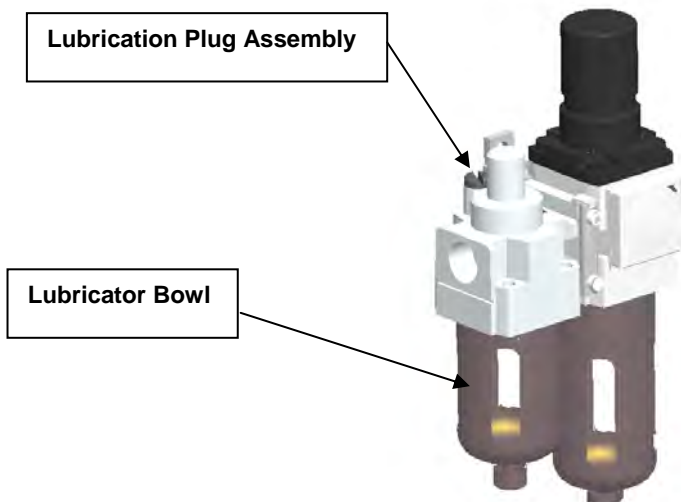


NOTE: Failure to maintain oil level in lubricator will void warranty on all pneumatic components.

12.3 Maintenance of Turnplate & Slip Plate Locking System (Opt.)

1. Observe locking mechanisms with every lift rise for air line connection integrity. Also ensure that no foreign objects were trapped in the clamping components.
2. Once a week inspect the mating conical surfaces of the front turnplate locking mechanism [Fig.3]. If necessary, blow with compressed air or wipe with a clean cloth any road dust, salt or other contaminants, including liquids. Greasing of these surfaces is not required and not recommended.

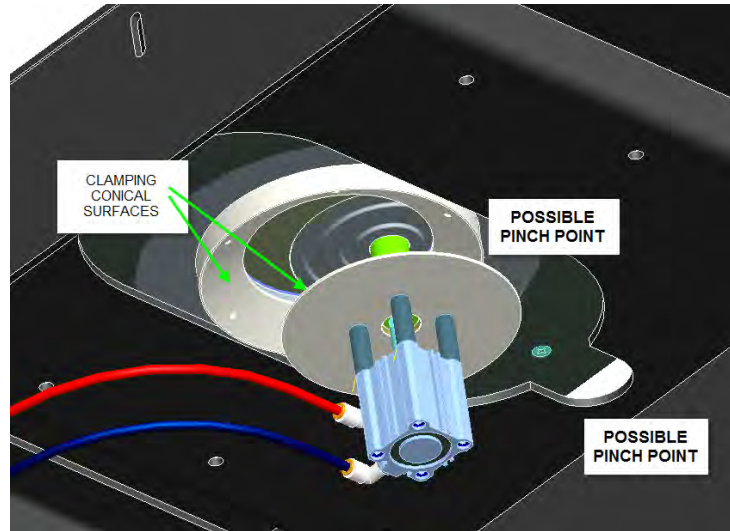


3. After extended use, it may be required that some components of the front turnplate will need replacement, due to normal wear. Please ensure to re-apply *Loctite* where needed, as detailed in the exploded view of the front turnplate [Fig.4].
4. Once a week inspect locking mechanisms of the rear slip plates. Ensure that clamping jaws are securely attached to cylinder clevises and to pivot pins, and that mounting hardware and air fittings are properly fastened.
5. If replacement of rear clamping components becomes necessary after extended use, re-apply *Loctite* to the threads of the rear cylinder shoulder bolts. Exploded view of one set of the 4 rear clamps on the lift is shown in Section 17.2.

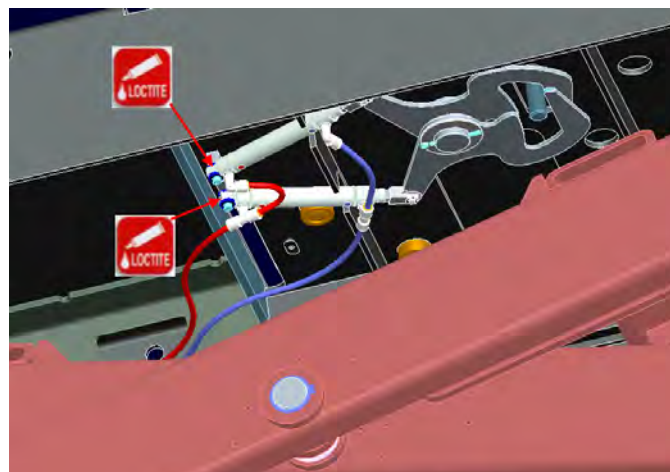


** Re-apply *Loctite* to bolt threads if removing bolts. Tighten shoulder bolts completely in their sockets

12.4 Adjustment of Safety Locks


1. Loosen all the bolts with an 9/16" open wrench

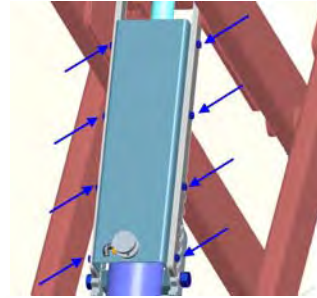


2. Raise lift the lift to its highest position

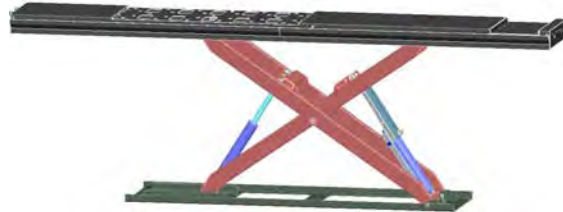

3. Center the top safety rack in between the bottom safety rack.

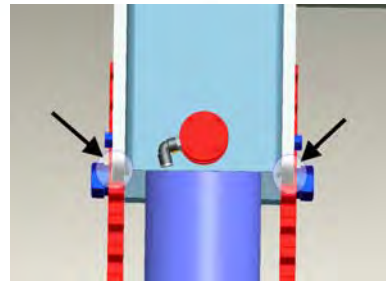

4. Tighten each bolt in sequence as shown in the figure below. Check the alignment after tightening each bolt.

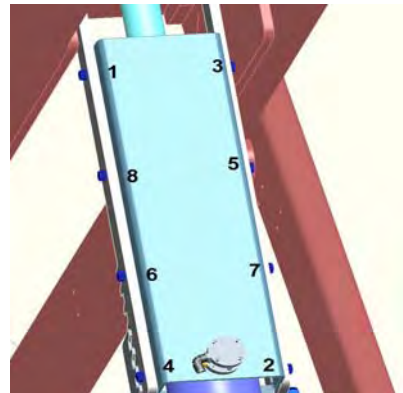

6. Raise the lift and then lower it down, and visually inspect to make sure the adjustment is even. If the adjustment is not even, follow each step again until safety locks touch evenly.

12.5 Lock Out and Tag Out Instructions

IMPORTANT: This machine does not have integral devices that will isolate the electrical, pneumatic, stored and hydraulic energy source. Appropriate isolation or blocking devices must be used that have the provisions to be switched in the off position and locked in that position.

ALL MAINTANANCE AND SERVICE MUST BE PERFORMED BY A QUALIFIED PERSON.

ALL MAINTANANCE AND SERVICE MUST BE PERFORMED WITH THE LIFT UNLOADED.

IT IS THE SHOP OWNERS RESPONSIBILITY TO ENSURE ENERGY ISOLATING DEVICES ARE:


- **Accessible**
- **Conveniently located to facilitate the application of lockout devices during service and maintenance**
- **Located outside any hazardous area.**
- **At a convenient manipulating height (i.e. not overhead, on ladders or under machinery)**
- **Adequately labeled or marked. Identification shall include machine ID, energy type and magnitude.**
- **Capable of being locked or otherwise secured in an effective isolating position.**

Effective hazardous energy control procedures will protect employees during machine and equipment servicing and maintenance where the unexpected energization, start up or release of stored energy could occur and cause injury, as well as while working on or near exposed de-energized electrical conductors and parts of electrical equipment. Hazards being guard against include being caught in, being crushed by, being struck by, being thrown from, or contacting live electrical circuits/parts.

In preparation for lockout, an initial survey must be made to locate and identify all energy isolating devices to be certain which switch, valve, or other energy isolating devices apply to the machine / equipment to be locked out. More than one energy source (electrical, hydraulic, pneumatic, or others) may be involved.

- SHUT DOWN PROCEDURE:

- Notify all affected employees that a lockout or tagout system is going to be utilized and the reason for. The authorized employee shall know the type and magnitude of energy that the lift utilizes and shall understand the associated hazards.
- **ELECTRICAL:** Located at the user control panel, press the "E-STOP" button to disconnect the raise and lower functions.

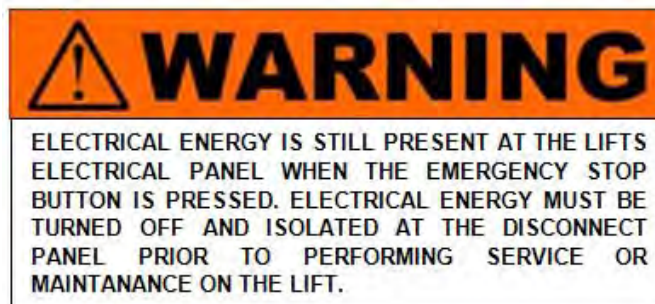

12.6 Isolation and Verification Procedure:

Table 1: ISOLATION AND VERIFICATION PROCEDURES:

ENERGY TYPE AND SOURCE	LOCKOUT LOCATION (TO BE COMPLETED BY END USER)	PROCEDURE FOR LOCING OUT AND OR RELEASING ENERGIES	VERIFY PROCEDURES
<p>STORED ENERGY</p> <p>AND</p> <p>HYDRAULIC PRESSURE 3000-5000 PSI</p>		<p>LOWER THE LIFT TO ITS LOWEST REST POSTION. IF THE LIFT MUST BE SERVICED OR MAINTAINED IN THE RAISED POSITION, ENSURE THAT THE LIFT IS PLACED ON THE MECHANICAL LOCKS AND SUPPORTED BY SUPPLEMENTARY JACK STANDS, BLOCKED AT THE SLIDERS AND A COME ALONG SECURED BETWEEN THE SCISSORS.</p>	<p>VERIFY THAT THE LIFT IS CONTACTING THE SUPPLEMENTARY JACK STANDS, THE BLOCKS ARE SECURLY PLACED AND THE COME ALONG IS SECURED BETWEEN THE SCISSORS.</p> <p>PRESS THE DOWN BUTTON ON THE CONSOLE AND VERIFY THAT THE LIFT DOES NOT LOWER. VERIFY HYDRAULIC PRESSURE HAS BEEN REMOVED BY SLOWLY OPENING THE MAIN HYDRAULIC FITTING AT THE POWER UNIT ONLY. IF FLUID IS PRESENT UNDER PRESSURE, IMMEDIATLY TIGHTEN AND REPEAT LOWER PROCESS. ENSURE THAT BOTH STRUCTURES ARE SECURELY PLACED ON THE STANDS AND BLOCKED.</p>
<p>ELECTRICAL 240VOLTS</p>		<p>AT THE LIFT, PRESS THE EMERGENCY STOP BUTTON COMPLETELY TO DE-ENERGIZE THE CONTROL BUTTONS.</p> <p>AT THE DISCONNECT PLANEL, PLACE THE DISCONNECT HANDLE IN OFF POSITION. ATTACH A MULTIPLE LOCKOUT DEVICE. LOCK AND TAG.</p> <p><u>DANGER: LINE SIDE OF DISCONNECT REMAINS ENERGIZED</u></p>	<p>ATEMPT TO RESTART THE SYSTEM, THE SYSTEM MUST NOT START. VISUALLY VERIFY OPEN DISCONNECTS AND LOCKING DEVICE INSTALLED.</p>
<p>PNEUMATIC UPTO 160PSI</p>		<p>SLOWLY CLOSE LOCKOUT VALVE TO RELEASE AIR PRESSURE GRADUALLY. ATTACH MULTIPLE LOCKOUT DEVICE, LOCK AND TAG.</p> <p><u>DANGER: LINE SIDE OF DISCONNECT REMAINS PRESSURIZED</u></p>	<p>VERIFY THE VALVE IS CLOSED AND LOCKOUT DEVICE IS PROPERLY ATTACHED. OPERATE THE PNEUMATIC SYSTEM TO ENSURE THE SYSTEM IS DE-ENERGIZED. IT MAY BE NECESSARY TO BLEED THE SYSTEM OF REMAINING COMPRESSED AIR, THIS CAN BE PERFORMED AT THE BASE OF THE WATER SEPARATOR BOWL.</p>

- RETURNING TO SERVICE:

- Check the lift and the immediate area around the lift to ensure that nonessential items,, tools and parts are removed and that the lift components are operationally intact.
- Check the work area to ensure that all employees have been safely positioned or removed from the work area.
- Notify all employees that the lockout/tagout is going to be removed and the lift is going to restarted.
- Remove the lockout/tagouts in the reverse order as the installation.
- Verify the proper operation of the equipment.
- Notify affected employees that the maintenance/service is completed and the machine is ready for operation.

12.7 Emergency Operation

If the lift becomes inoperative in the raised position, it is best to wait until the electrical power is restored before lowering the vehicle. However, if it's critical to safety that the lift be lowered, the following steps should be taken.



WARNING: DO NOT LOOSEN OR REMOVE HYDRAULIC CONNECTIONS OR FITTINGS UNDER PRESSURE. SERIOUS INJURY OR DEATH COULD OCCUR.

NOTE: Safely performing this process requires 3 people. All personnel should stay clear of the path of the lift. All tools and other non-secured items should be removed from the surface of the ruways.

- 1) Survey the area surrounding the lift; remove any items and personnel from area before proceeding with this procedure.
- 2) Perform the appropriate lockout/tag out procedure on the electrical energy.
- 3) Add additional chocks to the vehicle to secure it from movement in the forward and rear direction.
- 4) Use a second person standing at a safe distance away from the lift to keep watch on the area, lift, vehicle and other personnel throughout the process. This person should signal the person performing the procedure to stop if necessary.
- 5) Use a caution tape or similar to barrier the area around the lift to avoid personnel from accidentally entering the area while this process is being performed.
- 6) Do not proceed with this procedure if you are unfamiliar with the lift or its function.

IF THE MECHANICAL LOCKS ARE NOT ENGAGED:

- 1) **If there is air pressure in the pneumatic system;** have another person press and hold the mechanical safety release button to disengage the mechanical locks. Confirm that both mechanical locks have been disengaged and will allow the lift to lower.
If there is no air pressure in the pneumatic system; use a rag to raise the upper mechanical locks to sufficiently clear the lower locks on both sides.
- 2) Remove the 6 screws retaining the rear cover of the control console.
- 3) Locate the flow divider and remove the red caps on the two outer descent valves.

- 4) Slowly turn each manual override thumbscrew in the counterclockwise direction. The lift should not come down at this point.
- 5) Locate the descent valve on the hydraulic power unit, see Figure 30.

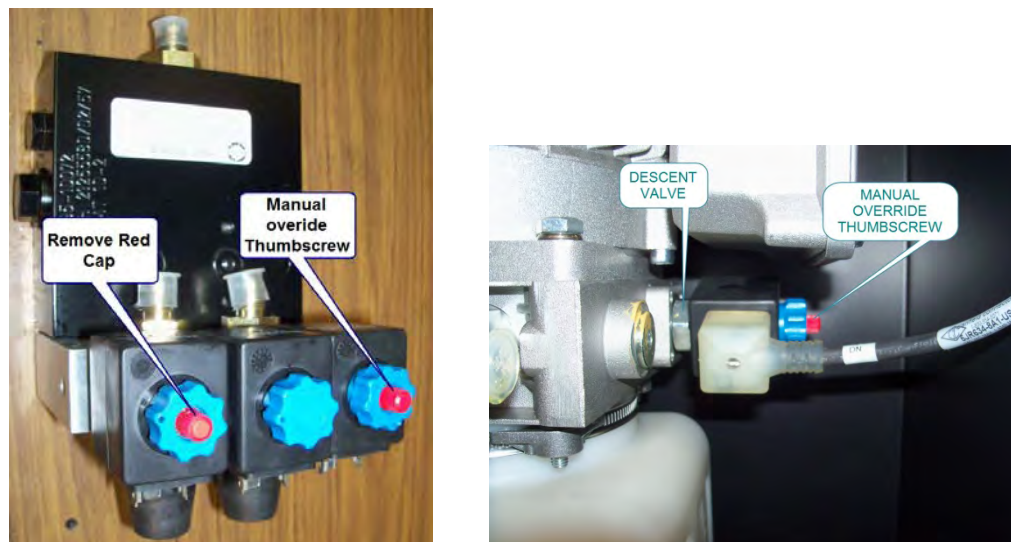


Figure 30 – Image of descent valves

- 6) Locate the manual override thumbscrew (red) on the top of the descent valve, see Figure 30.
- 7) Verbally indicate to all those involved that the lift will now be lowered.
- 8) Slowly turn the manual override thumbscrew in the counterclockwise direction until the lift starts to move.
- 9) Keep a close eye on the movement of the lift and the position of the vehicle; turn the manual override thumbscrew clockwise if any abnormal movement is detected.
- 10) Once the lift is fully lowered, turn the override thumbscrew in the clockwise direction until tight.
- 11) If a rag was used to bypass the mechanical locks, ensure that the rag is removed after the lift has been put back into operation.
- 12) Once power is restored follow the lockout/tag out procedure to return the lift back into service.

IF THE MECHANICAL LOCKS ARE ENGAGED:

Various methods can be used to raise the lift in order to get sufficient clearance to disengage the mechanical locks. The safest method would employ temporary electrical power to the lift using a portable power generator. Any electrical connections should be done by a licensed electrician; lock out/tag out procedures should also be employed at this time.

This process should only be performed by a trained professional. Contact customer service or a local service professional for further assistance.

12.8 Maintenance Schedule


Records of all lift maintenance and operator training should be recorded in the following table.

Maintenance and Training Performed	Date	By	Notes

13.0 TROUBLE SHOOTING

PROBLEM	REASON	SOLUTION
Motor does no turn.	Bad fuse or circuit breaker.	Re place fuse or reset breaker.
	Incorrect voltage to motor.	Provide proper voltage to motor.
	Incorrect wiring.	Have certified electrician check
	Motor switch is malfunctioning	Replace motor switch.
	Motor burned out	Re place motor.
Motor runs but lift doesn't go up .	L ow oil level	Fill reservoir with proper hydraulic oil.
	Wrong rotation	Check for oil flow & reverse electrical leads
Lift doesn't come down.	Dirt in hydraulic lines	*Secure vehicle on lift, and clean hydraulic lines.
	Check power to hydraulic lines	
	No power to solenoids	Check power to solenoids
Safety doesn't disengage .	Lift not raised high enough for disengagement	Press Up button for longer period of time .
	Air not supplied to air cylinder	Check if supply line has air.
	Air cylinder malfunctioning	Replace air cylinder.
Lift goes up un-level.	Flow-divider defective	Reverse hydraulic connections
	Blockage in hydraulic hose	Remove & inspect flow through line
Anchor Bolts do not stay tight	Holes are to large.	Relocate lift using proper drill Size.
	Incorrect concrete floor specification. (Thickness and Strength)	Concrete should be replaced by an appropriate concrete pad . (Consult Product Manufacturer / Supplier for further details)
Noise	Squeaking noise during first few inches o f rise	Clean kicker and area. Grease kicker (see Section 11.1 for Greasing Procedure)

14.0 LIFT ASSEMBLY

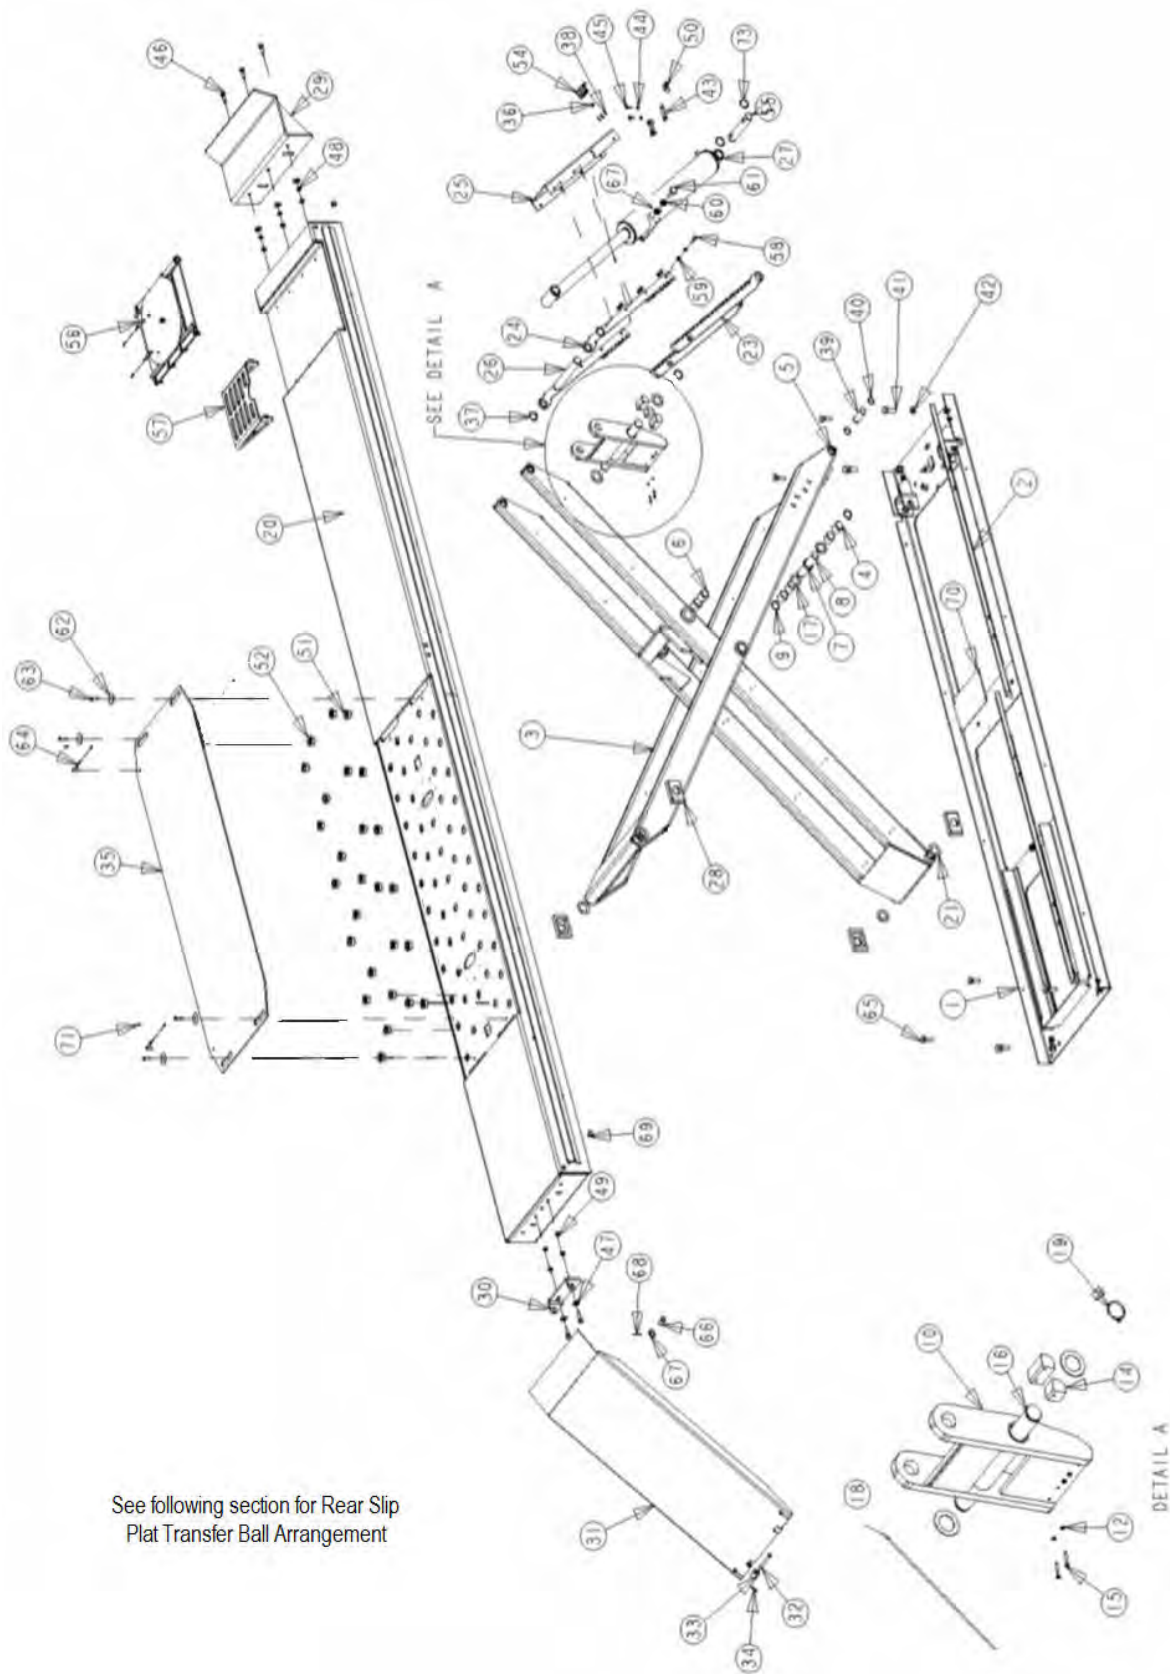

See following section for Rear Slip
Plat Transfer Ball Arrangement

**REPLACE WORN, DAMAGED OR BROKEN PARTS WITH PARTS APPROVED BY THE ORIGINAL
EQUIPMENT MANUFACTURER ONLY**

14.1 Lift Parts List

Note: Quantities list are for one side of lift. Opposite side is symmetrical.

Item#	Part #	Description	Qty.
1	3-1134	BASEFRAME WELDMENT	1
2	2-2301	BASE FRAME COVER (L)	2
3	2-2599	SCISSOR ASSEMBLY	1
4	6-2899	BUSHING, PIVOT, 1-1/2" ID, 24TH24	2
5	6-3087	BUSHING 1-1/4"	2
6	6-3419	1-5/8 SELF-LUBRICATING BUSHING, 26TH24	2
7	1-2795	SCISSOR SPACER	2
8	1-2791	SCISSOR PIN	2
9	6-0233	SNAP RING, #5100-150	4
10	2-2470	KICKER ASSEMBLY	1
12	6-0816	Flat Washer, #10	5
14	1-3223	BEARING BLOCK, INNER	1
15	6-1523	SCREW, #10 X 1-1/2, SELF-TAP	5
16	1-3185	KICKER PIVOT PIN	1
17	1-0757	NYLON THRUST WASHER	4
18	1-3171	THRUST WASHER	8
19	6-3418	SNAP RING, #5100-163	2
20	4-1438	DECK WELDMENT, LH (173")	1
	4-1439	DECK WELDMENT, RH (173")	1
	4-1440	DECK WELDMENT, LH (173") – LOCKING & LIGHTS OPTION	1
	4-1441	DECK WELDMENT, RH (173") – LOCKING & LIGHTS OPTION	1
	4-1434	DECK WELDMENT, LH (155")	1
	4-1435	DECK WELDMENT, RH (155")	1
	4-1436	DECK WELDMENT, LH (155") – LOCKING & LIGHTS OPTION	1
	4-1437	DECK WELDMENT, RH (155") – LOCKING & LIGHTS OPTION	1
21	1-3171	THRUST WASHER	4
23	2-2111	SAFETY BAR BOTTOM (LASER CUT)	2
24	2-2112	SAFETY BAR, TOP (LASER CUT)	2
25	2-3020	SCISSOR SAFETY COVER	1
26	1-3186	KICKER CLEVIS PIN	1
27	4-1171	CYLINDER ASSEMBLY	1
28	2-2725	SLIDER BLOCK	4
29	2-2117	WHEELSTOP WELDMENT	1
30	1-3159	ADAPTOR PLATE	1
31	3-0905	APPROACH RAMP ASSEMBLY (SURFACE MOUNT)	1
	3-0698	APPROACH RAMP ASSEMBLY (FLUSH MOUNT)	1
32	1-1099	CLEVIS PIN	2
33	1-3062	RAMP ROLLER	2
34	6-0267	Cotter Pin, 1/8" Dia. x 1" LG.	2
35	2-2505	REAR SLIP PLATE	1
	2-2721	REAR SLIP PLATE WELDMENT – LS (LOCKING & LIGHTS)	1
	2-2740	REAR SLIP PLATE WELDMENT – RS (LOCKING & LIGHTS)	1
36	6-4247	SAFETY BUTTON	1
37	6-0233	SNAP RING, #5100-150	2
38	6-4248	BHCS, M6 x 20mm Lg.	4
39	1-2788	HINGE PIN	2
40	6-0340	CIRCLIP TRU-ARC #5100-125	4
41	6-2936	HEX HEAD GR5 BOLT, 3/4-16 UNF X 1-1/2 LG	4
42	80259000	HEX JAM NUT, 3/4"-NF	4

43	1-2793	CYLINDER RETAINER	2
44	6-0058	LOCK WASHER, 3/8"	12
45	6-0067	HEX BOLT, 3/8" NC X 1" LG	4
46	6-0291	Hex Bolt, 1/2"-13UNC X 1 1/2 LG.	5
47	6-0063	Flat Washer, 1/2"	5
48	6-0059	Lock Washer, 1/2"	5
49	6-0035	NUT, 1/2-13 UNC, HEX	5
50	6-2956	90 HYD ELBOW VELOCITY FUSE 4GPM	1
51	6-3974	TRANSFER BALL BEARING	36
52	1-3762	PLASTIC PUCK INSERT	18
54	1-4098	AIR CYLINDER ASSEMBLY	1
55	1-2789	CYLINDER PIN	1
57	2-2119	WORKSTEP	1
58	6-0666	HEX BOLT 3/8 UNC X 1-1/4 LG, GR8	8
59	6-0034	HEX NUT, 3/8" NC	8
60	6-0259	LOCK WASHER, 3/4	2
61	6-2936	HHCS, 3/4-16 UNF X 1-1/2 LG	2
62	6-0426	FLAT WASHER	4
63	6-0069	Shoulder Bolt, 3/8" DIA. X 5/8" LG.	4
64	2-0637	LOCKING PIN ASSEMBLY	2
65	6-1670	HEX BOLT GR5, 5/8"-NC x 2" LG	6
66	1-1887	HEADED PIN	2
67	6-0738	FLAT WASHER 3/4" SAE	6
68	6-0978	Cotter Pin, 1/8" DIA. X 1 1/2" LG.	2
70	2-2409	WEAR PLATE	1
71	6-1134	SELF TAPPING SCREW, #12 X 1/2" LG	4
72	1-1384	TUBE END COVER	2
73	1-2905	SAFETY LOCK SPACER	4



OPTIONS

56

TURNPLATE ASSEMBLY


- Contact your local sales personnel for part number and cost.

14.2 REAR SLIP PLATE TRANSFER BALL ARRANGEMENT

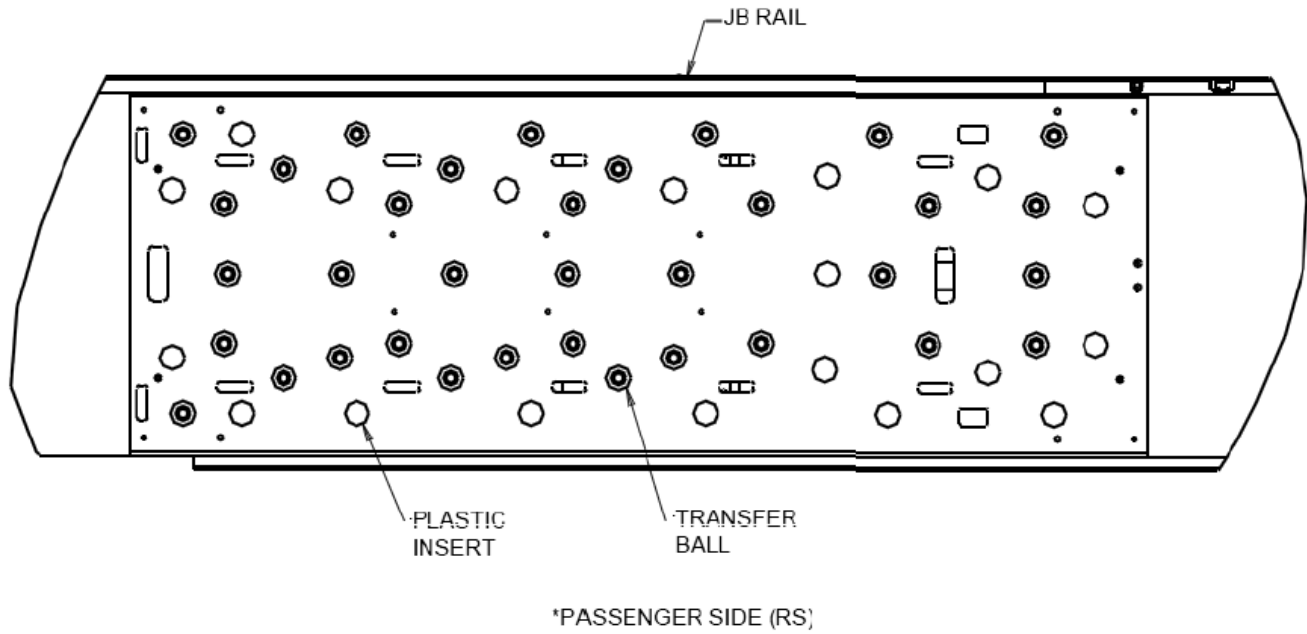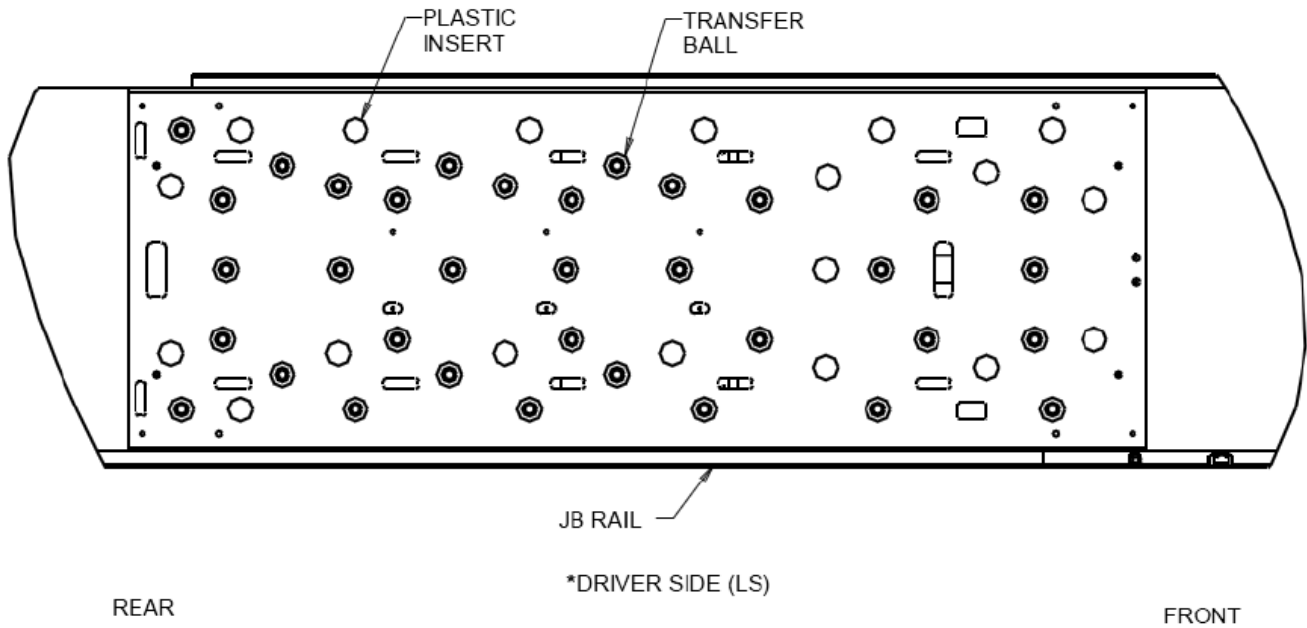

Item #	Part #	Description	Qty. / Deck
1	1-3762	Plastic Insert	19
2	6-3974	Transfer Ball	35

15.0 HYDRAULIC/AIR PARTS ASSEMBLY

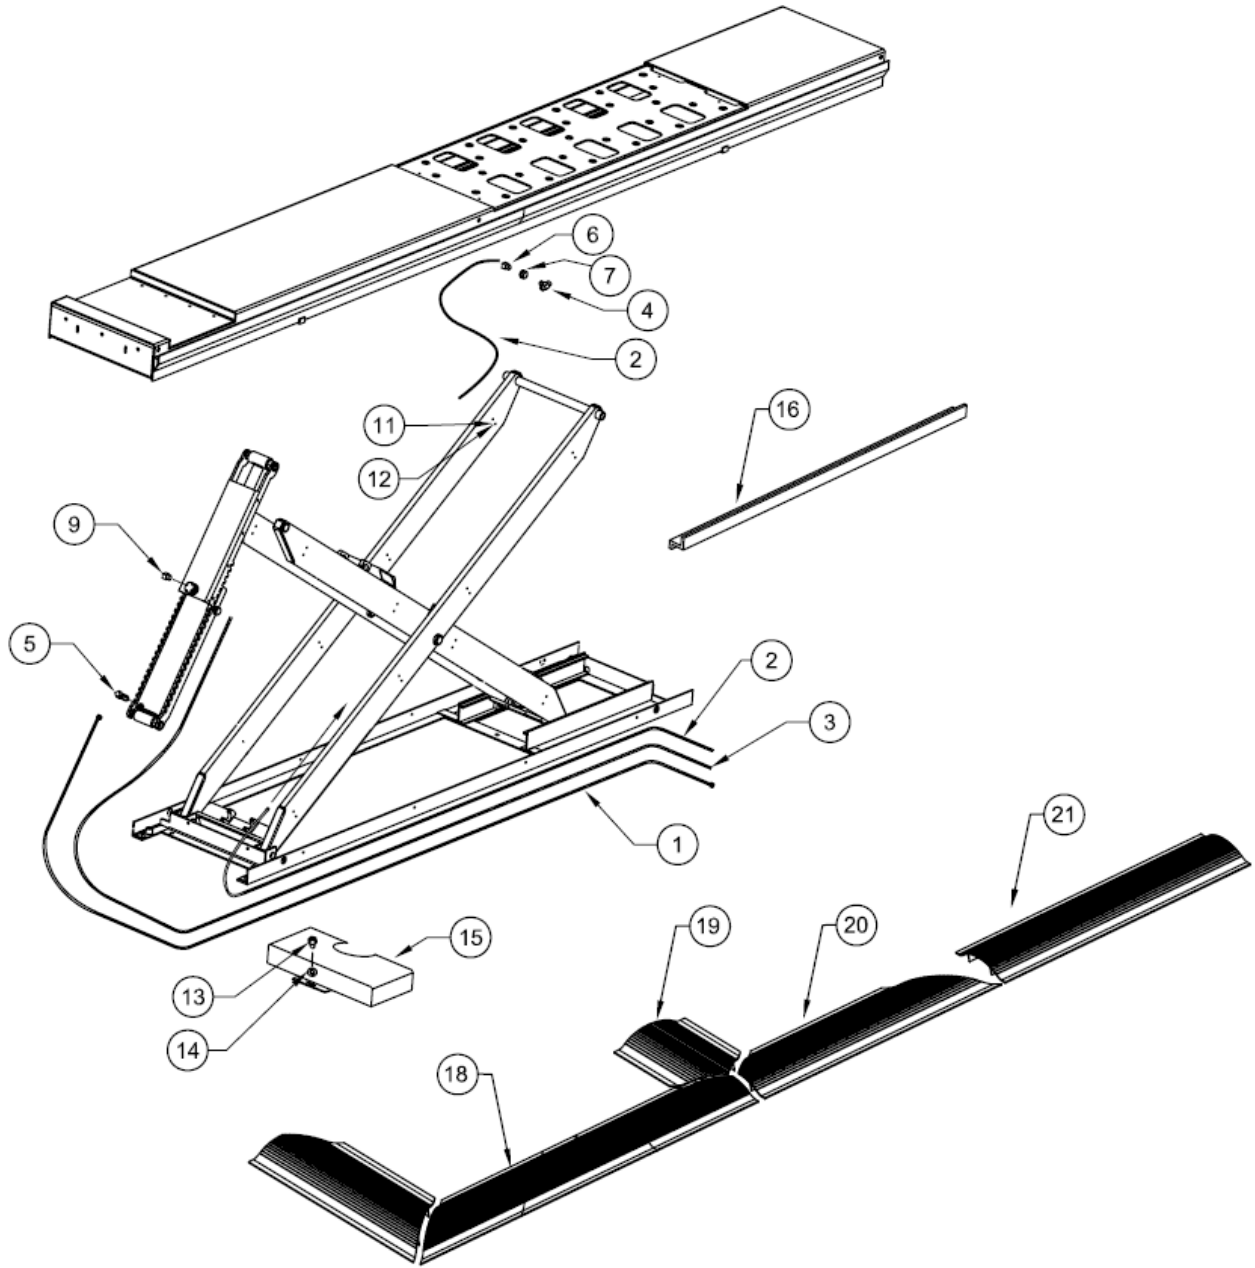


15.1 Hydraulic/Air Parts List

Item	Part #	Description	Qty
1	2-2717	3/8" Hydraulic Hose	2
2	6-3019	3/8" Polytube, 480" LG	1
3	6-3020	1/4" Air Hose, 350" LG	2
4	6-3896	Branch Tee Fitting 1/4 NPT, F-F-M	1
5	6-2956	Velocity Fuse	2
6	6-3010	90 DEG Elbow, 1/4" NPT-M, 3/8" Polytube	1
7	6-0167	Terminal Bolt, 3/4"	1
9	6-0709	90 DEG Elbow, 1/8" NPT, 1/4" Polytube	2
11	6-0170	Pipe Clamp, 3/8"	8
12	6-1134	Self Threading Screw	8
13	6-0178	1/4" Hex HD Bolt x 3/4"	6
14	6-0060	1/4" SAE, Flat Washer	6
15	2-2795	Front Cover	2
16	2-2519	Baseframe, Line Cover	1
17	2-2520	Baseframe, Line Cover	1
18	2-2733	Floor Line Cover "A"	2
19	2-2735	Floor Line Cover "C"	1
20	2-2734	Floor Line Cover "B"	2
21	2-2736	Floor Line Cover "D"	2
	6-0141	Nail-in Anchors, 1/4" x 1" Lg.	37

16.0 Accessory assembly

16.1 Front Turnplate

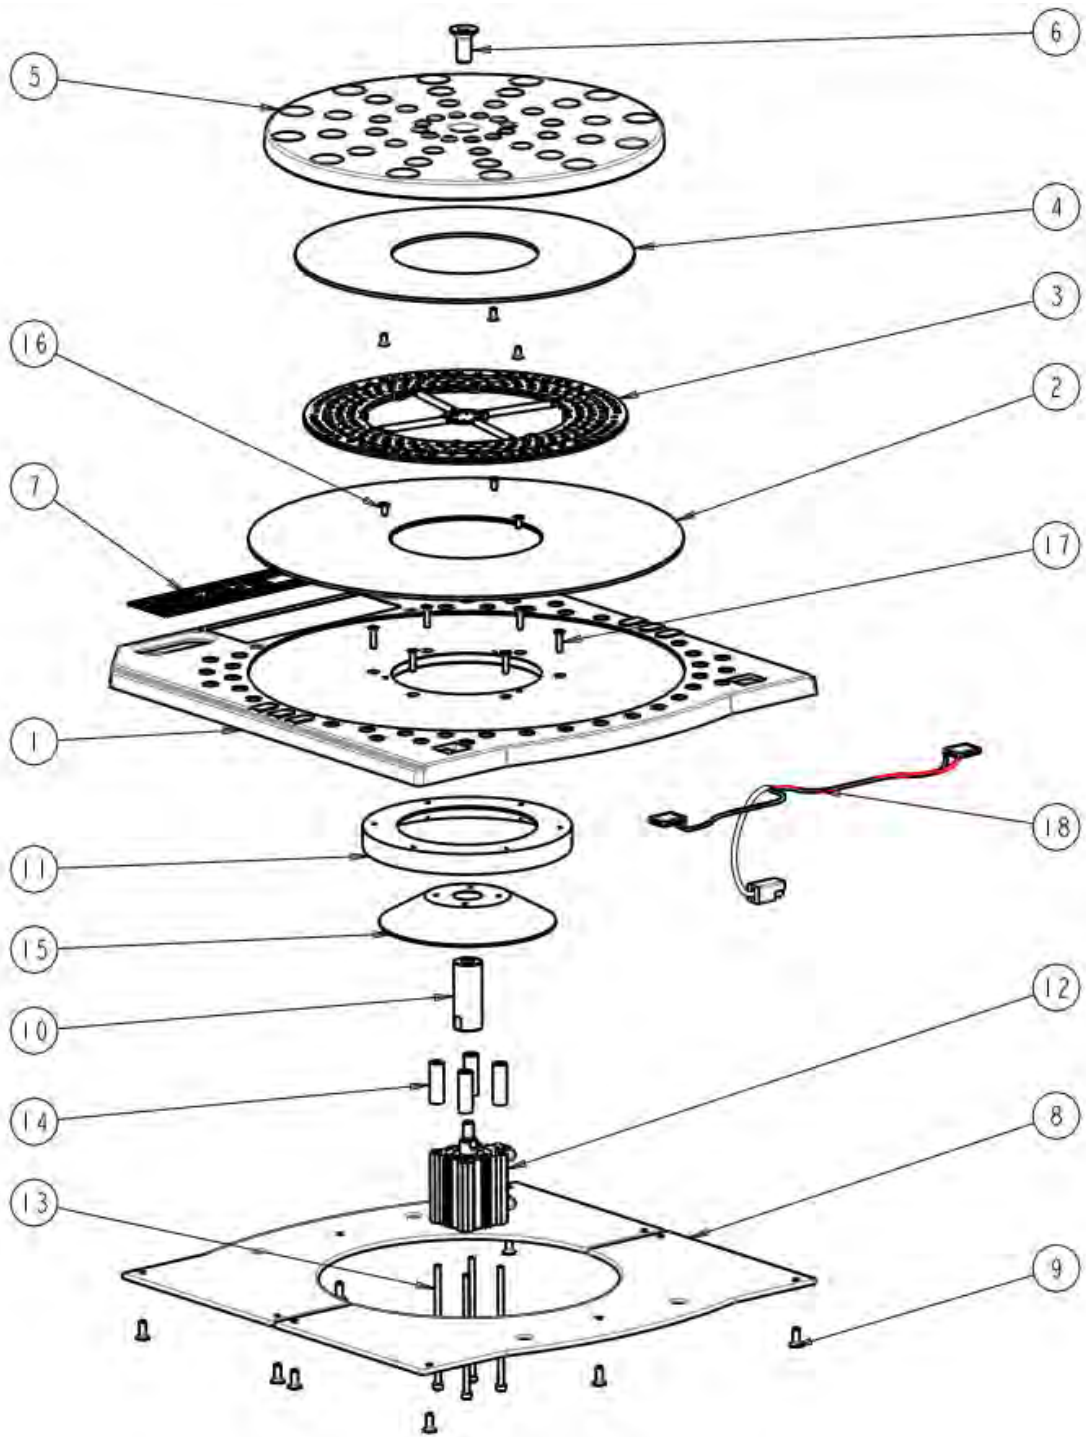


TURNPLATE ASSEMBLY: PARTS LIST

Item #	Part #	Description	Qty.
1	2-2932	Turnplate Assembly (Complete)	1
2	EAM0047J58A	Bottom Wear Plate	1
4	EAM0047J57A	Wear Plate, Top	1
5	EAM0047J60A	Turnplate Top	1
7	1-3719	Label	1
8	EAM0047J52A	Wear Pad, Bottom	2
9	6-3955	FHMS, Phil Screw - M6 x 16mm	10
10	1-3678	Stub Shaft	1
11	2-2711	Centering Ring	1
12	6-3899	Locking Cylinder Assembly	1
13	6-3903	FHCS, #8-32 UNC x 3/4", SS	8
14	1-3677	Cylinder Stand-off	4
15	2-2709	Centering Cone	1
16	6-3954	Screw, FHMS M5-8 x 10mm Lg	6
17	6-3904	FHCS, #10-32 UNF x 3/4", SS	6
18	6-4101	LED Light & Cable Assembly	1


Note: Please contact customer service for items not listed.

16.2 Rear Slip Plate Locking Mechanism

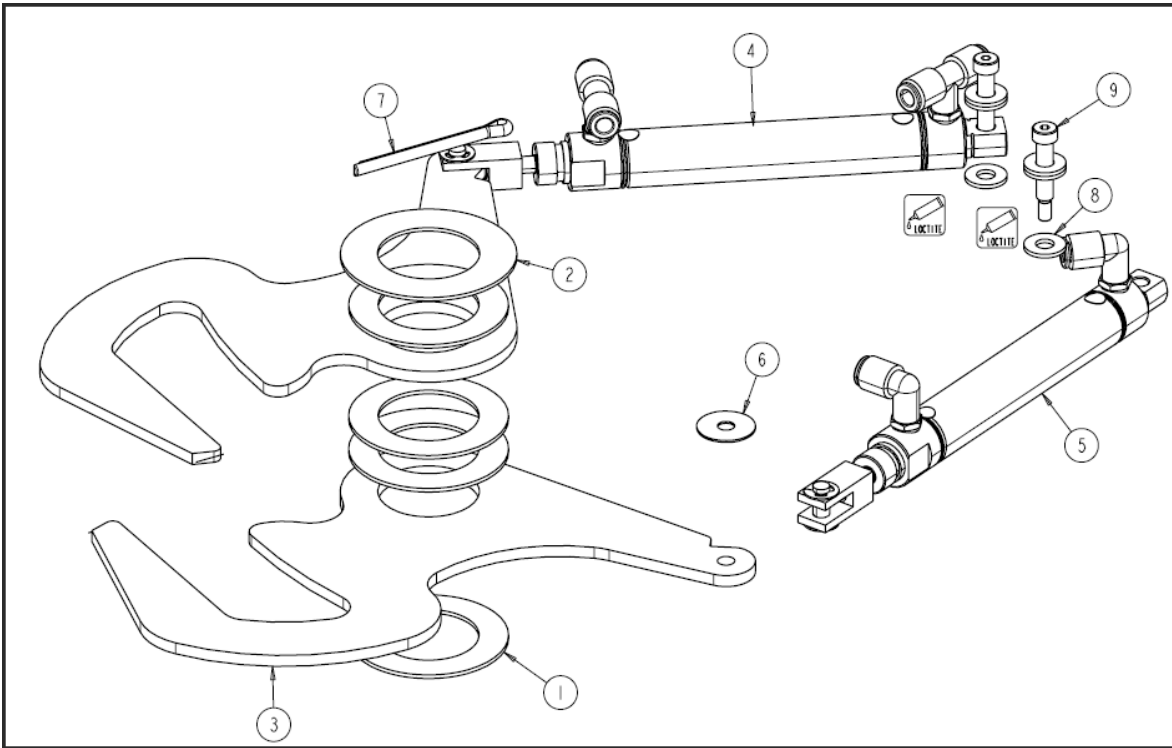

Item #	Part #	Description	Qty.
1	1-0757	Nylon Thrust Washer	4
2	1-3686	Spacer	1
3	2-2712	Retainer Jaw	2
4	6-3900	Cylinder Assembly	1
5	6-3883	Cylinder Assembly	1
6	6-3882	Washer, Nylon 1/4" ID 5/8" OD	2
7	6-3929	Cotter Pin, 3/16" x 2" lg, SS	1
8	6-0060	Flat Washer, 1/4" ID	6
9	6-3907	Shoulder Bolt, 1/4" x 5/8" lg. SS	2


16.3 Airline Routing for Locking Turnplates and Rear Slip Plates

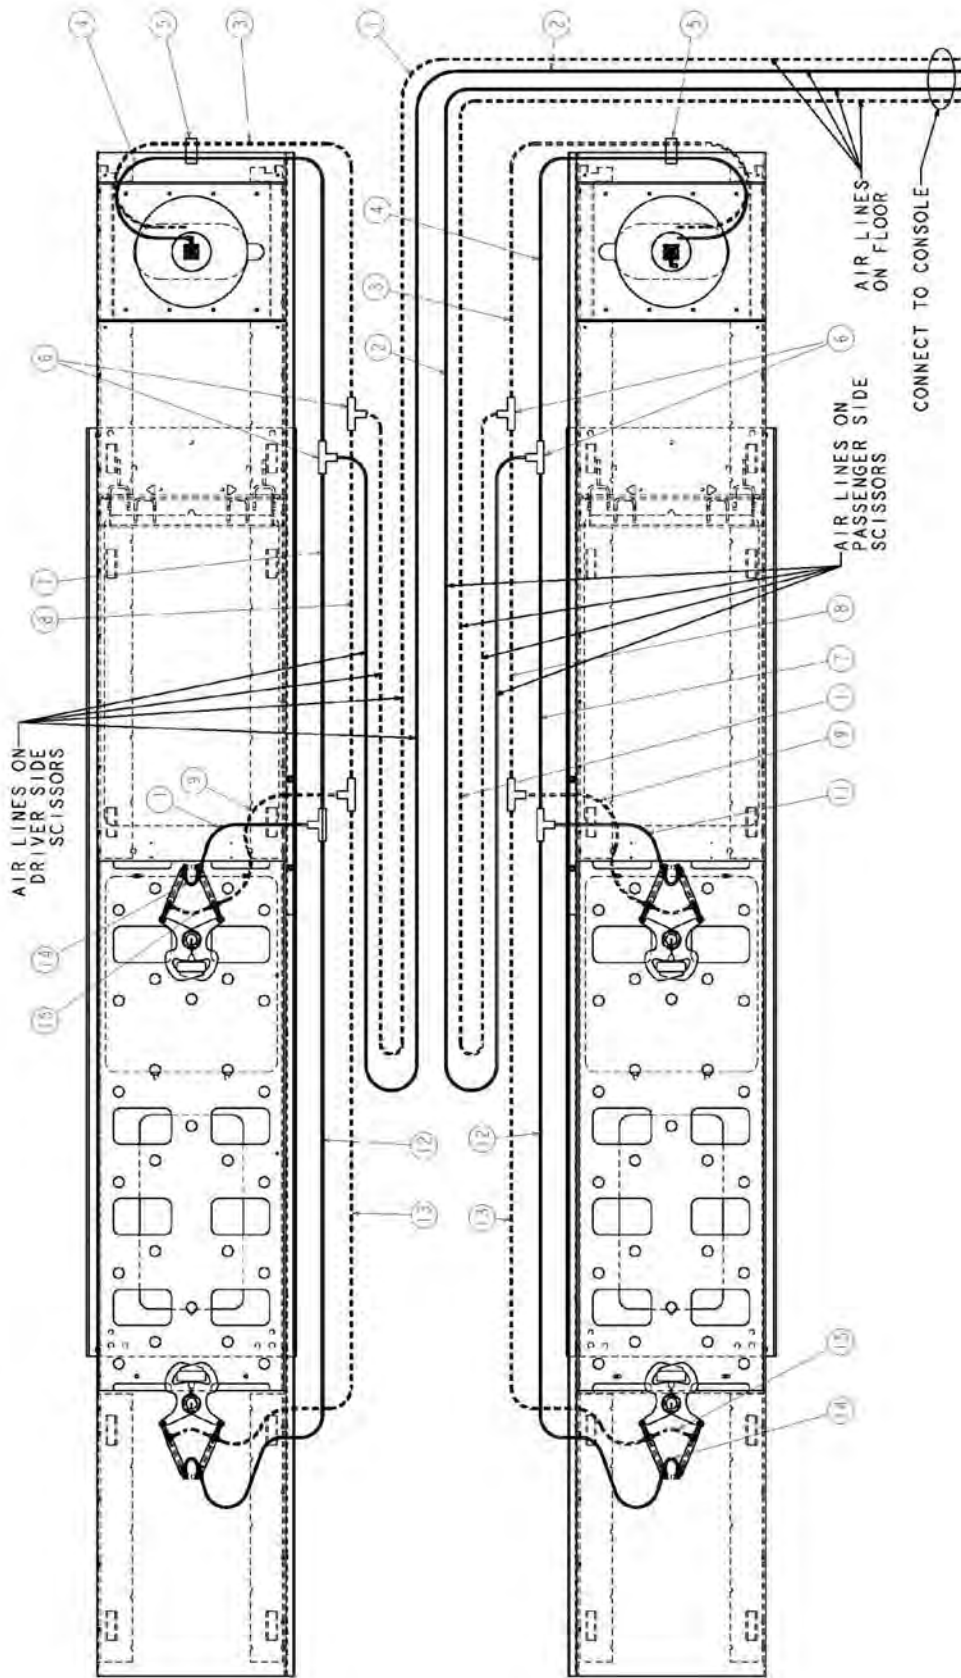


Airline Parts List

Item	Part Number	Description	Location	Qty/Lift
1	1-3733	Air Line, Blue, 1/4", 35'	From Console, on floor, on scissors, up to deck hinge	2
2	1-3732	Air Line, Red, 1/4", 35'	From Console, on floor, on scissors, up to deck hinge	2
3	1-3735	Air Line, Blue, 1/4", 7.8'	On decks, from hinge to front	2
4	1-3734	Air Line, Red, 1/4", 7.8'	On decks, from hinge to front	2
5	6-3950	Tube Clamp	On decks, at front	2
6	6-2971	Fitting, Tee, 1/4"	On decks	8
7	1-3736	Air Line, Red, 1/4", 3.1'	On decks, from hinge to middle	2
8	1-3737	Air Line, Blue, 1/4", 3.1'	On decks, from hinge to middle	2
9	1-3741	Air Line, Blue, 1/4", 1.1'	On decks, feeding middle clamp	2
11	1-3740	Air Line, Red, 1/4", 1.1'	On decks, feeding middle clamp	2
12	1-3738	Air Line, Red, 1/4", 8.25'	On decks, middle to rear	2
13	1-3739	Air Line, Blue, 1/4", 8.25'	On decks, middle to rear	2
14	1-3742	Air Line, Red, 1/4", 5"	Between clamp cylinders, rear and middle	4
15	1-3743	Air Line, Blue, 1/4", 7"	Between clamp cylinders, rear and middle	4

16.4 Rear LED Light Assembly: Exploded View

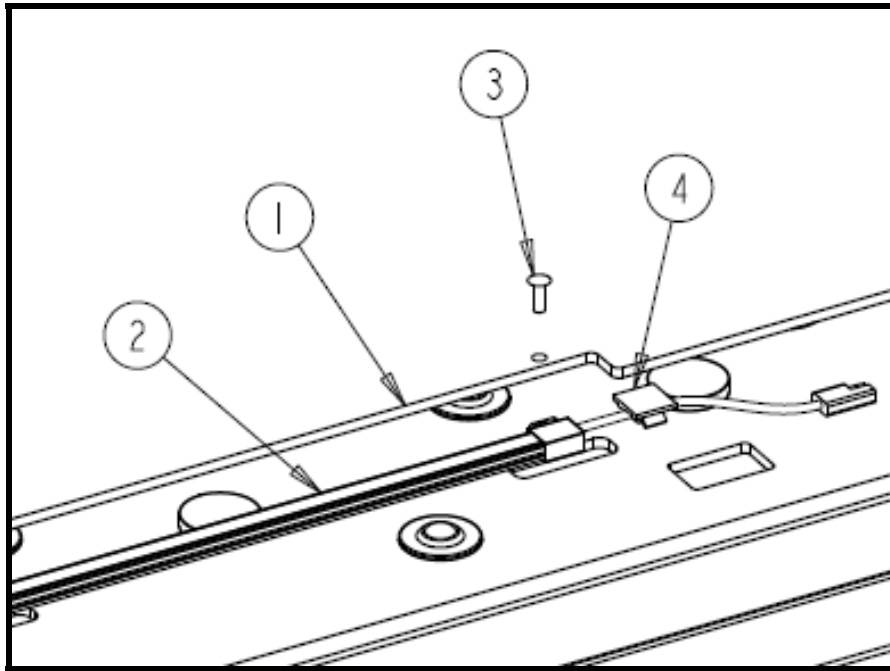

Top of Deck – Rear Slip Plate

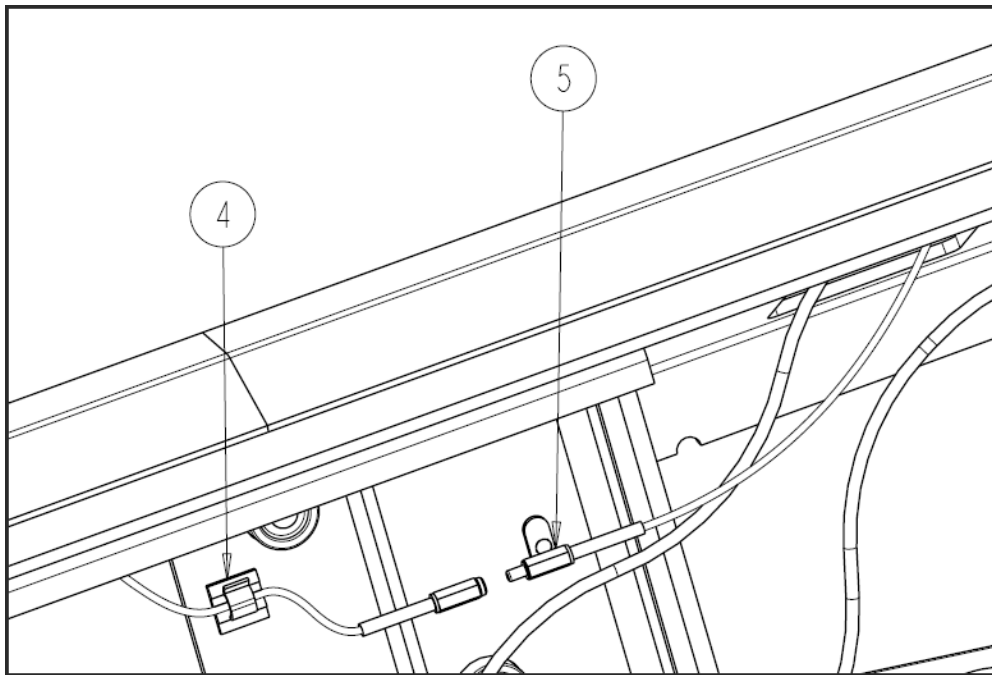

Underside of Deck – Connection of LED Light Bar


*Note: Objects in pictures may not be exactly as shown.

REAR LED LIGHT ASSEMBLY: Parts List

Item #	Part #	Description	Qty.
1	2-2721	Rear Slip Plate Weldment, LS	1
	2-2740	Rear Slip Plate Weldment, RS	1
2	6-4216	LED Light Bar w/ mounts & connector (Left side)	1
	6-4217	LED Light Bar w/ mounts & connector (Right side)	1
3	6-4215	Stainless Steel Rivet 1/4 x 5/8	2
4	6-3940	Adhesive Back Clamps	3
5	6-4089	Cable Extension Assembly (LS)	1
	6-4093	Cable Extension Assembly (LS)	1


16.5 LED Control Box

Complete Assembly 6-4258

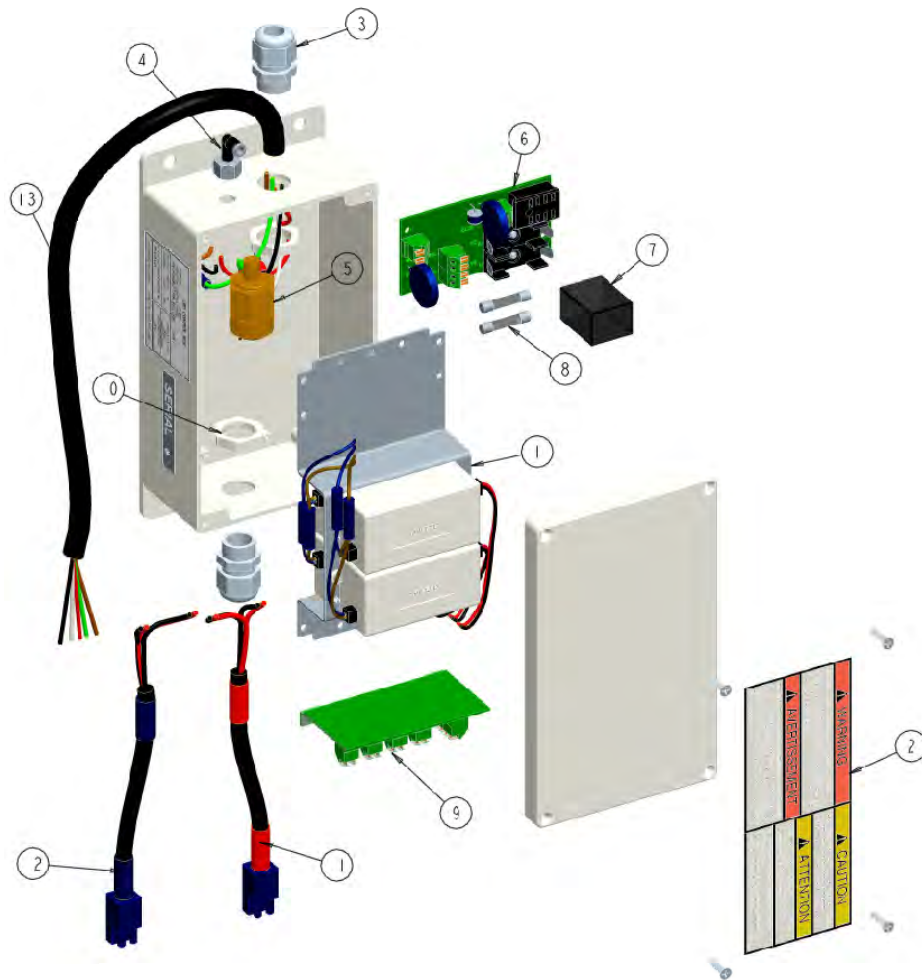

Item#	Part #	Description	Qty.
1	6-4265	LED POWER SUPPLY AND FRAME ASSEMBLY	1
2	6-3957	CONSOLE DECAL	1
3	6-4267	CABLE GLAND, 1/2 NPT	2
4	6-4271	90DEG ELBOW, 1/8NPT - 5/32PLYT	1
5	6-4262	PRESSURE SWITCH	1
6	6-4263	SURGE PROTECT MODULE (SPM)	1
7	6-4260	POWER RELAY, 24VAC DPDT	1
8	6-4261	FUSE, 250V, 2AMP, 6X32mm	2
9	6-4264	TRANSIENT PORTECTION MODULE (TPM)	1
10	6-4266	CABLE NUT, 1/2" NPT	2
11	6-4268	4-POLE CABLE ASSY, RED	1
12	6-4269	4-POLE CABLE ASSY, BLUE	1
13	6-4270	POWER CABLE ASSY, 18/5 SOOW 3FT	1


16.6 Air Switch for Light Kit

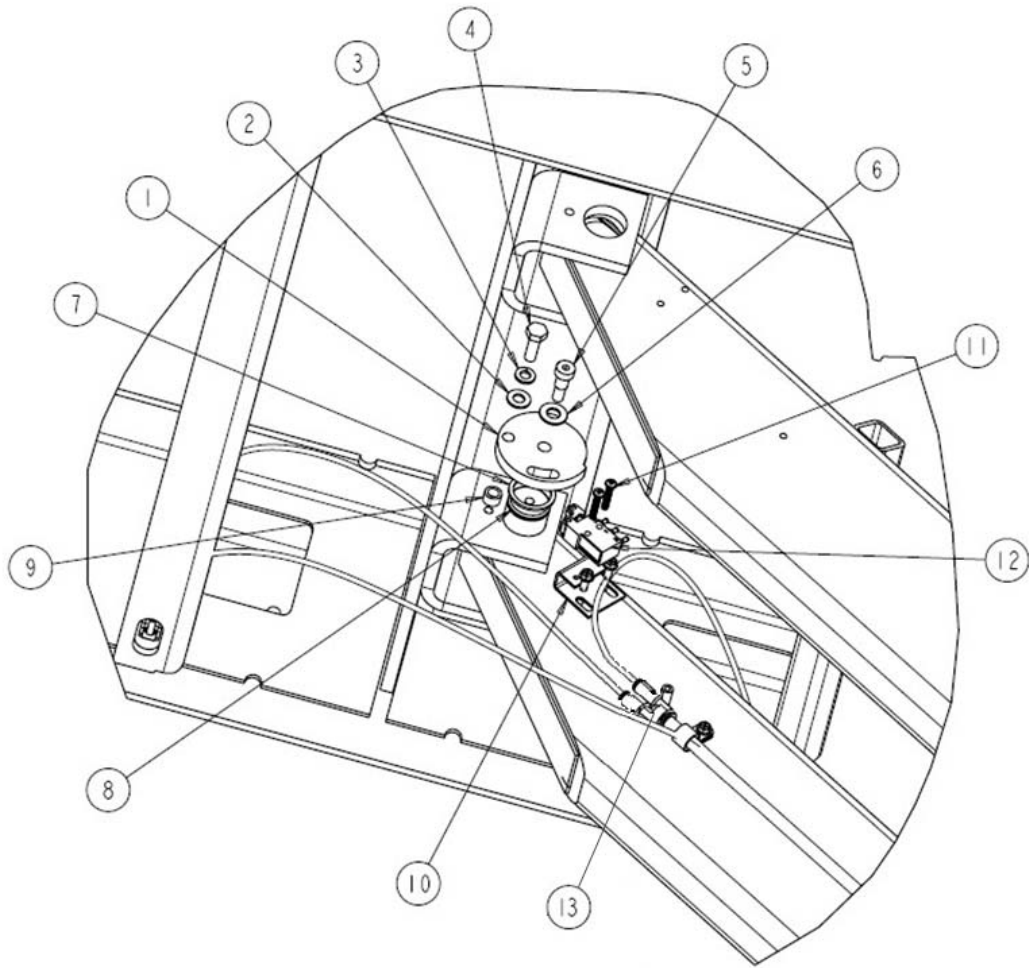

Item #	Part #	Description	Qty.
1	2-2757	Plastic Cam	1
2	6-0295	Flat Washer, 5/16"	1
3	6-0674	Lock Washer, 5/16"	1
4	6-0293	Hex Head bolt, 5/16"-18UNC x 1" Lg.	1
5	6-1792	Shoulder Bolt, 3/8" x 1/2" Lg.	1
6	6-0062	Flat Washer, 3/8"	1
7	6-0340	Circlip	2
8	1-3754	Hinge Pin, Cam	1
9	1-3752	Spacer	1
10	1-3771	Sensor Bracket	1
11	6-3965	Machine screw, #8-32 x 1"lg	2
12	6-3964	Limit Switch w/ Roller Lever	1
13	6-3944	Union, 'Y', 5/32" (4mm) Polytube	1
*	8-0378	4mm Polytube Blue	40 ft
*	8-0377	4mm Polytube Red	40 ft

Note: Light Kit Sensor Assembly is located under Passenger Side Deck.


17.0 CONSOLE ASSEMBLY

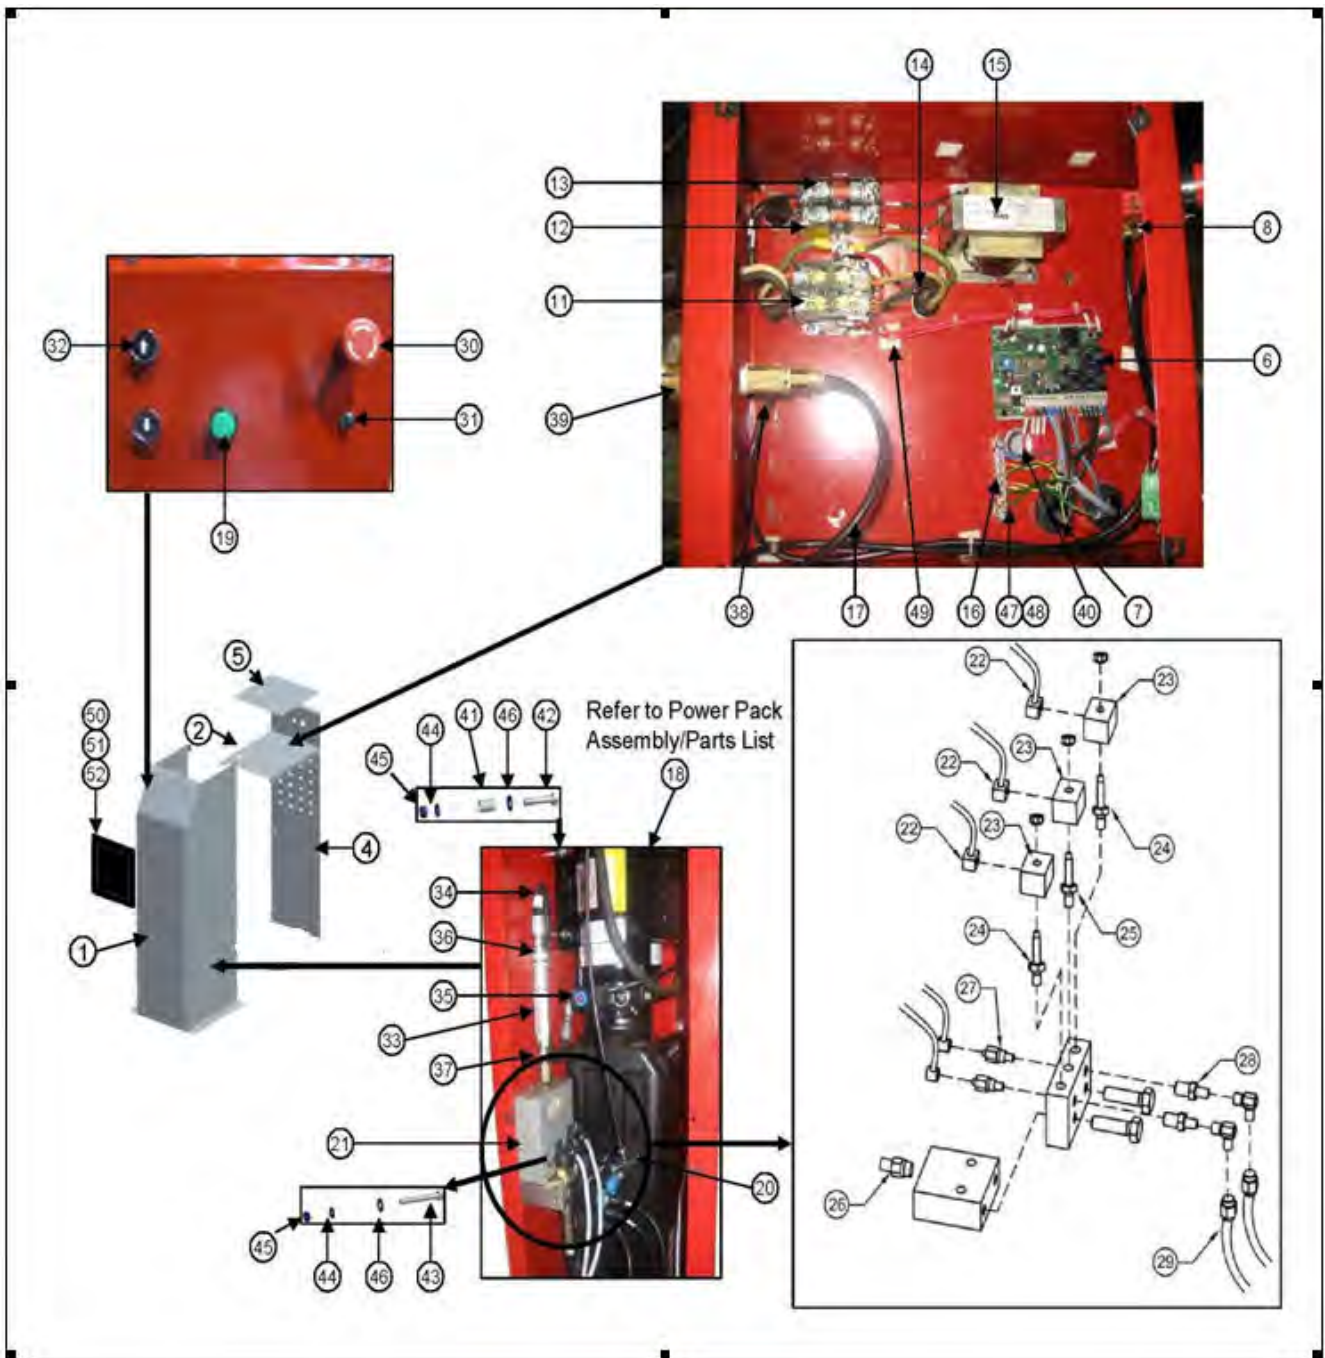

17.1 Console Parts List



Item	Part #	Description	Qty
1	3-0973	Front Side Panel	1
2	3-0974	Back Electrical Plate Cover	1
4	2-2512	Rear Cover	1
5	2-2513	Top Cover	1
6	6-2125	Printed Circuit Board	1
7	6-3409	Multihole, 3 holes x 7 mm 189.637	2
8	6-0709	Elbow, 90 deg.	1
11	6-3406	Contactoer Tayco P/N 3100-20	1
12	6-3266	Fuse Holder 2-Pole Open Style	1
13	6-3597	Fuse, 1A 250V	2
14	6-3410	Bushing Heyco P/N 184.175	1
15	6-2126	Transformer	1
16	6-3415	Grounding Bar	1
17	8-0141	1/4" Polytube, 2 ft.	1
18	6-3720	PowerPack Assy. 230V/1PH/60Hz	1
19	6-3580	Green LED pilot lamp	1
20	6-2971	1/4" Polytube Tee Pushlock	1
21	6-4312	Flow Divider c/w Solenoids	1
22	1-3625	Din Connector High Body Small Conduit	4
23	6-2128	Coil S8 24VDC	4
24	6-2129	Cartridge Valve N/C with manual override	3
25	6-1364	Cartridge Valve Equalize VEI DT	1
26	6-2553	Filter fitting 1/2 BSP #6 JIC c/w Bonded Seal	1
27	6-4313	Pressure Switch	2
28	6-2127	Filter fitting 3/8 BSP #6 JIC c/w Bonded Seal	2
29	2-2717	Hydraulic Hose	2
30	6-2922	Emergency Pushbutton Contact	1
31	6-4275	Air Release Button Assembly (mushroom)	1
32	6-1247	Pushbutton	2
33	6-0090	Flow Control	1
34	2-2592	Hydraulic Hose Ass'y	1
35	6-0804	Elbow, 90 deg.	1
36	6-0011	Adapter, 3/8" M NPT x 3/8" M JIC	1
37	6-0797	Adapter 3/8" NPT M x 3/8"	1
38	6-0710	Adapter 3/8" x 3/8" Polytube	1
39	6-0713	Terminal Bolt, 3/4" (Short)	1
40	6-2314	Electrical Knockout Plug	1
41	1-3282	Power Pack mounting spacer	4
42	6-3421	Screw BHCS 5/16"-18 x 1 1/2"	4
43	6-3422	Screw BHCS 5/16"-18 x 2 1/2"	2
44	6-0674	Washer, Lock 5/16" ID	6
45	6-0294	Nut, 5-16" - 18 UNC Hex	6
46	6-0295	Washer, Flat 5/16" SAE	6
47	6-3423	Screw Pan Sq. SEFL 8 x 1/2" Zinc	15
48	6-3424	Screw 10 x 3/4" Zinc	3
49	6-3305	Hold Down Adhesive Mount Base	5
50	6-0988	Decal Set, ALI/WL 200	1
51	6-2481	Decal, Elec 208 - 230, 60 Hz 1PH 20A	1
52	6-1766	Decal, Capacity 10000lb/4550kg	1

17.2 Console Pneumatic / Filtering System

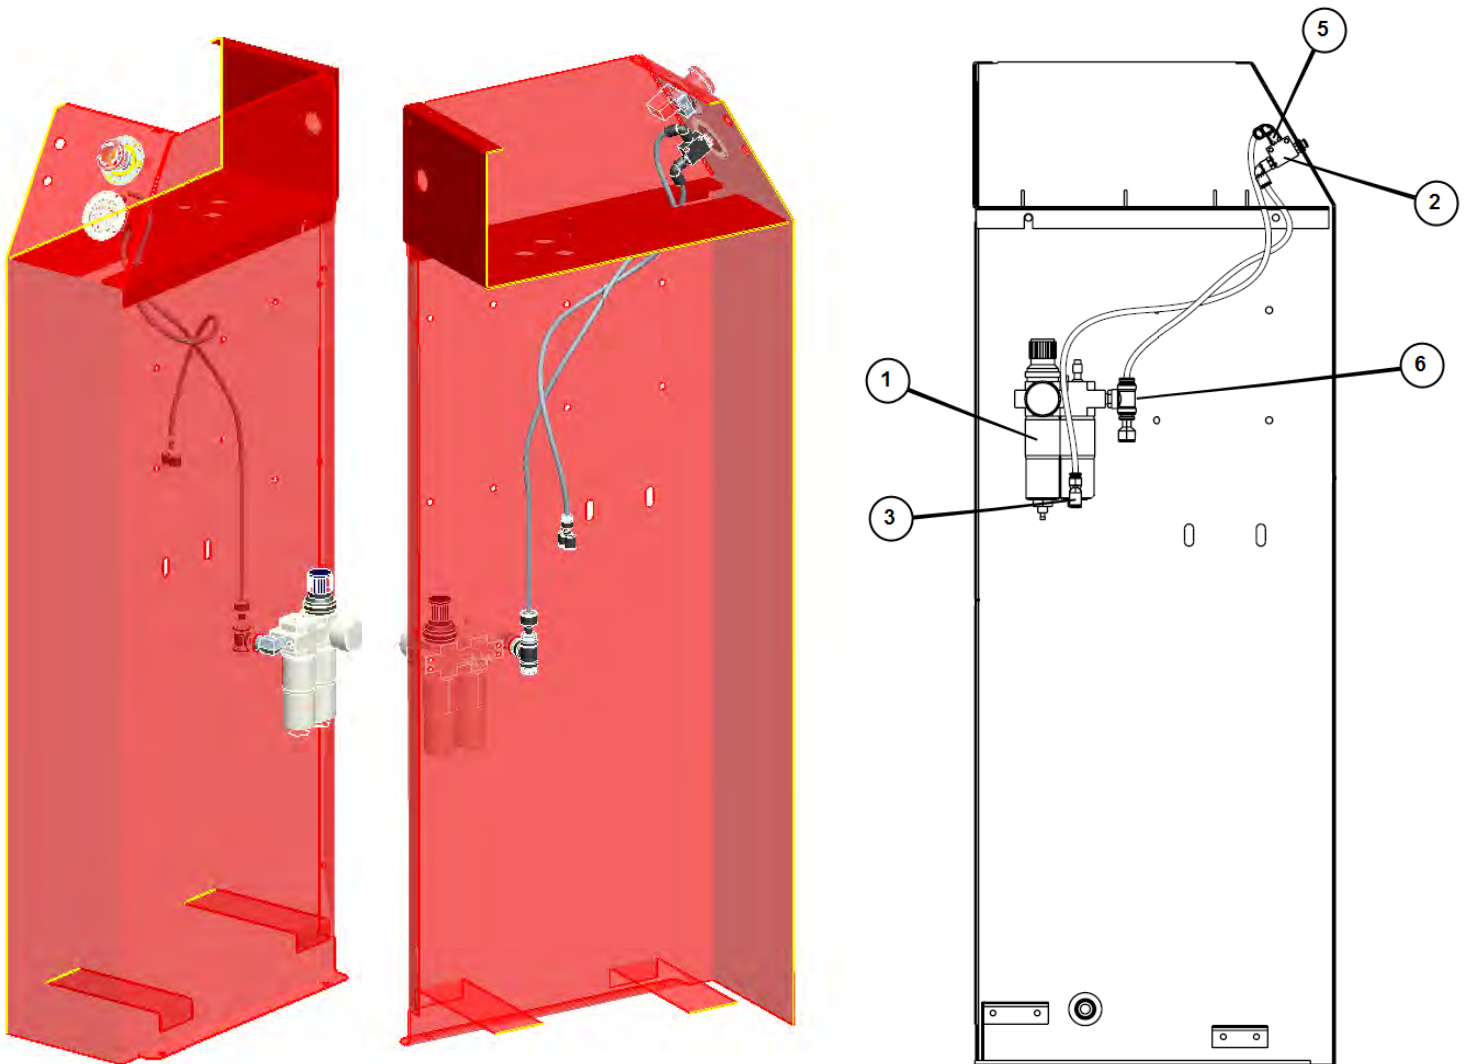


ITEM	PART #	DESCRIPTION	QTY
1	0-1693	Water Separator / Regulator / Lubricator Kit	1
2	6-4275	Air Release Button Assembly (mushroom)	1
3	6-3729	Union 'Y', 1/4" Poly	1
4	6-0015	90° Elbow 1/4 NPT	1
5	6-0709	Swl Elbow, 1/4" POLY x 1/8" NPT M	2
6	6-3730	Swl Tee Adapter, 3/8 Poly X 3/8 Poly X 1/4 NPT	1

17.3 Console: Pneumatic & Filtering System - Locking & Light System (Optional)

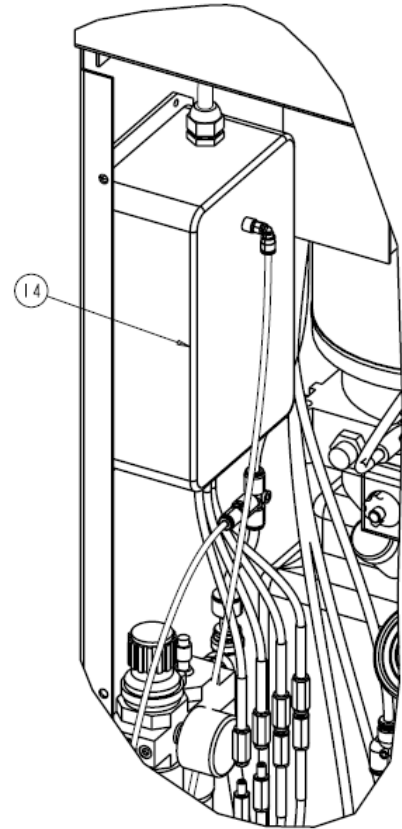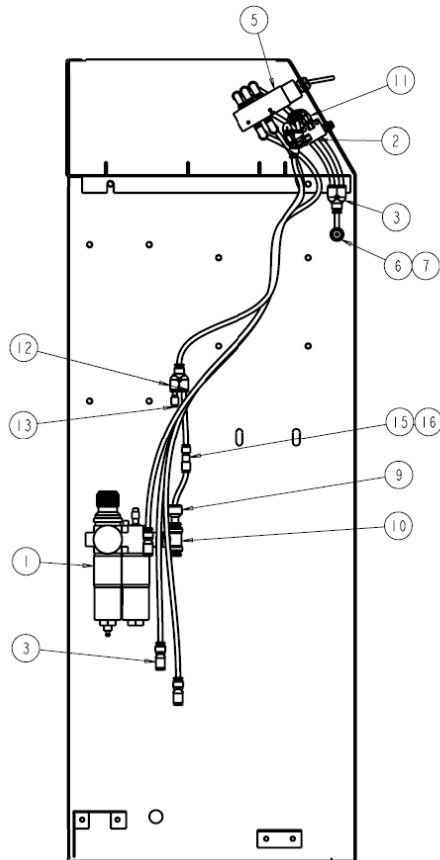

Item #	Part #	Description	Qty.
1	6-4142	Water Separator/Regulator/Lubricator Ass'y	1
2	6-4275	Air Release Button Assembly (mushroom)	1
3	6-3729	Union 'Y', 1/4" Poly	5
5	6-3905	Valve Assembly (Locking Plates)	1
6	6-0708	Adapter, 1/8" NPT - 1/4" Poly	1
7	6-3977	Breather - Female 1/8" NPT	1
9	6-3731	Reducer, 3/8" Stem x 1/4" Poly	1
10	6-3730	Swivel Tee Adapter, 1/4"NPT x 3/8" Poly	1
11	6-0709	Swivel Elbow, 1/8" NPT M x 1/4" Poly	2
12	6-3729	Union 'Y', 1/4" Poly	1
13	6-3928	Reducer, 1/4" Stem x 5/32" (4mm) Poly	1
14	6-4258	LED Driver Box Assembly	1
15	6-3952	Check Valve, 1/4" Poly	1
16	6-0015	90° Elbow 1/4 NPT	1


17.4 Console Labeling

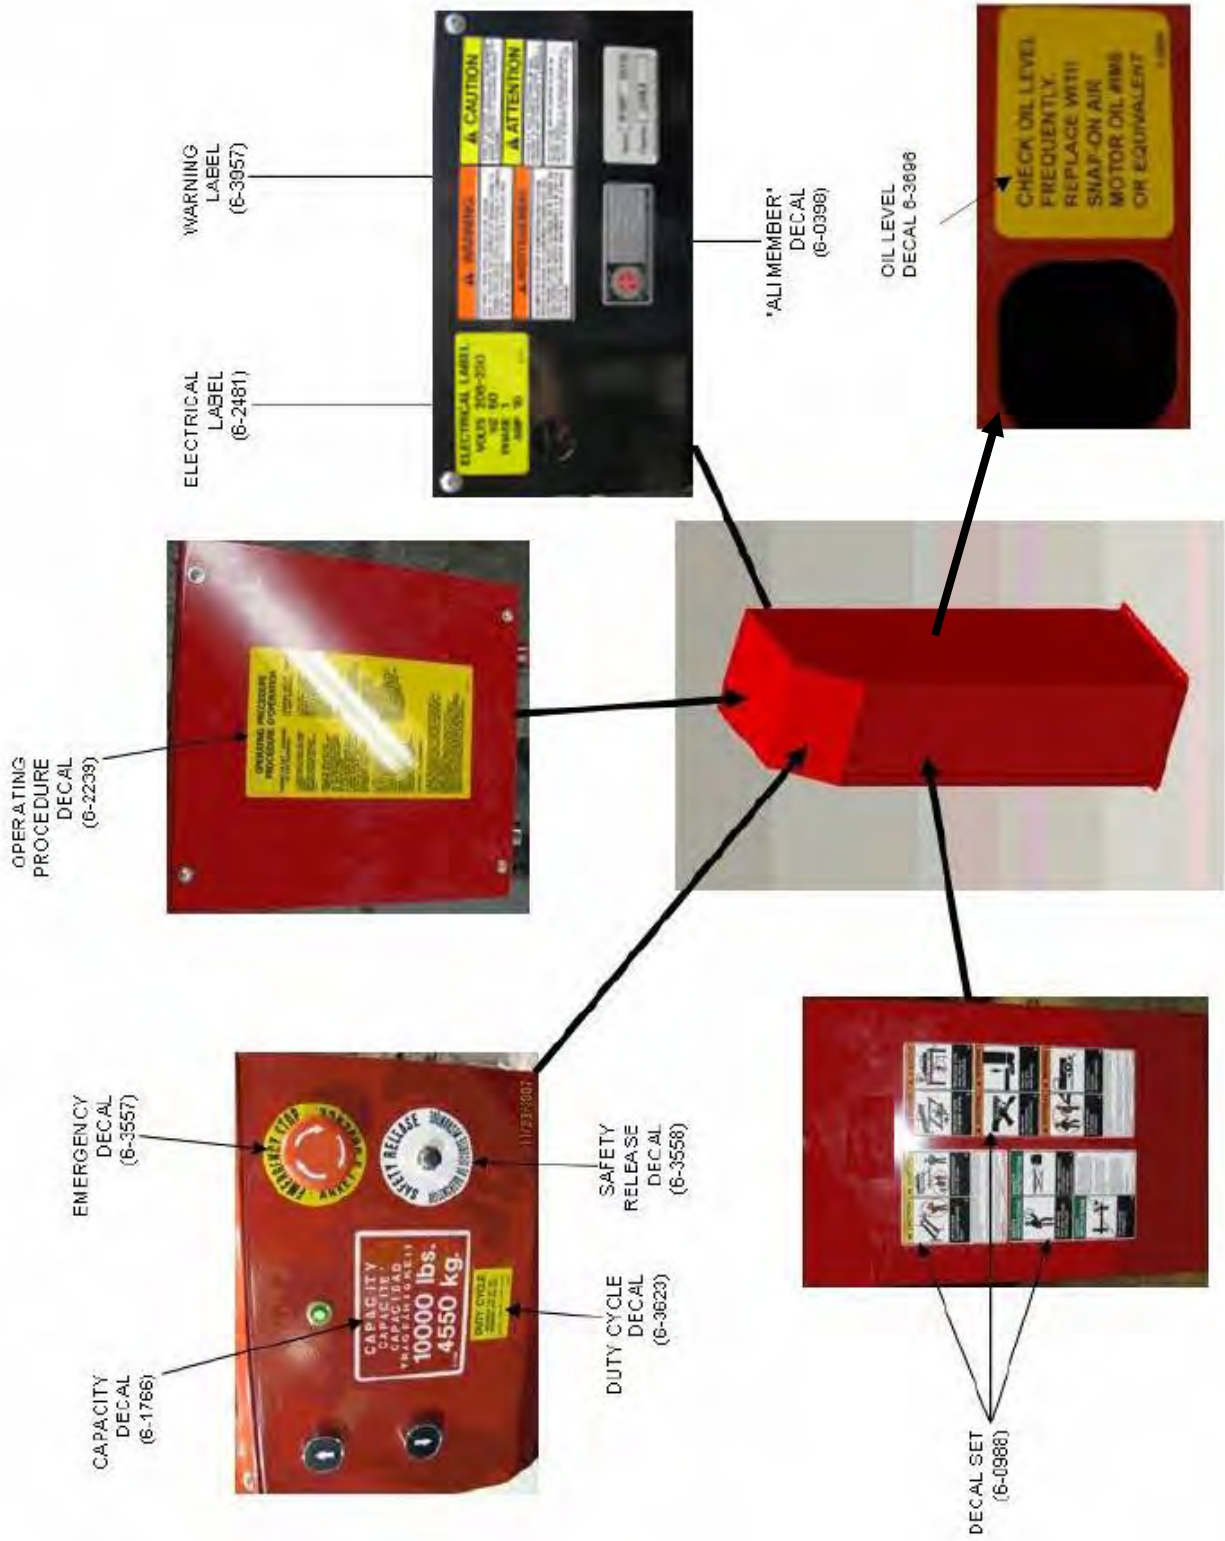

18.0 POWER PACK ASSEMBLY

NOTE: THERE ARE 2 TYPES OF POWERPACKS USED WITH THIS LIFT.


TYPE 1:

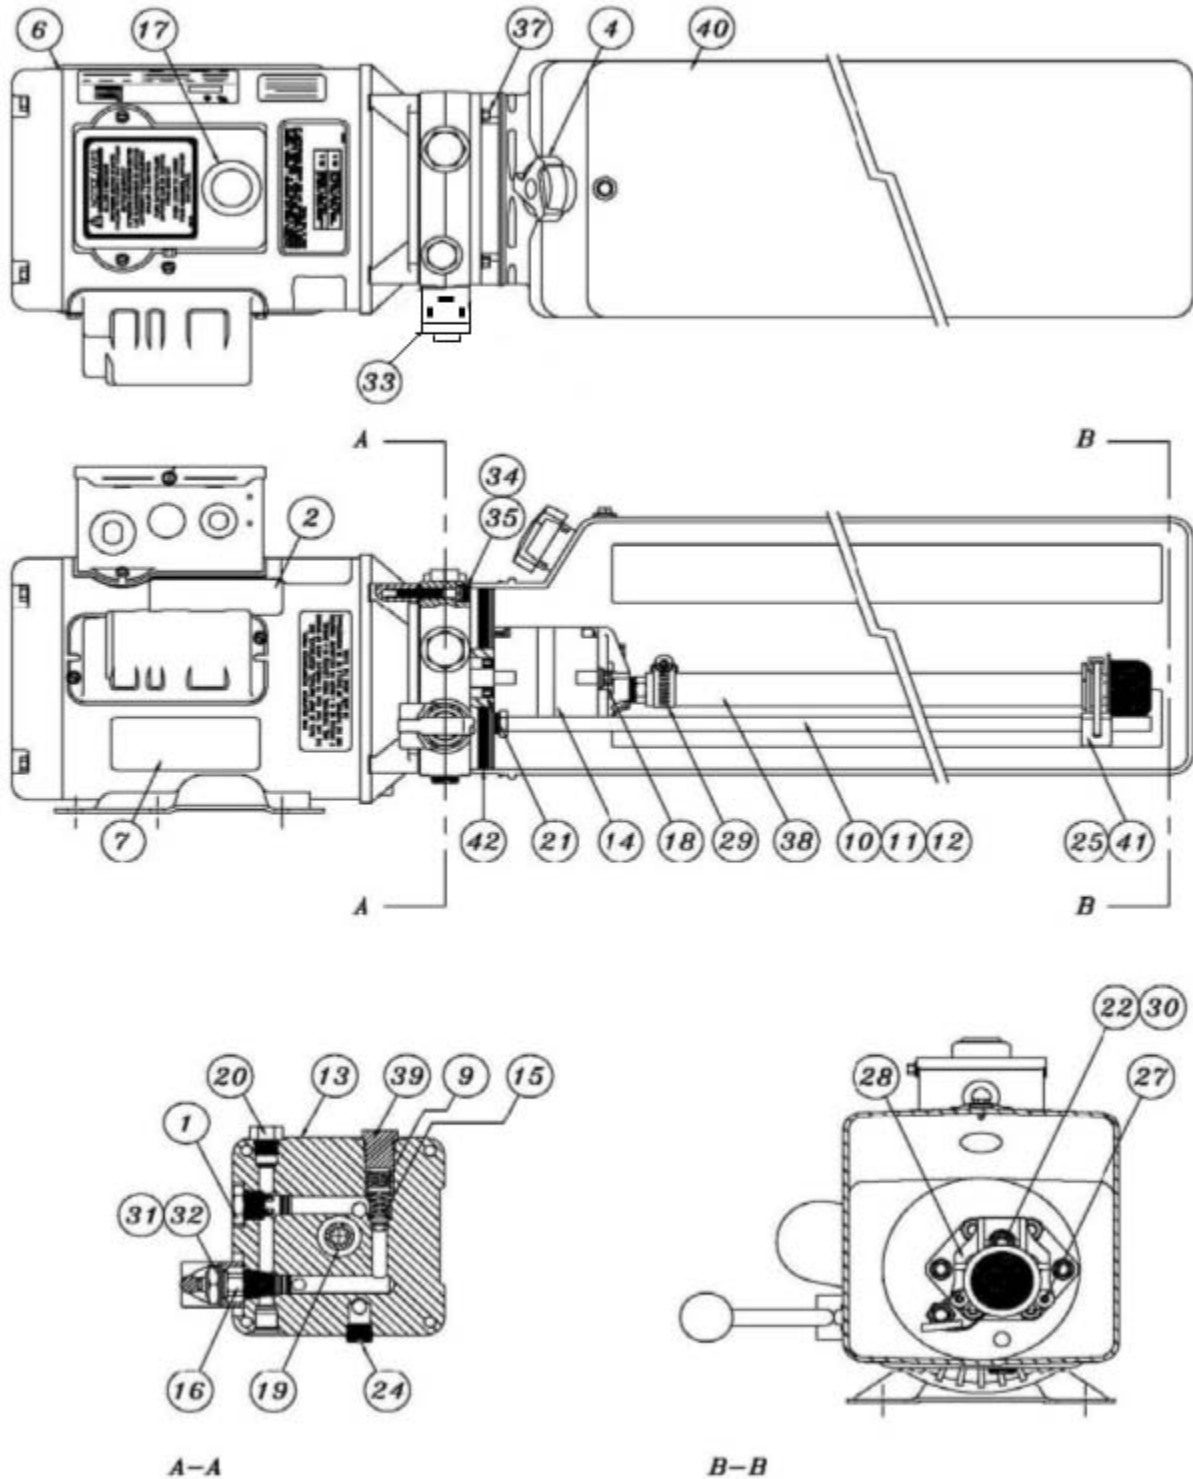

#6-3484 (AB-6842) 230V/1PH/60Hz

Item	Part #	Description	Qty
1	6-1087	VALVE CARTRIDGE CHECK	1
2	6-2136	LABEL INSTALLATION AUTOHOIST	1
4	6-1376	BREATHER CAP & BLADDER	1
6	6-2139	MOTOR AC 208-230V. 2HP/1PH/60HZ, BLK	1
	6-1079	MOTOR AC 208-230V. 2HP/3PH/60HZ, BLK	1
7	6-2149	LABEL WARNING AUTOHOIST	1
9	6-2151	SPRING 0.480" X 0.063" X 0.42" COMP	1
10	6-2152	RETURN HOSE 3/8" OD X 21.5"	1
11	6-2153	COMPRESSION TUBE NUT	1
12	6-2154	COMPRESSION TUBE SLEEVE	1
13	6-2155	ENDHEAD UNIVERSAL AUTOHOIST	1
14	6-1958	PUMP ASS'Y 2.5 CC/REV. SHORT SLINE	1
15	6-1319	RELIEF ASSEMBLY FIXED 190 BAR	1
16	6-0880	VALVE CARTRIDGE RELEASE MANUAL	1
17	6-2156	WIRING ASSEMBLY AC 1PH FENNER	1
18	6-1090	BOLT 5/16"-24 X 3.00" TORX G8	2
19	6-0774	COUPLING SAE 9T-20/40 1.260"	1
20	6-2157	PLUMBING PLUG 9/16" SAE	1
21	6-2158	SEAL SHAFT 0.500" X 1.00" X 0.25"	1
22	6-2159	WASHER 0.338" X 0.625" X 0.060" STEEL	1
24	6-2161	PLUMBING PLUG 3/8" NPT	1
25	6-2162	PLUMBING MAGNET	1
27	6-2164	SCREW TAPTITE M6 X 1.0 12MM TORX	2
28	6-2165	COVER ASS'Y SUCTION	1
29	6-2166	PLUMBING CLAMP HOSE ADJ. INLET	1
30	6-1392	BOLT 5/16" - 18 X 1.00" SHCS	1
31	6-2167	NUT 3/4" -16 X 1" HEX X 0.25" STEEL	1
32	6-2168	WASHER 3/4" INT. TOOTH LOCK	1
33	6-2129	CARTRIDGE	1
	6-2128	COIL 24V	1
34	6-2169	BOLT M6 X 1.0 35MM SOC HD	4
35	6-2170	WASHER 1/4" LOCK HI-COLLAR	4
37	6-1091	BOLT #12-24 X 0.50" HEX HD WASHER	4
38	6-0786	PLUMBING ASS'Y INLET 17.24 (3)	1
39	6-1089	RELIEF VALVE CAP ASSEMBLY	1
40	6-1399	TANK PLASTIC 6.7 OS 22.50" BLK	1
41	6-1846	CABLE TIE 8" LONG WHITE	1
42	6-0875	O-RING 2-348 BUNA	1


TYPE 2:

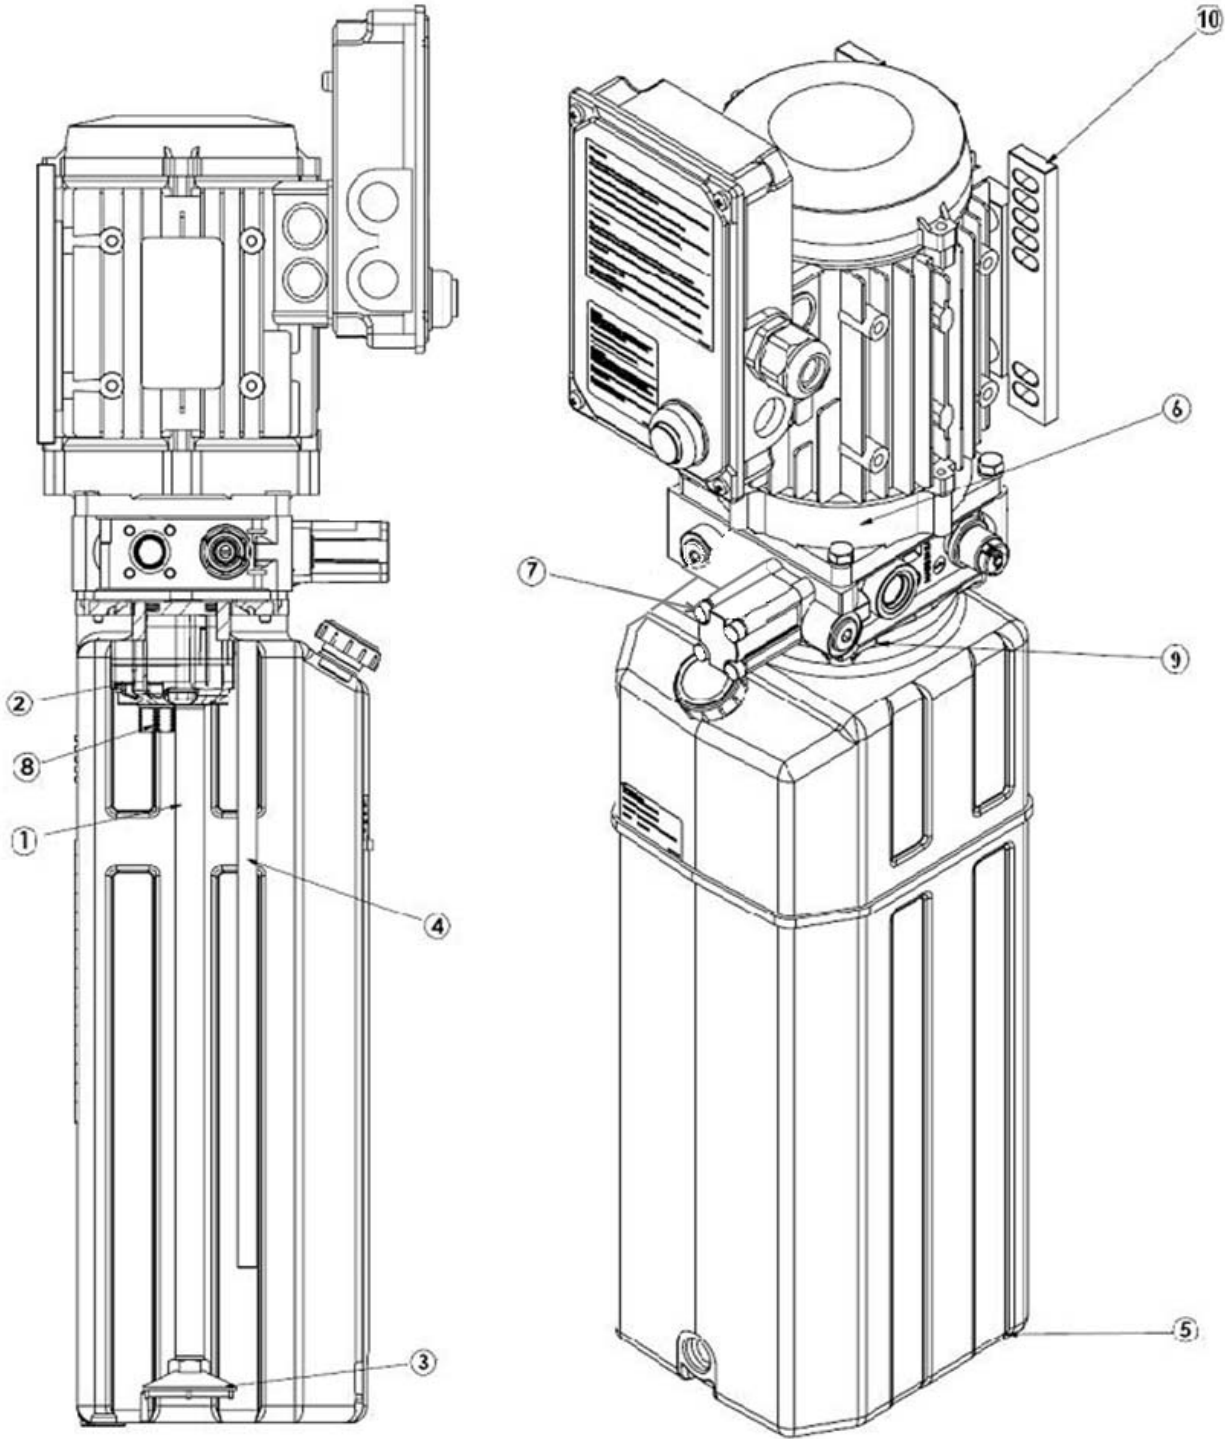

6-2055 (46.832.17.0004) 230 V / 1 PH / 60 HZ

Item	Part #	Description	Qty
1	6-3442	Pump 6.7G, 16 Gear	1
2	6-3443	Suction Pipe 3/8"	1
3	6-3444	Suction Filter 3/8" Female 15 L/min	1
4	6-3445	Return Pipe	1
5	6-3446	Plastic tank 12L	1
6	6-3447	Motor Shaft Coupling Pump	1
7	6-2129	Cartridge	1
	6-2128	Coil 24V	1
8	6-3452	Start Up Valve	1
9	6-3449	Tank Bracket With Screws	1
10	6-3450	Motor Brackets	1

19.0 AVAILABLE ACCESSORIES

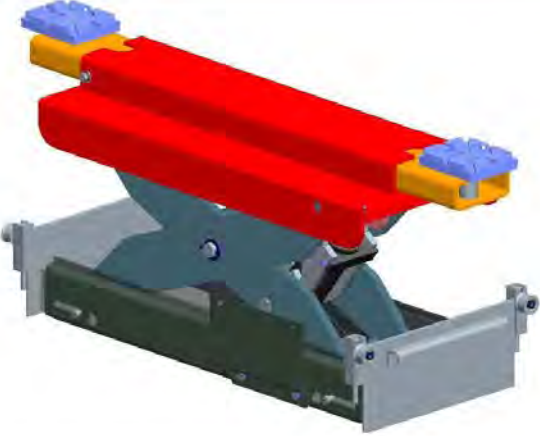	<p>5K Jackbeam</p> <ul style="list-style-type: none">• Air/Hydraulic Pump• 2 Safety locking Positions• 3" & 6" Adapter• Adjustable width
<p>5000 lb max capacity each</p>	

Contact supplier for availability and part numbers.

Max capacity is for 10,000 Lb Lifts.