

EQUIPMENT SERVICE *ON SITE*

**EquiServ®**

*Providing Factory Service For  
Automotive Service Equipment*

**Model: EAA0182L00AR**  
**CART ASSEMBLY**

**Page: 1 of 2**

# Installation Instructions

**INSTALLATION MUST BE PERFORMED  
BY  
QUALIFIED EQUISERV PERSONNEL ONLY**

## INSTALLATION OVERVIEW: \_\_\_\_\_

The following instructions will provide you with the steps necessary to completely setup the cart assembly.

## PARTS & ACCESSORIES LIST: \_\_\_\_\_

PART NUMBER	DESCRIPTION	QTY
1-2324	Hex washer head, #8 Thread Forming	4
1-8433	Nut w/conical washer	12
1-8906	Pan head machine screw, ¼ - 20 X ¼	8
1-9006	Screws, Pan Head ¼ - 20 X ½	2
1-9806	Machine Screw, pan head, ¼ - 20 X 1.50	4
3645-0056-02	Caster, 4-inch W/Brake	2
8-17139-1	Hub Cap	2
8-9739	Wheel, 7-inch black	2
EAA0182L10A	Cart sheet metal	1
EASX095L74A	Axle	1
TEAA0182L00A	Installation Instructions	1


## REQUIRED TOOLS: \_\_\_\_\_

- COMPLETE TOOL KIT


## INSTALLATION INSTRUCTIONS: \_\_\_\_\_

1. Open box with cart and remove components from box.  
(Hardware will be in accessory box).
2. Inventory all items using the Parts & Accessories list and inspect for damage.
3. Mount front 2 casters (3645-0056-02) to bottom plate using 8 nuts (1-8433).
4. Place rear wheel (8-9739) on axle. Secure with hubcap (8-17139-1).  
(Use hammer to tap on hub cap)


5. Slide axle through rear plate holes.
6. Place remaining wheel on axle and secure with hubcap (8-17139-1).
7. Mount top shelf to side panels using 4 screws. (1-8906)
8. Attach the middle shelf to the side panels using 4 screws. (1-8906)
9. Mount side panels with shelves to base using 4 nuts. (1-8433)
10. Attach rear panel plate to the rear of the side panels and secure with four sheet metal screws. (1-2324)
11. Mount cable storage bracket to the rear portion of the shelf and secure with two screws. (1-9006)
12. Install handle and secure with 4 bolts. (1-9806)

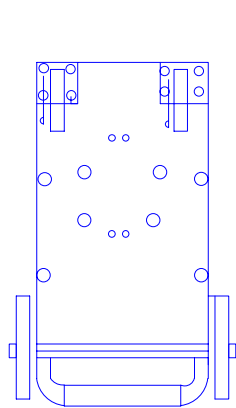

Top view

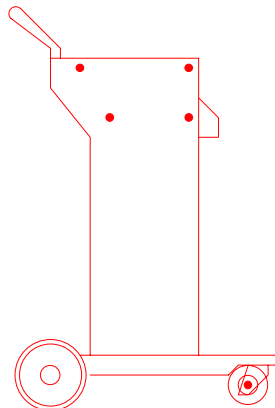

Side view

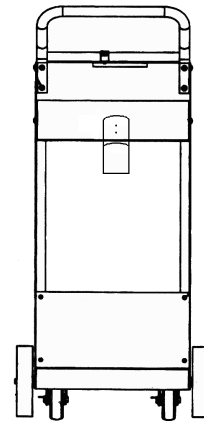

Rear view

**INSTALLATION COMPLETE**