

# Installation Instructions

**INSTALLATION MUST BE PERFORMED  
BY  
QUALIFIED SNAP-ON/SUN PERSONNEL ONLY**

## INSTALLATION OVERVIEW: \_\_\_\_\_

This Installation Instruction will prepare the ACT-3120-3/3340-3 for operation. The unit is shipped as a fully assembled unit, with the exception of the items listed in the Parts & Accessories list per tester.

PLEASE READ THESE INSTRUCTIONS COMPLETELY BEFORE SETTING UP UNIT.



### CAUTION!

THIS UNIT MUST BE PLUGGED IN TO A PROPER AC OUTLET FOR UNIT TO OPERATE CORRECTLY. REFER TO UNIT ID PLATE LOCATED ON BACK OF UNIT. EXTENSION CORDS ARE NOT RECOMMENDED, BUT IF AN EXTENSION CORD MUST BE USED, USE A CORD THAT IS LESS THAN 50 FEET WITH A 16 AWG, OR ABOVE 50 FEET AND LESS THAN 100 FEET WITH A 14 AWG.



### WARNING!

*USE STANDARD REFRIGERANT HANDLING  
SAFETY PROCEDURES WHEN PERFORMING INSTALLATION*

ALWAYS WEAR SAFETY GOGGLES, DON'T SPILL OR TOUCH LIQUID REFRIGERANT, AVOID FLAMES, & EXCESSIVE HEAT. USE ONLY IN WELL VENTILATED AREA.

## REQUIRED TOOLS: \_\_\_\_\_

- Screwdriver (Flat Blade & Phillips)
- Safety Goggles (0001 -5005)
- Refrigerant Oil (Mineral)

**PARTS & ACCESSORIES LIST FOR ACT-3120-3:**

PART NUMBER	DESCRIPTION	QTY
0001-0067-01	Wrench, Suction Separator Bowl	1
0119-0356-01	Literature Kit, ACT-31 20-3	1
0400-0036	Washer, #10	2
0403-1541-08	Screw #10-32 x 1/2"	1
0403-1541-16	Screw, #1 O-32x 1"	1
0647-0196-01	Adapter, GM	1
0647-0197-01	Adapter, Quick-Disconnect, GM/Ford	1
0647-0199-01	Adapter, Quick-Disconnect, Large GM	1
0647-0200-01	Adapter, Ford	1
0671-1026-01	Desiccant Bag	10
0675-0423	Screw 1/4-20 x 3/8"	2
0692-2294-01	Installation Instructions	1
0692-2279-01	Instructions, Tank Band	1
0710-0032	Nut, #10-32 Clip	2
4211-0001-01	Envelope	1
7009-2417-01	Inline Particle Filter	1
7009-2447-03	Recovery Tank Assembly	1
7012-1369-01	Bracket, Hose	1
7012-1537-01	Bracket, Gauge	1
7012-1570-01	Band, 50 lb. Tank	1
EAH0013C21A	Gauge Set, Uniweld (EUROPE)	1

**PARTS & ACCESSORIES LIST FOR ACT-3340-3:**

PART NUMBER	DESCRIPTION	QTY
0001-0067-01	Wrench, Suction Separator Bowl	1
0119-0357-01	Literature Kit, ACT-3340-3	1
0400-0036	Washer, #10	2
0403-1541-08	Screw #1 O-32x 1/2'	1
0403-1541-16	Screw, #1 O-32x 1"	1
0647-0287-07	R-134a Adapter, High Side	1
0647-0287-08	R-134a Adapter, Low Side	1
0671-1018-02	Desiccant Bag	10
0675-0423	Screw 1/4-20 x 3/8'	2
0692-2294-01	Installation Instructions	1
0692-2279-01	Instructions, Tank Band	1
0710-0032	Nut, #10-32 Clip	2
4211-0001-01	Envelope	1
7009-2418-01	Inline Particle Filter	1
7009-2447-01	Recovery Tank Assembly	1
7012-1369-01	Bracket, Hose	1
7012-1537-01	Bracket, Gauge	1
7012-1570-01	Band, 50 lb. Tank	1
EAH0014C12A	Gauge Set, Uniweld (EUROPE)	1

**UNPACKING UNIT AND ACCESSORIES:**

1. Cut Straps, and slide the carton off the pallet.
2. Remove the top of the carton, 4 corners posts and plastic bags. Split the corners of the base carton.
3. Lean the unit so it can be rolled off the base.
4. Remove all boxes and packing material from scale/tank compartment.
5. Inventory all items using the Parts & Accessories list and inspect for damage.

**PARTS & ACCESSORIES SETUP:** \_\_\_\_\_

1. Mount the Hose Bracket (7001 2-1 369-01) to the rear panel using the two Screws (0675-0423)(1/4-20 x 3/8") supplied.
2. Mount the Gauge Set Bracket (701 2-1 537-01) to the rear top panel using the two Screws (0403-1 541-08) (#1 O-32x 1/2") already installed.
3. Remove the Gauge Set Assembly from the Gauge Set box and place on the Gauge Set Bracket.
4. Remove the Blue and Red Hoses from the Gauge Set box and **OIL** the seals on each end.
5. Connect the open end of the Blue and Red Hoses to the Gauge Set respectively.
6. For the ACT-31 20-3, place the four adapters in the Storage Compartment on top of unit.
7. For the ACT-3340-3, connect the Red and Blue adapters to the Red and Blue Hoses from the Gauge Set respectively.
8. Place the Desiccant Bags (0671 -1026-01 or 0671-1018-02), and Filter Wrench (0001-0067-01) in the Storage Compartment on top of unit.
9. Remove the User's Manual from the Literature Kit, and place the remainder of the Literature Kit (01 19-0356-01 or 01 19-0357-01) in the Storage Compartment on top of unit.

**BE SURE TO REVIEW THE USER'S MANUAL WITH THE CUSTOMER DURING TRAINING. Then before installing the User's Manual Envelope, ask where the customer would like the envelope installed.**


10. **Peel the backing from** the User's Manual Envelope (421 1-0001 -01) and apply the envelope, with the open end on top, to either side of the unit or in the location designated by the customer.
11. Place the User's Manual in the Envelope.
12. Remove Cap from Service Port on front of unit. **OIL** the seal on the Inline Particle Filter and attach to the service port on front of unit. (SEE USER'S MANUAL)
13. Remove **Recovery** Tank (7009-2447-01 or 7009-2447-03) from box. Remove cardboard **wrap** from Recovery Tank. **Set** on the floor in front of unit.

**PREPARING NEW RECOVERY TANK:** \_\_\_\_\_

1. Open BLUE valve on Recovery Tank to release **ALL COMPRESSED AIR**.
2. Remove the **Inline** Particle Filter from Recovery Tank. **OIL** seal, and re-attach to Recovery Tank. (**BLUE** SIDE)

**PREPARING NEW RECOVERY TANK continued...**

3. Remove the Yellow Hose from the Gauge Set box. OIL the seals on each end of hose.
4. Attach open end of Yellow Hose to BLUE valve of Recovery Tank. Attach other end of Yellow Hose to service port on front of unit.

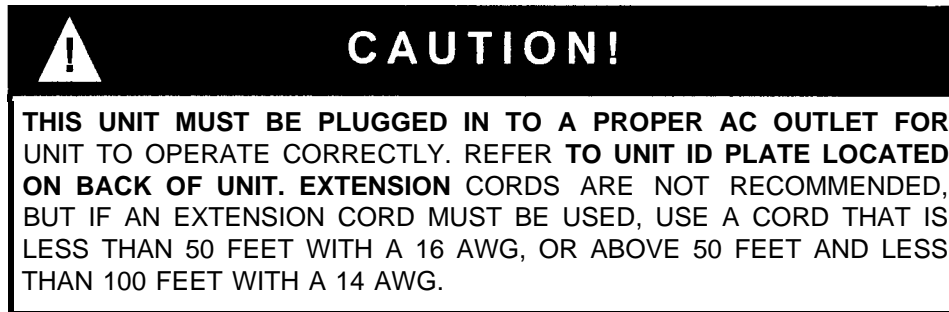

5. Plug AC Cord to appropriate AC outlet according to serial plate. Turn unit on using the front power switch.
6. Press **<AUTO SEQUENCE>** and program a 10 minute vacuum time by pressing **<UP>** twice and then pressing **<HOLD/ENTER/RESTART>** 5 times. (This programs O for remaining parameters.)
7. Once completed close Recovery Tank valve (BLUE) and remove Yellow Hose from Recovery Tank.
8. Re-OIL seal on Yellow Hose and connect to center port on Gauge Set.
9. Place **Recovery** Tank on scale. Tank fittings should face straight out the back of unit. Connect velcro strap and tighten belt.
10. Remove bubble wrap from Red and Blue Hoses from unit.
11. OIL seals on the anti-blow back valves on Red and Blue Hoses from unit. Connect respectively to Recovery Tank.

**PARAMETER SETUP:** \_\_\_\_\_

1. Press **<AMOUNT>** twice to display amount of refrigerant in Recovery Tank. If amount is more than 3 ounces in a empty tank, perform sequence A through C:
  - A. Press **<HOLD/ENTER/RESTART>** and **<AMOUNT>** at the same time while the amount of refrigerant is being displayed.
  - B. Press **<UP>** or **<DOWN>** to change the amount of refrigerant to 1 oz. or until it toggles between O and 1 oz.
  - C. Press **<HOLD/ENTER/RESTART>** to return to normal operation.
2. Press and hold **<UP>** and **<DOWN>** for 5 seconds. Refrigerant charge type will be displayed.
3. If the display shows the incorrect type of refrigerant that is going to be dedicated for this unit, and/or if the "SUN" icon is displayed, stop and call service.
4. Press **<UP>** or **<DOWN>** to change CHARGE parameters to "LbOz", "kg", "Lb, or "Oz". Press **<HOLD/ENTER/RESTART>** to save the desired CHARGE parameters.

5. Press **<UP>** or **<DOWN>** to change AMOUNT parameters to "LbOz", or "kg". Press **<HOLD/ENTER/RESTART>** to save the desired AMOUNT parameters.

## CALIBRATION:

---

1. Close both valves on Recovery Tank,
2. Press and hold **<HOLD/ENTER/RESTART>** for 5 seconds until LCD displays "CAL". Tank icon should be flashing.
3. Press **<HOLD/ENTER/RESTART>** again to start calibration. "in Progress" will be displayed. This will take 2-3 minutes to complete.
4. The temperature will be displayed. Press **<HOLD/ENTER/RESTART>** twice.

## CHARGING RECOVERY TANK:

---

**NOTE:**      ***THIS PROCEDURE IS USED TO SETUP THE UNIT FOR CHARGING. RECOVERY TANK SHOULD HAVE AT LEAST A 25" VACUUM.***

1. Be sure Recovery Tank valves are closed,
2. Disconnect the Red and Blue hoses from the Recovery Tank.
3. Disconnect and Re-Oil both seals on Yellow hose. Connect the Yellow Hose with the open end to a Virgin Tank.
4. Connect the other end of Yellow Hose to the Red Valve on the Recovery Tank.
5. Open the Red valve on the Recovery Tank.

	<h1 style="margin: 0;">WARNING!</h1>
<p><i>USE STANDARD REFRIGERANT HANDLING SAFETY PROCEDURES WHEN PERFORMING INSTALLATION</i></p>	
<p><b>ALWAYS WEAR SAFETY GOGGLES, DON'T SPILL OR TOUCH LIQUID REFRIGERANT, AVOID FLAMES, &amp; EXCESSIVE HEAT. USE ONLY IN WELL VENTILATED AREA.</b></p>	

6. Invert the Virgin Tank and open valve. If a Hand Valve is present on the Yellow hose, open to allow the refrigerant to flow.
7. Raise the **Virgin** Tank to a higher level than the Recovery Tank. Gravity and vacuum will transfer the liquid refrigerant to the Recovery Tank faster than reclaiming it.
8. Press **<AMOUNT>** twice to display the amount of refrigerant that has been transferred.
9. After the desired amount of refrigerant has been transferred, close valves on Virgin Tank and Recovery Tank. Set Virgin Tank on ground upright.
10. Close Hand Valve on Yellow Hose if present. Disconnect Yellow Hose from Recovery Tank.

**CHARGING RECOVERY TANK continued...**

11. **Re-OIL** seals on anti-blow back valves on Red and Blue Hoses from unit and connect respectively to Recovery Tank. Open Recovery Tank valves.
12. **Re-OIL** seals on Yellow Hose and connect to service port on front of unit. Open Hand Valve on Yellow Hose if present.
13. Press **<RECLAIM ONLY>**. This will reclaim the refrigerant from hose.  
(Optional: Opening Virgin Tank valve-will reclaim rest of refrigerant.)
14. Once complete, disconnect Yellow Hose from Virgin Tank.
15. **Re-OIL** seals on Yellow Hose and connect to center port on Gauge Set.

**TANK BAND INSTALLATION:** \_\_\_\_\_

1. Proceed with the Tank Band Instructions (0692-2279-01) to install the Band around Recovery Tank.

**INSTALLATION/SETUP COMPLETE**

<b>REMEMBER TO OIL O-RINGS AND SEALS WHEN ATTACHING HOSES OR FITTINGS</b>
---