

CHAPTER 4

PARTS


PARTS BY PICTORIAL

This chapter describes assemblies/subassemblies/parts considered replaceable at on-site field installation.

NOTE: *The following is a breakdown description of the Serial Number.*

Serial # Location - Backside in front of scale assembly.


Example:

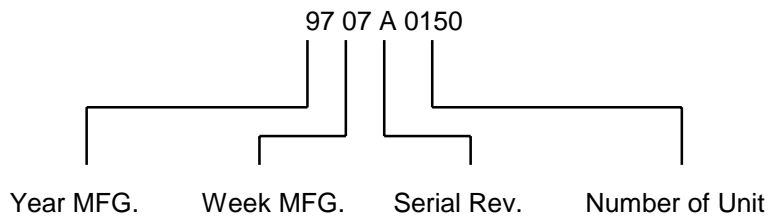

NS: NOT SHOWN IN PICTORIAL


Most parts are the same between the Serial A, B, & C units. Items with an _* next to them are for Serial B only. Items with an _** next to them are for Serial C only.

FULL VIEW (DUAL-3412)

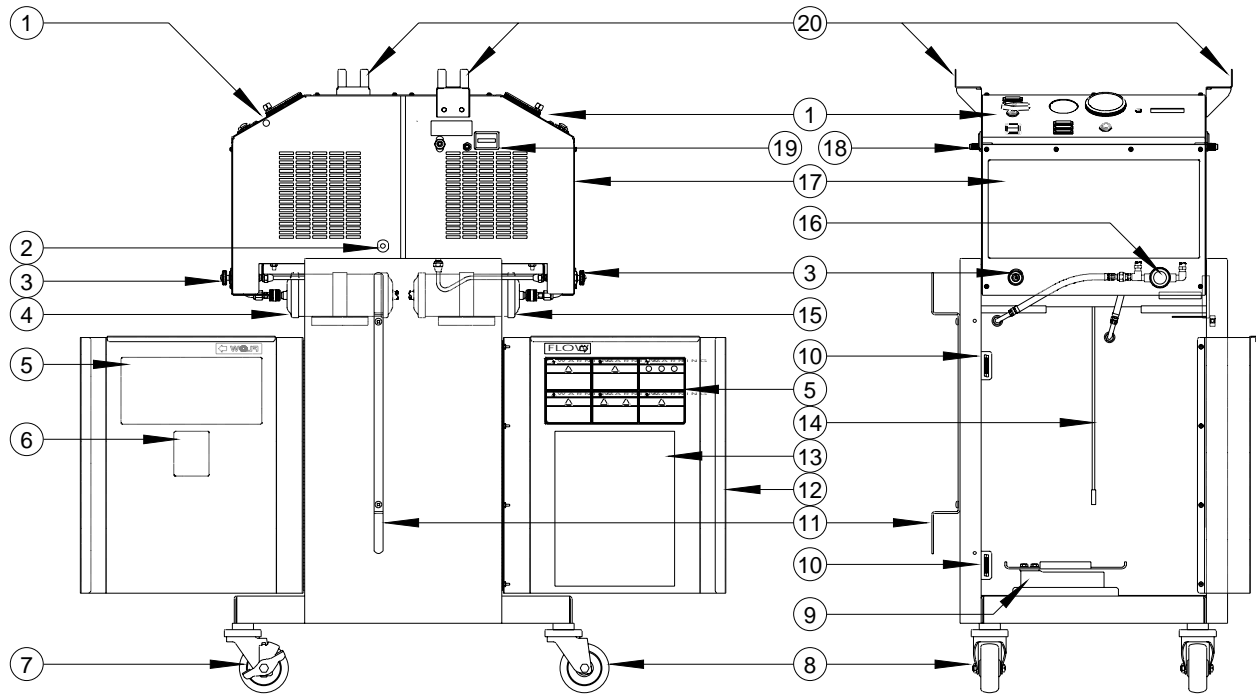


ITEM	DESCRIPTION	PART NUMBER	ITEM	DESCRIPTION	PART NUMBER
1	Panel, Front	See Page 4-4	15a	Kit, R-12 Master Filter	EAK0095C01AB
2a	Cord, AC Power	63319	15b	Strap, Velcro	0424080701
2b	Grommet, AC (3)	20350008	16a	Indicator, Moisture	0316600102
3	Valve, Oil Drain (2)	13581	16b	Kit, Moisture Indicator O-Ring	EAK0016C00A
4	Kit, R-134a Master Filter	EAK0095C02AB	17a	Label, DUAL-3412 (Sun)(2)	EAL0268L05A
4b	Strap, Velcro (2)	0424080701	17b	Label, DUAL-3412 (Snap-on)(2)	EAL0268L06A
5	Label, Warning (2)	EAL0237C00A	18a	Fitting, Service Port for R-12 Recycle	115180
6	Label, Service Repair	EAL0264C00A	18b	Fitting, Service Port for R-12 Charge	115380
7	Caster w/brake (2)	3645005402	18c	Fitting, Service Port for R-134a Recycle	115280
8	Caster w/o brake (2)	3645005401	18d	Fitting, Service Port for R-134a Charge	115480
9	Load Cell (2)	EAA0232L00A	19	Meter, AC Hour	12184
10	Latch, Magnetic (2)	5666004801	20	Bracket, Gauge Set (2)	EASB086C06A
11	Bracket, Hose (2)	7012136903	NS	Cup, Oil Drain (2)	1285
12	Door, Tank	EASB087C02A	NS	Fitting, Valve Core	0304090701
13	Envelope, Manual	4211000101	NS	Tray	EAC0031C00A
14	Gauge, Digital Temp.	81120			

FULL VIEW (PROLINE-600)

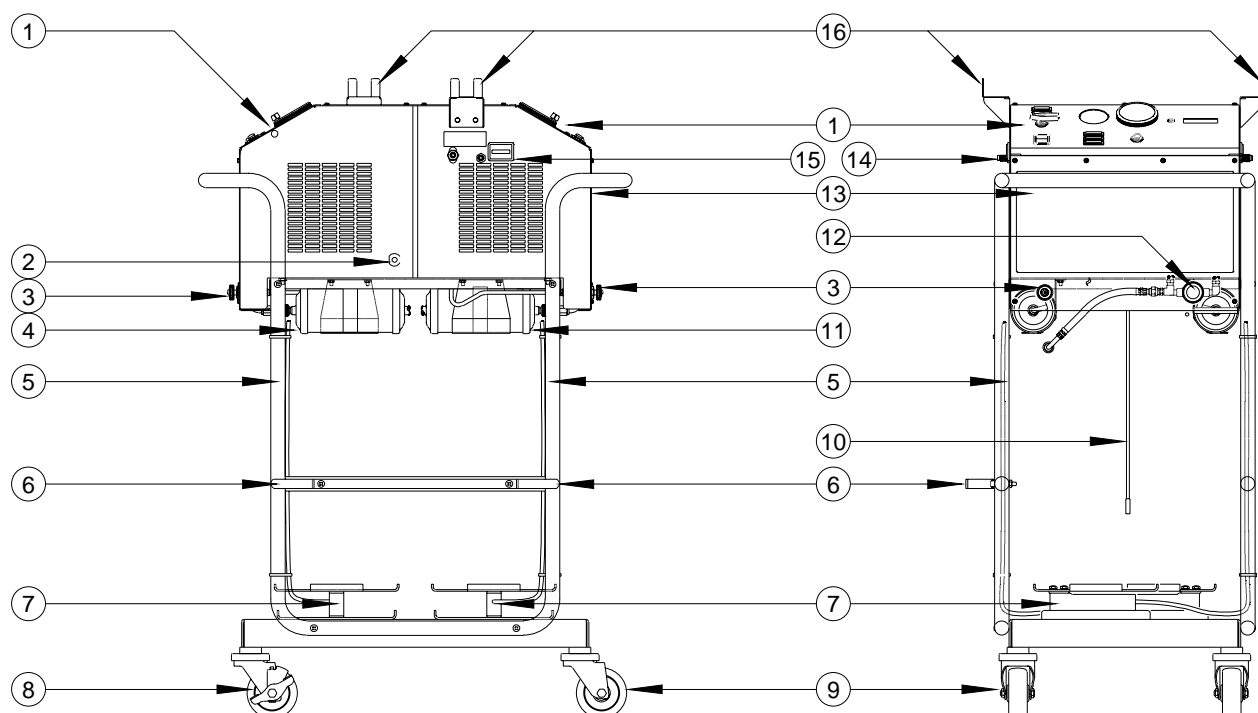

ITEM	DESCRIPTION	PART NUMBER	ITEM	DESCRIPTION	PART NUMBER
1	Panel, Front	See Page 4-4	12a	Indicator, Moisture	0316600102
2a	Cord, AC Power	63319	12b	Kit, Moisture Indicator O-Ring	EAK0016C00A
2b	Grommet, AC (3)	20350008	13	Label, PROLINE-600 (JBC)(2)	EAL0268L02A
3	Valve, Oil Drain (2)	13581	14a	Fitting, Service Port for R-12 Recycle	115180
4	Kit, R-134a Master Filter	EAK0095C02AB	14b	Fitting, Service Port for R-12 Charge	115380
4b	Strap, Velcro (2)	0424080701	14c	Fitting, Service Port for R-134a Recycle	115280
5	Frame (Cart)	EASC086C01A	14d	Fitting, Service Port for R-134a Charge	115480
6	Bracket, Hose (2)	7012136903	15	Meter, AC Hour	12184
7	Load Cell (2)	EAA0232L00A	16	Bracket, Gauge Set (2)	EASB086C06A
8	Caster w/brake (2)	3645005402	NS	Cup, Oil Drain (2)	1285
9	Caster w/o brake (2)	3645005401	NS	Fitting, Valve Core	0304090701
10	Gauge, Digital Temp.	81120	NS	Tray	EAC0031C00A
11a	Kit, R-12 Master Filter	EAK0095C01AB	NS	Label, Warning (2)	EAL0237C00A
11b	Strap, Velcro (2)	0424080701	NS	Label, Service Repair	EAL0264C00A


PANEL VIEW (DUAL-3412 & PROLINE-600)

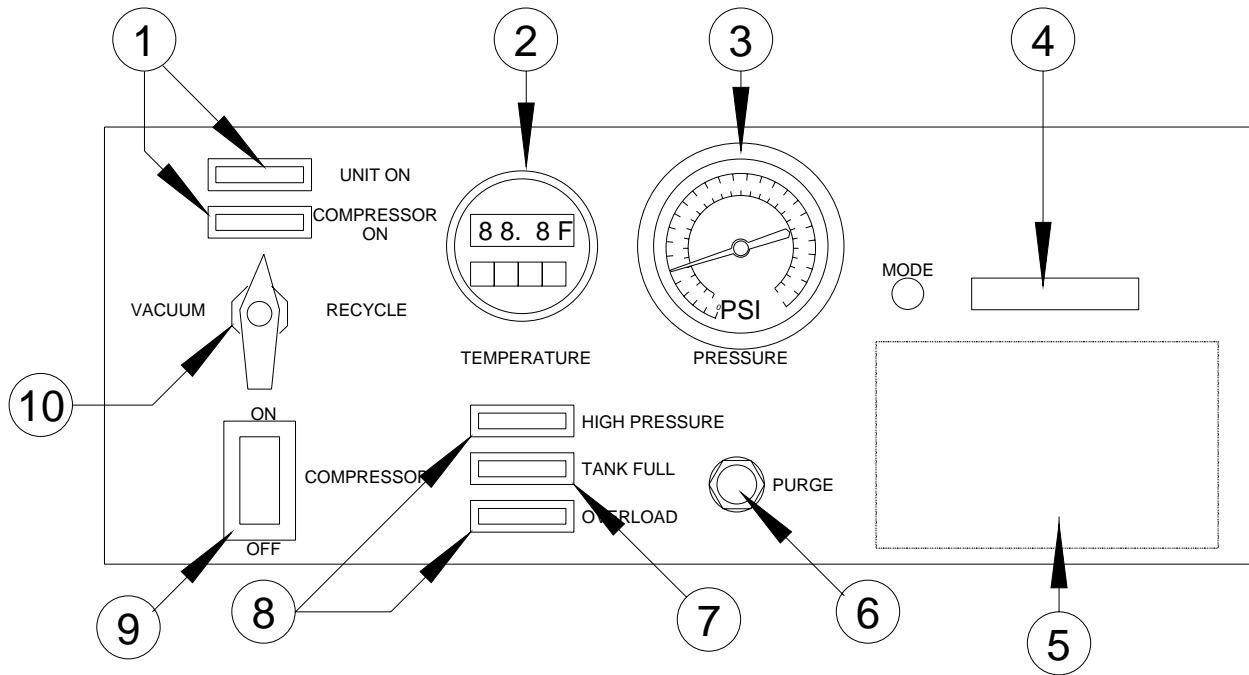

ITEM	DESCRIPTION	PART NUMBER	ITEM	DESCRIPTION	PART NUMBER
1	Lamp, Green Neon	25730	6	Valve, Purge Button	13281
2	Gauge, Digital Temp.	81120	7	Lamp, Blue Neon	25830
3	Gauge, Pressure	81220	8	Lamp, Red Neon	25630
3a	Fitting, Elbow	0647030001	9	Switch, Compressor	0764023801
3b	Fitting, Threaded	0647020601	10	Valve, 3-Way Hand	13381
4a	Board, Controller	EAP0130C10A	10a	Fitting, Threaded	0647020601
4b	Board, Controller	EAP0172L00B**	10b	Fitting, Nylon Elbow	06470108
5a	Label, R-12	EAL0244C00A	10c	Tubing	06690229
5b	Label, R-134a	EAL0245C00A			


NOTE: EAP0172L00B CONTROLLER CAN BE USED IN EARLIER UNITS, BUT CONTROLLER EAP0130C00A CANNOT BE USED IN SERIAL C UNITS.

COMPRESSOR COMPARTMENT (DUAL-3412 & PROLINE-600)

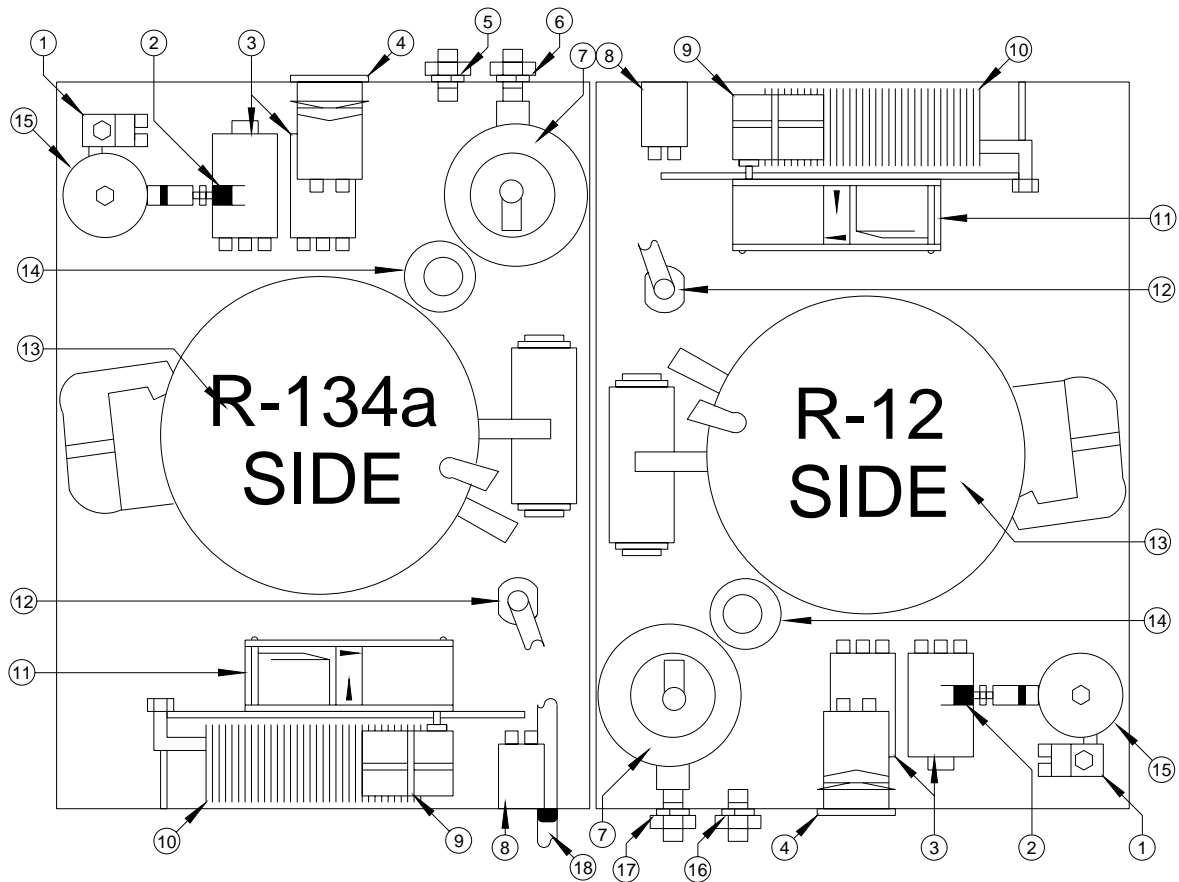


ITEM	DESCRIPTION	PART NUMBER	ITEM	DESCRIPTION	PART NUMBER
1	Solenoid, NO	24737	12a	Cord, AC Power	63319
2	Switch, High Pressure	0549003602	12b	Grommet, AC	20350008
3	Relay, 110 volt	0783036201	13	Compressor Assy.	EAA0154C41A
4	Meter, AC Hour	12184	13a	Klixon	0303010908
5a	Fitting, R-134 Charge	115380	14	Grommet	05010055
5b	Fitting, Valve Core	0304090701	15	Separator, Oil	0111090701
6a	Fitting, R-134 Recycle	115280	15a	Fitting, Threaded	0647020601
6b	Fitting, Valve Core	0304090701	15b	Fitting, Nipple 1/8"	0647019201
7	Separator, Suction	1385	15c	Fitting, Tee	0647020801
8	Relay, 12 volt	07830335	16a	Fitting, R-12 Charge	115480
9a	Transformer	EAW0153C00A	16b	Fitting, Valve Core	0304090701
9b	AC Outlet	222238	17a	Fitting, R-12 Recycle	115180
10	Condenser	0111070501	17b	Fitting, Valve Core	0304090701
11	Fan, Cooling	05870504	18a	Cord, AC Power	63319
			18b	Grommet, AC	20350008

UNIWELD MANIFOLD GAUGE SET (DUAL-3412 & PROLINE-600)

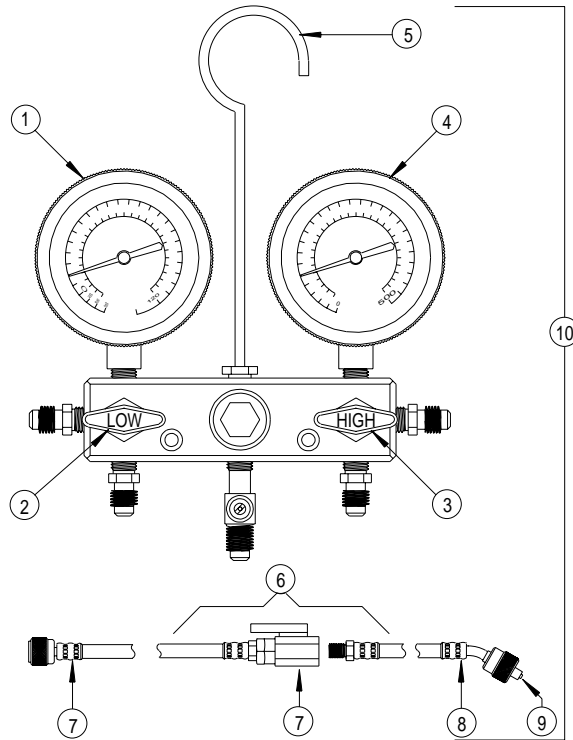


ITEM	DESCRIPTION	PART NUMBER FOR R-12	PART NUMBER FOR R-134a
1	Gauge, Low Side	EAH0013C03A	EAH0014C08A
a	Bezel	EAH0013C07A	EAH0013C07A
2a	Handle Assy., Low	EAH0013C04A	EAH0013C04A
2b	Seat Assy.	EAH0014C04A	EAH0014C04A
2c	Seal Kit	EAK0017C00A	EAK0017C00A
3a	Handle Assy., High	EAH0013C05A	EAH0013C05A
3b	Seat Assy.	EAH0014C04A	EAH0014C04A
3c	Seal Kit	EAK0017C00A	EAK0017C00A
4	Gauge, High Side	EAH0013C02A	EAH0014C07A
a	Bezel	EAH0013C07A	EAH0013C07A
5	Hook & Nut Assy.	EAH0013C01A	EAH0013C01A
6a	Hose Assy. with Valve, Blue	EAH0013C10B	-
6b	Hose Assy. with Valve, Red	EAH0013C08B	-
6c	Hose Assy. with Valve, Yellow	EAH0013C09B	EAH0014C09B
7a	Hose, 65" Blue, with Valve	EAH0013C06B	-
7b	Hose, 72" Blue	-	EAH0014C11A
7c	Hose, 65" Red, with Valve	EAH0013C16B	-
7d	Hose, 72" Red	-	EAH0014C10A
7e	Hose, 65" Yellow, with Valve	EAH0013C15B	-
8a	Hose, 6" Blue	EAH0013C14B	-
8b	Hose, 6" Red	EAH0013C12B	-
8c	Hose, 6" Yellow	EAH0013C13B	EAH0014C05B
9	Kit, Hose Repair	EAK0053C01AB	EAK0053C02AB
10	Gauge Set W/Hoses	EAH0013C00A	EAH0014C01A

ACCESSORIES (DUAL-3412 & PROLINE-600)

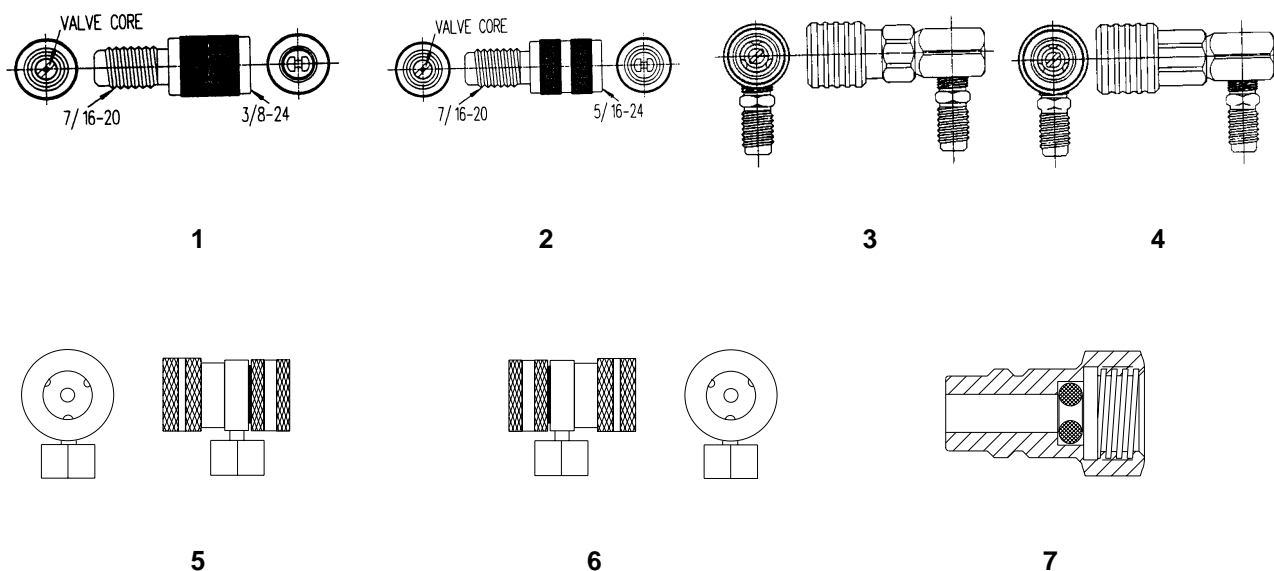

ITEM	DESCRIPTION	PART NUMBER	ITEM	DESCRIPTION	PART NUMBER
1	GM Adapter	0647019601	5b	O-Ring Kit, R-134a Adapters	EAK0027C00AS
2	Ford Adapter	0647020001	6a	R-134a Adapter, Low	0647028708
3	Large GM Adapter	0647019901	6b	O-Ring Kit, R-134a Adapters	EAK0027C00AS
4	GM/Ford	0647019701	7	Adapter, R-134a Tank	115080
5a	R-134a Adapter, High	0647028707			


RECOVERY TANK ASSEMBLIES (DUAL-3412 & PROLINE-600)

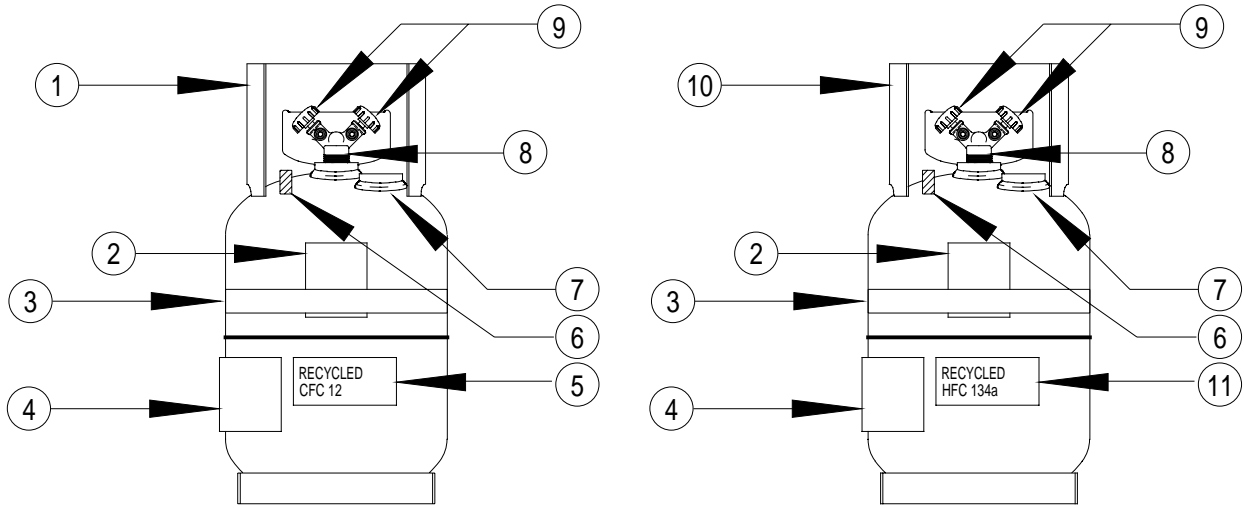

ITEM	DESCRIPTION	PART NUMBER	ITEM	DESCRIPTION	PART NUMBER
1	Tank, R-12 Recovery	EAA0157C00A	7	Plug, Tank	Not Available
2	Label, Tank Use	EAL0036C00A	8	Valve, Tank	Not Available
3	Strap, Elastic	EAA0157C01A	9	Knobs, Tank Valve	Not Available
4	Label, Valve	EAL0037C00A	10	Tank, R-134a Recovery	EAA0158C00A
5	Label, Recycled R-12	EAL0137C00A	11	Label, Recycled R-134a	EAL0138C00A
6	Valve, Purge	Not Available			


NOTE: NEW TANKS (1999) WILL NOT HAVE PLUG (ITEM #7).

R-12 SIDE HOSES & TUBING (DUAL-3412 & PROLINE-600)

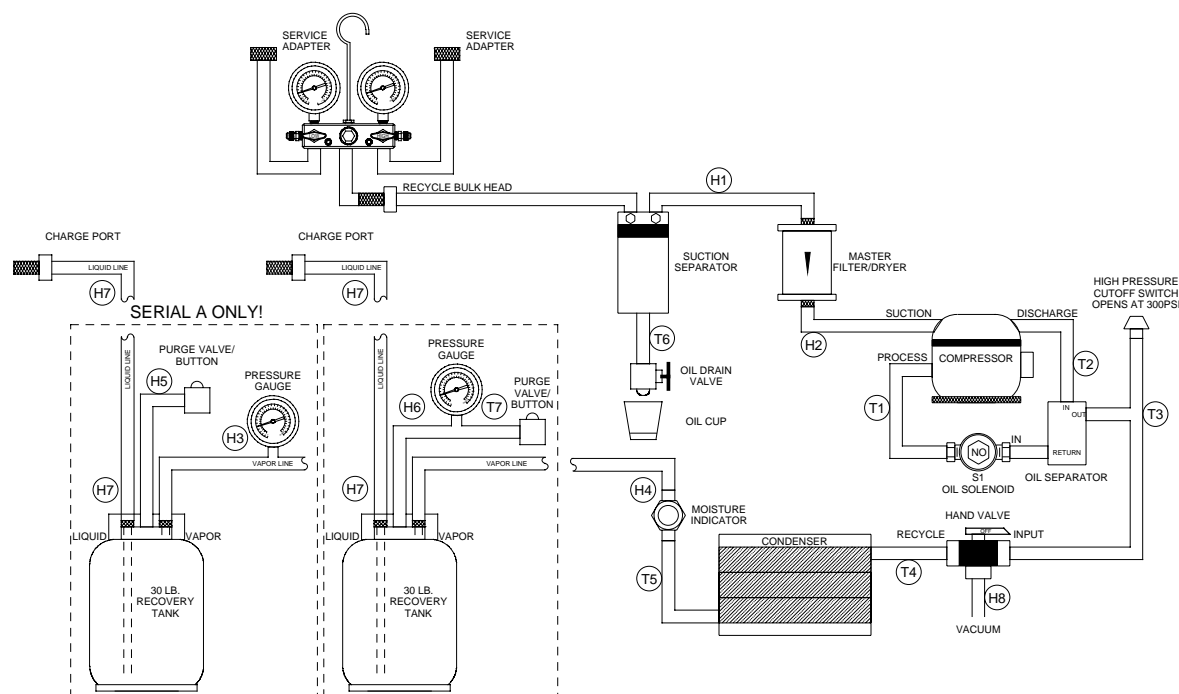

ITEM	DESCRIPTION	PART NUMBER	ITEM	DESCRIPTION	PART NUMBER
T1	Tube, Oil Return	EAH0018C06A	H1	Hose, BLUE Master Filter (input)	EAH0022L07A
T2	Tube, Discharge of Pump	EAH0018C03A	H2	Hose, BLUE Master Filter (output)	EAH0022L05A
T3	Tube, Oil Output	EAH0018C02A	H3	Hose, RED Pressure Gauge	3988030002
T4	Tube, Input of Condenser	EAH0018C05A	H4	Hose, RED Moisture Indicator (output)	EAH0022L01A
T5	Tube, Output of Condenser	EAH0018C01A	H5	Hose, YELLOW Purge Valve	EAH0022L03A
T6	Tube, Oil Drain	EAH0018C07A	H6	Hose, YELLOW Purge Valve	EAH0019C02B
T7	Tube, Purge Valve	EAH0018C08A	H7	Hose, BLUE Charge	EAH0022L09A
NS	Gasket, Copper Flare (Crush Washer)	0647029601	H8	Hose, CLEAR 48" Vacuum (output)	06690229
NS	O-Ring, Tube	0617020501	NS	Seal, R-12 Hose	4312500601
NS	Valve, R-12 Anti-Blow Back	4719-0055-01			

R-134A SIDE HOSES & TUBING (DUAL-3412 & PROLINE-600)

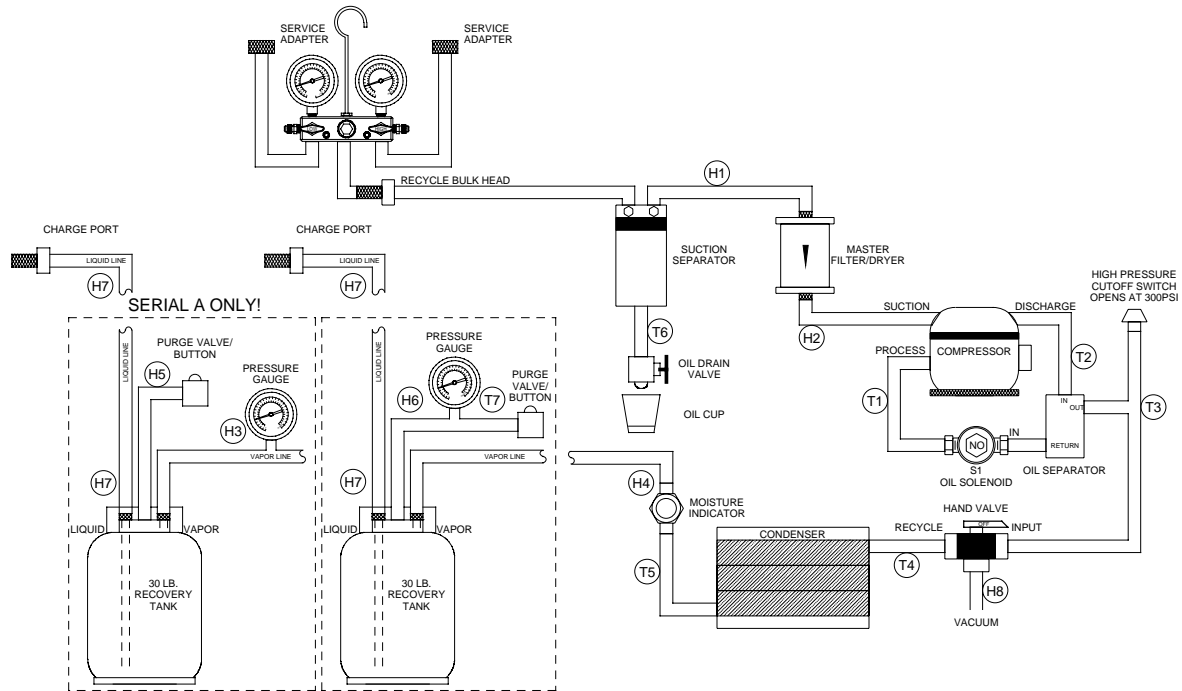

ITEM	DESCRIPTION	PART NUMBER	ITEM	DESCRIPTION	PART NUMBER
T1	Tube, Oil Return	EAH0018C06A	H1	Hose, BLUE Master Filter (input)	EAH0022L08A
T2	Tube, Discharge of Pump	EAH0018C03A	H2	Hose, BLUE Master Filter (output)	EAH0022L06A
T3	Tube, Oil Output	EAH0018C02A	H3	Hose, RED Pressure Gauge	3988030002
T4	Tube, Input of Condenser	EAH0018C05A	H4	Hose, RED Moisture Indicator (output)	EAH0022L02A
T5	Tube, Output of Condenser	EAH0018C01A	H5	Hose, YELLOW Purge Valve	EAH0022L04A
T6	Tube, Oil Drain	EAH0018C07A	H6	Hose, YELLOW Purge Valve	EAH0019C01B
T7	Tube, Purge Valve	EAH0018C08A	H7	Hose, BLUE Charge	EAH0022L10A
NS	Seal, R-134 Hose	4312500801	H8	Hose, CLEAR 48" Vacuum (output)	06690229
NS	O-Ring, Tube	0617020501	NS	Gasket, Copper Flare (Crush Washer)	0647029601
NS	Valve, R-134a Anti-Blow Back	4719-0055-02			

PARTS IN ALPHABETICAL ORDER

DESCRIPTION	PART NUMBER	R-12	R-134a	COMMENTS
AC Outlet	222238	X	X	
Adapter, R-134a High	0647028707	-	X	
Adapter, R-134a Low	0647028708	-	X	
Adapter, R-134a Tank	115080	-	X	
Bezel	EAH0013C07A	X	X	
Board, Controller	EAP0130C10A	X	X	Serial A and B Only!
Board, Controller	EAP0172L00B	X	X	Serial C (Can be used in Serial A and B)
Bracket, Gauge Set	EASB086C06A	X	X	
Bracket, Hose	7012136903	X	X	
Caster w/brake	3645005402	X	X	
Caster w/o brake	3645005401	X	X	
Compressor Assy.	EAA0154C41A	X	X	
Condenser	0111070501	X	X	
Cord, AC Power	63319	X	X	
Cup, Oil Drain	1285	X	X	
Door, Tank	EASB087C02A	X	X	For DUAL-3412 ONLY
Envelope, Manual	4211000101	X	X	For DUAL-3412 User's Manual
Fan, Cooling	05870504	X	X	
Fitting, Elbow	0647030001	X	X	
Fitting, Nipple 1/8"	0647019201	X	X	
Fitting, Nylon Elbow	06470108	X	X	
Fitting, R-12 Charge	115480	X	-	Bulkhead Fitting
Fitting, R-12 Recycle	115180	X	-	Bulkhead Fitting
Fitting, R-134 Charge	115380	-	X	Bulkhead Fitting
Fitting, R-134 Recycle	115280	-	X	Bulkhead Fitting
Fitting, Tee	0647020801	X	X	
Fitting, Threaded	0647020601	X	X	
Fitting, Valve Core	0304090701	X	X	
Ford Adapter	0647020001	X	-	
Frame (Cart)	EASC086C01A	X	X	For PROLINE-600
Gasket, Copper Flare	0647029601	X	X	Used with Anti-Blow Back Valves
Gauge Set W/Hoses	EAH0013C00A	X	-	
Gauge Set W/Hoses	EAH0014C01A	-	X	
Gauge, Digital Temp.	81120	X	X	
Gauge, High Side	EAH0013C02A	X	-	
Gauge, High Side	EAH0014C07A	-	X	
Gauge, Low Side	EAH0013C03A	X	-	
Gauge, Low Side	EAH0014C08A	-	X	
Gauge, Pressure	81220	X	X	
GM Adapter	0647-0196-01	X	-	
GM/Ford	0647-0197-01	X	-	
Grommet	05010055	X	X	
Grommet, AC	20350008	X	X	
Handle Assy., High	EAH0013C05A	X	X	
Handle Assy., Low	EAH0013C04A	X	X	
Hook & Nut Assy.	EAH0013C01A	X	X	
Hose Assy. with Valve, Blue	EAH0013C10B	X	-	
Hose Assy. with Valve, Red	EAH0013C08B	X	-	
Hose Assy. with Valve, Yellow	EAH0013C09B	X	-	

CHAPTER 4 PARTS

<u>DESCRIPTION</u>	<u>PART NUMBER</u>	<u>R-12</u>	<u>R-134a</u>	<u>COMMENTS</u>
Hose Assy. with Valve, Yellow	EAH0014C09B	-	X	
Hose, 6" Blue	EAH0013C14B	X	-	
Hose, 6" Red	EAH0013C12B	X	-	
Hose, 6" Yellow	EAH0013C13B	X	-	
Hose, 6" Yellow	EAH0014C05B	-	X	
Hose, 65" Blue	EAH0013C06B	X	-	
Hose, 65" Red	EAH0013C16B	X	-	
Hose, 65" Yellow	EAH0013C15B	X	-	
Hose, 72" Blue	EAH0014C11A	-	X	
Hose, 72" Red	EAH0014C10A	-	X	
Hose, BLUE Charge	EAH0022L09A	X	-	
Hose, BLUE Charge	EAH0022L10A	-	X	
Hose, BLUE Master Filter (input)	EAH0022L07A	X	-	
Hose, BLUE Master Filter (input)	EAH0022L08A	-	X	
Hose, BLUE Master Filter (output)	EAH0022L05A	X	-	
Hose, BLUE Master Filter (output)	EAH0022L06A	-	X	
Hose, CLEAR 48" Vacuum (output)	06690229	X	X	
Hose, RED Moisture Indicator (output)	EAH0022L01A	X	-	
Hose, RED Moisture Indicator (output)	EAH0022L02A	-	X	
Hose, RED Pressure Gauge	3988030002	X	X	
Hose, YELLOW Purge Valve	EAH0022L03A	X	-	
Hose, YELLOW Purge Valve	EAH0022L04A	-	X	
Indicator, Moisture	0316600102	X	X	
Kit, Hose Seal	EAK0053C01AB	X	-	For Gauge Set Hoses
Kit, Hose Seal	EAK0053C02AB	-	X	For Gauge Set Hoses
Kit, Moisture Indicator O-Ring	EAK0016C00A	X	X	
Kit, R-12 Master Filter	EAK0095C01AB	X	-	
Kit, R-134a Master Filter	EAK0095C02AB	-	X	
Kit, Seal	EAK0017C00A	X	X	For Gauge Set
Klixon	0303010908	X	X	
Label	EAL0268L06A	X	X	DUAL-3412 (Snap-on)
Label	EAL0268L05A	X	X	DUAL-3412 (Sun)
Label	EAL0268L02A	X	X	PROLINE-600 (JBC)
Label	EAL0244C00A	X	-	R-12 Panel
Label	EAL0245C00A	-	X	R-134a Panel
Label, Recycled R-12	EAL0137C00A	X	-	For Recovery Tank
Label, Recycled R-134a	EAL0138C00A	-	X	For Recovery Tank
Label, Service Repair	EAL0264C00A	X	X	EquiServ Repair Label
Label, Tank Use	EAL0036C00A	X	X	
Label, Valve	EAL0037C00A	X	X	
Label, Warning	EAL0237C00A	X	X	
Lamp, Blue Neon	25830	X	X	
Lamp, Green Neon	25730	X	X	
Lamp, Red Neon	25630	X	X	

<u>DESCRIPTION</u>	<u>PART NUMBER</u>	<u>R-12</u>	<u>R-134a</u>	<u>COMMENTS</u>
Large GM Adapter	0647019901	X	-	
Latch, Magnetic	5666004801	X	X	For DUAL-3412
Load Cell	EAA0232L00A	X	X	
Meter, AC Hour	12184	X	X	
O-Ring Kit, R-134a Adapters	EAK0027C00AS	-	X	For Vehicle Adapters
O-Ring, Tube	0617020501	X	X	
Relay, 110 volt	0783036201	X	X	
Relay, 12 volt	07830335	X	X	
Seal, R-12 Hose	4312500601	X	-	
Seal, R-134 Hose	4312500801	-	X	
Seat Assy.	EAH0014C04A	X	X	
Separator, Oil	0111090701	X	X	For Compressor
Separator, Suction	1385	X	X	
Solenoid, NO	24737	X	X	Normally Open, 110 Volts
Strap, Elastic	EAA0157C01A	X	X	For Recovery Tank
Strap, Velcro	0424080701	X	X	For Master Filter
Switch, Compressor	0764023801	X	X	ON/OFF Switch
Switch, High Pressure	0549003602	X	X	Opens at 300 PSI
Tank, R-12 Recovery	EAA0157C00A	X	-	30 Pounds
Tank, R-134a Recovery	EAA0158C00A	-	X	30 Pounds
Transformer	EAW0153C00A	X	X	
Tray	EAC0031C00A	X	X	For Accessories
Tube, Discharge of Pump	EAH0018C03A	X	X	
Tube, Input of Condenser	EAH0018C05A	X	X	
Tube, Oil Drain	EAH0018C07A	X	X	
Tube, Oil Output	EAH0018C02A	X	X	
Tube, Oil Return	EAH0018C06A	X	X	
Tube, Output of Condenser	EAH0018C01A	X	X	
Valve, 3-Way Hand	13381	X	X	
Valve, Ball	EAH0013C11A	X	X	
Valve, Oil Drain	13581	X	X	
Valve, Purge Button	13281	X	X	
Valve, R-12 Anti-Blow Back	4719-0055-01	X	-	
Valve, R-134a Anti- Blow Back	4719-0055-02	-	X	

PARTS IN NUMERICAL ORDER

<u>PART NUMBER</u>	<u>DESCRIPTION</u>	<u>R-12</u>	<u>R-134a</u>	<u>COMMENTS</u>
0111070501	Condenser	X	X	
0111090701	Separator, Oil	X	X	For Compressor
0303010908	Klixon	X	X	
0304090701	Fitting, Valve Core	X	X	
0316600102	Indicator, Moisture	X	X	
0424080701	Strap, Velcro	X	X	For Master Filter
05010055	Grommet	X	X	
0549003602	Switch, High Pressure	X	X	Opens at 300 PSI
05870504	Fan, Cooling	X	X	
0617020501	O-Ring, Tube	X	X	
06470108	Fitting, Nylon Elbow	X	X	
0647019201	Fitting, Nipple 1/8"	X	X	
0647-0196-01	GM Adapter	X	-	
0647-0197-01	GM/Ford	X	-	
0647019901	Large GM Adapter	X	-	
0647020001	Ford Adapter	X	-	
0647020601	Fitting, Threaded	X	X	
0647020801	Fitting, Tee	X	X	
0647028707	Adapter, R-134a High	-	X	
0647028708	Adapter, R-134a Low	-	X	
0647029601	Gasket, Copper Flare	X	X	Used with Anti-Blow Back Valves
0647030001	Fitting, Elbow	X	X	
06690229	Hose, CLEAR 48" Vacuum (output)	X	X	
0764023801	Switch, Compressor	X	X	ON/OFF Switch
07830335	Relay, 12 volt	X	X	
0783036201	Relay, 110 volt	X	X	
115080	Adapter, R-134a Tank	-	X	
115180	Fitting, R-12 Recycle	X	-	Bulkhead Fitting
115280	Fitting, R-134 Recycle	-	X	Bulkhead Fitting
115380	Fitting, R-134 Charge	-	X	Bulkhead Fitting
115480	Fitting, R-12 Charge	X	-	Bulkhead Fitting
12184	Meter, AC Hour	X	X	
1285	Cup, Oil Drain	X	X	
13281	Valve, Purge Button	X	X	
13381	Valve, 3-Way Hand	X	X	
13581	Valve, Oil Drain	X	X	
1385	Separator, Suction	X	X	
20350008	Grommet, AC	X	X	
222238	AC Outlet	X	X	
24737	Solenoid, NO	X	X	Normally Open, 110 Volts
25630	Lamp, Red Neon	X	X	
25730	Lamp, Green Neon	X	X	
25830	Lamp, Blue Neon	X	X	
3645005401	Caster w/o brake	X	X	
3645005402	Caster w/brake	X	X	
3988030002	Hose, RED Pressure Gauge	X	X	
4211000101	Envelope, Manual	X	X	For DUAL-3412 User's Manual
4312500601	Seal, R-12 Hose	X	-	
4312500801	Seal, R-134 Hose	-	X	
4719-0055-01	Valve, R-12 Anti-Blow Back	X	-	

<u>PART NUMBER</u>	<u>DESCRIPTION</u>	<u>R-12</u>	<u>R-134a</u>	<u>COMMENTS</u>
4719-0055-02	Valve, R-134a Anti-Blow Back	-	X	
5666004801	Latch, Magnetic	X	X	For DUAL-3412
63319	Cord, AC Power	X	X	
7012136903	Bracket, Hose	X	X	
81120	Gauge, Digital Temp.	X	X	
81220	Gauge, Pressure	X	X	
EAA0154C41A	Compressor Assy.	X	X	
EAA0157C00A	Tank, R-12 Recovery	X	-	30 Pounds
EAA0157C01A	Strap, Elastic	X	X	For Recovery Tank
EAA0158C00A	Tank, R-134a Recovery	-	X	30 Pounds
EAA0232L00A	Load Cell	X	X	
EAC0031C00A	Tray	X	X	For Accessories
EAH0013C00A	Gauge Set W/Hoses	X	-	
EAH0013C01A	Hook & Nut Assy.	X	X	
EAH0013C02A	Gauge, High Side	X	-	
EAH0013C03A	Gauge, Low Side	X	-	
EAH0013C04A	Handle Assy., Low	X	X	
EAH0013C05A	Handle Assy., High	X	X	
EAH0013C06B	Hose, 65" Blue	X	-	
EAH0013C07A	Bezel	X	X	
EAH0013C08B	Hose Assy. with Valve, Red	X	-	
EAH0013C09B	Hose Assy. with Valve, Yellow	X	-	
EAH0013C10B	Hose Assy. with Valve, Blue	X	-	
EAH0013C11A	Valve, Ball	X	X	
EAH0013C12B	Hose, 6" Red	X	-	
EAH0013C13B	Hose, 6" Yellow	X	-	
EAH0013C14B	Hose, 6" Blue	X	-	
EAH0013C15B	Hose, 65" Yellow	X	-	
EAH0013C16B	Hose, 65" Red	X	-	
EAH0014C01A	Gauge Set W/Hoses	-	X	
EAH0014C04A	Seat Assy.	X	X	
EAH0014C05B	Hose, 6" Yellow	-	X	
EAH0014C07A	Gauge, High Side	-	X	
EAH0014C08A	Gauge, Low Side	-	X	
EAH0014C09B	Hose Assy. with Valve, Yellow	-	X	
EAH0014C10A	Hose, 72" Red	-	X	
EAH0014C11A	Hose, 72" Blue	-	X	
EAH0018C01A	Tube, Output of Condenser	X	X	
EAH0018C02A	Tube, Oil Output	X	X	
EAH0018C03A	Tube, Discharge of Pump	X	X	
EAH0018C05A	Tube, Input of Condenser	X	X	
EAH0018C06A	Tube, Oil Return	X	X	
EAH0018C07A	Tube, Oil Drain	X	X	
EAH0022L01A	Hose, RED Moisture Indicator (output)	X	-	
EAH0022L02A	Hose, RED Moisture Indicator (output)	-	X	
EAH0022L03A	Hose, YELLOW Purge Valve	X	-	

CHAPTER 4 PARTS

PART NUMBER	DESCRIPTION	R-12	R-134a	COMMENTS
EAH0022L04A	Hose, YELLOW Purge Valve	-	X	
EAH0022L05A	Hose, BLUE Master Filter (output)	X	-	
EAH0022L06A	Hose, BLUE Master Filter (output)	-	X	
EAH0022L07A	Hose, BLUE Master Filter (input)	X	-	
EAH0022L08A	Hose, BLUE Master Filter (input)	-	X	
EAH0022L09A	Hose, BLUE Charge	X	-	
EAH0022L10A	Hose, BLUE Charge	-	X	
EAK0016C00A	Kit, Moisture Indicator O-Ring	X	X	
EAK0017C00A	Kit, Seal	X	X	For Gauge Set
EAK0027C00AS	O-Ring Kit, R-134a Adapters	-	X	For Vehicle Adapters
EAK0053C01AB	Kit, Hose Seal	X	-	For Gauge Set Hoses
EAK0053C02AB	Kit, Hose Seal	-	X	For Gauge Set Hoses
EAK0095C01AB	Kit, R-12 Master Filter	X	-	
EAK0095C02AB	Kit, R-134a Master Filter	-	X	
EAL0036C00A	Label, Tank Use	X	X	
EAL0037C00A	Label, Valve	X	X	
EAL0137C00A	Label, Recycled R-12	X	-	For Recovery Tank
EAL0138C00A	Label, Recycled R-134a	-	X	For Recovery Tank
EAL0237C00A	Label, Warning	X	X	
EAL0244C00A	Label	X	-	R-12 Panel
EAL0245C00A	Label	-	X	R-134a Panel
EAL0264C00A	Label, Service Repair	X	X	EquiServ Repair Label
EAL0268L02A	Label	X	X	PROLINE-600 (JBC)
EAL0268L05A	Label	X	X	DUAL-3412 (Sun)
EAL0268L06A	Label	X	X	DUAL-3412 (Snap-on)
EAP0130C10A	Board, Controller	X	X	Serial A and B Only!
EAP0172L00B	Board, Controller	X	X	Serial C (Can be used in Serial A and B units)
EASB086C06A	Bracket, Gauge Set	X	X	
EASB087C02A	Door, Tank	X	X	For DUAL-3412 ONLY
EASC086C01A	Frame (Cart)	X	X	For PROLINE-600
EAW0153C00A	Transformer	X	X	

WIRING HARNESSES

<u>PART NUMBER</u>	<u>DESCRIPTION</u>	<u>R-12</u>	<u>R-134a</u>	<u>COMMENTS</u>
EAW0154C00A	Main Wiring Harness	X	X	Complete Harness
EAW0155C00A	Scale-Relay Harness	X	X	From Board to +12 Relay