



Model: EEEA118A
Georgia Service Inspection
System Analyzer Setup
Page: 1 of 6

Installation Instructions

**INSTALLATION MUST BE PERFORMED
BY
QUALIFIED PERSONNEL ONLY**

INSTALLATION OVERVIEW: _____

The John Bean Georgia Analyzer is shipped as a fully assembled analyzer, with the exception of the Keyboard, Monitor, Printer and accessories. The following instructions, along with the Monitor Base Kit Instructions (EAK0185L00A), and the Zero Air Kit (EAK0097C00AF) will provide you with the steps necessary to completely setup the analyzer.

PARTS & ACCESSORIES LIST: _____

PART NUMBER	DESCRIPTION	QTY
0131-0024	Gas Bottle Regulator	2
0271-0103-01	Calibration Gas	Local
0301-0944-01	Filter Element, 75 Micron	4
0301-0945-01	Filter Element, 8 Micron	4
0424-0804-01	Velcro, Loop	11"
0424-0804-02	Velcro, Hook	11"
0528-0032-01	Printer, Okidata 390 Turbo	1
0528-0994	Printer Paper	1
0528-1094-01	Ribbon, Printer	1
0552-0072-01	1.44 Megabyte Floppy Unformatted	1
0552-0104-01	DOS 6.22 Package	1
0552-0117-01	Keyboard	1
0552-1086-01	Keyboard Cover Protector	1
0610-1511-04	Screw, Sheet Metal #8 X ¼	4
0647-0069	Brass Fitting	2
0682-0808-01	Label, Service Call	1
0692-1834-01	Quality Control Questionnaire, SEL 1043C	1
0692-2442-01	Operators Manual (Generic)	1
0692-2446-01	Installation Instruction	1
0692-2462-01	Vehicle Diagnostic Manual	1
0787-0035	Probe Caps	2
1-4281	Filter, In-Line	2
1-7726	Screw, 10x32 x ½", HWHTT	6
2161-0023	Lead Hanger	6
3-608	Monitor, 15" SVGA Color	1
3988-0230-01	Hose Assembly, Exhaust 3/16	1
3988-0231-01	Hose Assembly, Exhaust Dual 3/16	1

PART NUMBER	DESCRIPTION	QTY
5-2645	Clamp, Locking Cable	1
5878-0016	Cable Tie, 14.5"	1
6004-0262-05	Cable Assembly, Trigger Pickup	1
6004-0462	Test Lead, Volt / Ohm	1
6004-0566-01	Cable Assembly, Tachometer Lead	1
6004-0614-01	Antenna Cable	1
6005-0181-01	Adapter Assembly, Nissan Pulsar/Quad 4	1
6005-0184-01	Adapter, Rpm, BMW	1
6005-0184-02	Adapter, Rpm, Acura	1
7009-1869	Probe Exhaust Assembly.	2
7009-1929	Trigger Pickup Assembly.	1
7009-2037-01	Antenna, RPM (Figure 8)	1
7009-2223-01	Adapter, RPM, Nissan 300ZX Turbo	1
7049-0004-01	Oxygen Sensor	1
EAA0136C01A	Hose, Low Scale Gas ID Tag	1
EAA0136C02A	Hose, Mid Scale Gas ID Tag	1
EAA0145C00A	Gas Cap Pressure Tester Assembly	1
EAA0190L10A	Hanger, Lead	4
EAK0097C00AF	Zero Air Kit	1
EAK0185L00A	Monitor Base Kit	1
EAL0234C00A	Label, Keyboard	1
EASC071C82A	Bar Code Scanner Storage Bracket	1
EASC071C83A	Bar Code Scanner Mounting Bracket	1
EAW0096C00A	Monitor AC Power Cable	1
EAW0166L03A	Cable, Gas Cap Tester Interface	1
EAW0179L00A	Dyno Interface Cable	1
EERC102A	Remote Control	1
YA9020	Wheel Chock	1
ZEEEA118A	Operator's Manual (Specifically For Georgia)	1

REQUIRED TOOLS: _____

- **GEORGIA GAS BOTTLE (0271-0103-01)**
- **COMPLETE TOOL KIT**
- **ANTI-STATIC KIT**
- **SERVICE KEYS (from Technical Support), (215 and 225)**

INSTALLATION INSTRUCTIONS: _____



NOTE: *If the SIS was soft shipped (shipped without a carton) skip steps 1 through 4.*

1. Cut the Straps, and remove the top of the carton, top packing, and carton sides.
2. Slide the SIS and carton base off of the pallet, and split the corners of the base carton.
3. Lean the SIS so that one half of the foam base can be removed, and remove it.
4. Lean the SIS so the other half of the foam base can be removed, and remove it.
5. Remove all shipping tape from the SIS Cabinet.
6. Check for proper AC and GROUND connections at the outlet. This can be accomplished by using an AC outlet polarity checker, that can be obtained at a local hardware store.
7. Place the Operate/Standby switch into the operate position.

8. Verify that the parts and accessories listed are all present with the machine.
9. Following the instructions in the Monitor Base Kit (EAK0185L00A), attach the monitor to the SIS.
10. Remove and discard the Monitor AC Power Cable that was shipped with the monitor.
11. Connect the Monitor AC Power Cable (EAW0096C00A) to the back of the monitor, and to the AC port on the rear panel of the analyzer labeled “**Video Power**”.
12. Connect the Data cable coming from the rear of the monitor to the port on the rear of the analyzer, below the monitor, labeled “**Video**”.

NOTE: *The Blue and Red connectors, for the Speakers in the monitor, do not get connected. They can be tie wrapped to the Video Data Cable.*

13. Remove the bubble wrap from the keyboard, and ensure that it is plugged into the keyboard extension under the monitor.

NOTE: *The following step may be complete at the factory.*

14. Attach the Keyboard Label (EAL0234C00A) to the top of the keyboard (0552-0117-01).
15. Attach the Keyboard Cover (0552-1086-01) to the top of the keyboard.
16. In order to mount Velcro turn the keyboard upside down. Peel the backing off the hook side Velcro (0424-0804-02) and attach to keyboard. Attach soft side (Loop) Velcro (0424-0804-01) to Velcro Hook. Remove backing, exposing adhesive and place keyboard in its proper position and press firmly.
17. Place a package of printer paper (0528-0994), in the rectangular spot, under the slide out printer shelf.
18. Remove the Printer (0528-0032-01) from its carton. Remove all tape from the printer and remove the carriage cover to gain access to the print head. Referring to Figure 1, ensure that the printer ribbon cartridge is installed properly and remove the plastic stop that secures the print head.

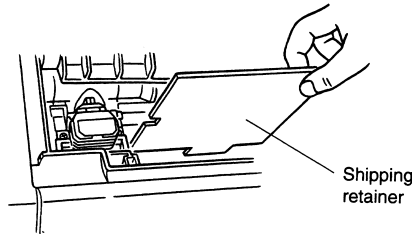


Figure 1, Shipping Retainer Removal

19. Load the printer paper, installed in step 16 into the Printer.
20. Referring to Figure 2, remove the Ribbon Cartridge Inspection Cover, by gently pulling up on the middle of this cover until it pops off.

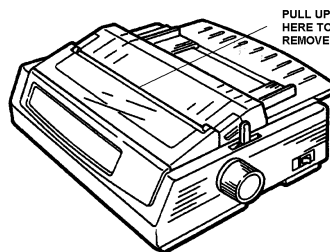


Figure 2, Ribbon Cartridge Inspection Cover Removal

21. Place the printer on the printer shelf, in the opening below the keyboard. Attach the power cable and data cable, already located in the analyzer, to their respective ports on the back of the printer.
22. Attach a wire tie to the rear of the printer, just behind the power connector of the printer to secure both the Printer Power and Data Cables. This will stop the cables from getting in the way of the paper.

23. Using the six 10-32x1/2" screws (1-7726), install the six hangers (2161-0023) into the slots on the rear corners of the Analyzer. Three slots are located on each corner of the tester's stand.
 24. Attach the four (4) Lead Hangers (EAA0190L00A) to the Unit Handles.
- NOTE: *The Bar Code Reader Bracket can be mounted on either side of the Analyzer.***
25. Mount the Bar Code Scanner Mounting Bracket (EASC071C83A) to the underside of the Computer Cabinet Sheet Metal Assembly, using two of the #8 X ¼ Sheet Metal Screws (0610-1511-04).
 26. Mount the Bar Code Scanner Storage Bracket (EASC071C82A) to the Mounting Bracket just installed, using two of the #8 X ¼ Sheet Metal Screws (0610-1511-04).
 27. Place the following items in the storage area:
 - (4) 75 Micron Filter Elements (0301-0944-01)
 - (4) 8 Micron Filter Elements (0301-0945-01)
 - (1) Printer Ribbon (0528-1094-01)
 - (1) DOS 6.22 Package (0552-0104-01)
 - (2) Exhaust Probe Leak Check Caps (0787-0035)
 - (1) BMW RPM Adapter (6005-0184-01)
 - (1) Acura RPM Adapter (6005-0184-02)
 - (1) Nissan 300ZX RPM Adapter (7009-2223-01)
 - (1) Quad 4 / Nissan RPM Adapter (6005-0181-01)
 - (2) In-Line Filter (1-4281)
 28. Connect the Antenna RPM Cable Assembly (6004-0614-01) to the Antenna Figure 8 Loop (7009-2037-01). Attach the other end of the Antenna RPM Cable Assembly to the "ANT." connector on the rear of the analyzer.
 29. Referring to Figure 3, measure back 4" from the connector that attaches to the Figure 8 Loop. Place that point on the cable next to the Figure 8 Loop and place a Cable Tie (5878-0016) on it. This will stop the cable from being pulled out of the Antenna Cable Connector.

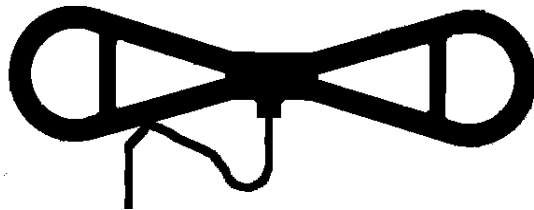


Figure 3, Antenna Tie Wrap Modification

30. Connect the Trigger Pickup (7009-1929) to the Trigger Pickup Adapter Lead (6004-0262-05).
31. Connect the 30 foot Blue Trigger Pickup Cable (6004-0566-01) to the Assembled pieces in step 30. Attach the other end of the 30 foot Blue Trigger Pickup Cable to the "TACH." connector on the rear of the analyzer.
32. Connect the Volt/Ohm Lead (6004-0462) to the "V / Ω" connector on the rear of the analyzer.
33. Connect the Exhaust Hose Assembly (3988-0230-01) to the filter bowls on the rear on the analyzer.
34. Connect the Dual Exhaust Hose (3988-0231-01) to the female quick disconnect fitting on the Exhaust Hose Assembly, installed previously.
35. Connect an Exhaust Probe (7009-1869) to both fittings on the end of the exhaust hoses.
36. Following the instructions in the Zero Air Kit (EAW0097C00AF), mount the Zero Air Bottle to the analyzer.

37. Attach the two brass fittings (0647-0069) to the regulators (0131-0024).
38. Attach a regulator to the gas bottle (supplied locally).

NOTE: *The Calibration Gas Bottle Hose to hooks to “CAL GAS 1”*

39. Attach the hoses (EAA0136C0*A), with label, to the proper calibration tank brass fitting.
40. Attach the aspirator hose to the Aspirator Port. Route the other end of the aspirator hose through the base of the analyzer. Ensure that the hose goes through the top and bottom holes of the base.
41. Unpack the Gas Cap Pressure Tester Assembly (EAA0145C00A), and place all the accessories of that unit in the storage drawer.
42. Attach the RJ45 end of the Gas Cap Tester Interface Adapter Cable (EAW0166L03A) to the RJ45 connector on the Gas Cap Tester.
43. Measure back two inches on the end of the Gas Cap Tester Cable just connected. Attach the Cable Clamp (5-2645) at this point on the cable.
44. Remove the screw in the bottom left corner of the control panel on the Gas Cap Tester. Using the screw just removed attach and secure the cable clamp to the Gas Cap Tester.
45. Give the Product and Warranty Registration documentation to the Analyzer Owner and ensure that it is filled out and mailed.
46. Place the Service Call Label (0682-0808-01) on the rear of the machine, in a place that is easily readable by the customer.
47. Provide the Owner with the Operators' Manuals.
48. Completely fill out the Quality Control Questionnaire (0692-1834-01) and mail it according to the instructions printed on the form.

NOTE: *The Wheel Chocks, Dyno Interface Cable and Remote Control will be used in conjunction with the Dynamometer.*

49. Plug in the analyzer and power it up, and wait until the analyzer boots.
50. Ensure the printer is on and press and hold **<SHIFT>**, and press **<SEL>**. This puts you in the Menu Mode.
51. Press **<GROUP>** until **“Rear Feed”** is displayed.
52. Press **<ITEM>** until **“Rear Feed, Form Tear-Off, Off”** is printed.
53. Press **<SET>** twice and it will print **“Rear Feed, Form Tear-Off, 1 sec”**. This advances the paper to the tear bar automatically after printing a page.
54. Press **<PRINT>**, and ensure the printout matches Table 1, on the next page. Press and hold **<SHIFT>**, and press **<SEL>**, to return back to the Print Mode.
55. Reference the Georgia Auditors Manual for installation and Setup of System Software.

