



Model: VAT45COMP
VAT45KRPR
VAT45KRBC
VAT45KR
Page: 1 of 2

Installation Instructions

**INSTALLATION MUST BE PERFORMED
BY QUALIFIED
SNAP-ON/SUN/EQUISEV PERSONNEL ONLY**

INSTALLATION OVERVIEW: _____

The Vat-45 unit is shipped as a fully assembled unit, with the exception of the cart or options. The following instructions will provide you with the steps necessary to completely setup the unit.

PARTS & ACCESSORIES LIST FOR: _____

PART NUMBER	DESCRIPTION	QTY
EAA0182L00A	Cart assembly	1
1-2324	Hex washer head, #8 Thread Forming	4
1-8433	Nut w/conical washer	12
1-8906	Pan head machine screw, 1/4 - 20 X 1/4	8
1-9006	Screws	2
1-9806	Machine Screw, pan head, 1/4 - 20 X 1.50	4
3645-0056-02	Caster, 4-inch W/Brake	2
8-17139-1	Hub Cap	2
8-9739	Wheel, 7-inch black	2
EAA0182L10A	Cart sheet metal	1
EASX095L74A	Axle	1
TVAT45	Installation Instructions	1
EAA0183L00A	Advanced Battery Tester w/ Printer	1
24242	Volt / Ohm leads	1
EAA183L02A	Current Probe	1




REQUIRED TOOLS: _____

- **COMPLETE TOOL KIT**

INSTALLATION INSTRUCTIONS: _____

1. Cut the 3 straps securing the boxes.
2. Open top of box and lift, removing the shipping box.
3. Remove the tester, charger and accessory boxes.

4. Open box with cart and remove components from box.
(Hardware will be in accessory box).
5. Inventory all items using the Parts & Accessories list on previous page and inspect for damage.
6. Mount front 2 casters (3645-0056-02) to bottom plate using 8 nuts (1-8433).
7. Place rear wheel (8-9739) on axle, secure with hub cap (8-17139-1).
(Use hammer to tap on hub cap)
8. Slide axle through rear plate holes.
9. Place remaining wheel on axle and secure with hub cap (8-17139-1).
10. Mount top shelf to side panels using 4 screws. (1-8906)
11. Attach the middle shelf to the side panels using 4 screws. (1-8906)
12. Mount side panels with shelves to base using 4 nuts. (1-8433)
13. Attach rear panel plate to the rear of the side panels and secure with four sheet metal screws. (1-2324)
14. Mount lead storage bracket to the rear portion of the shelf and secure with two screws. (1-9006)
15. Install handle and secure with 4 bolts. (1-9806)

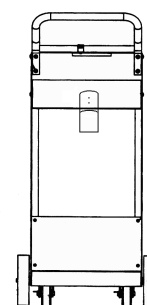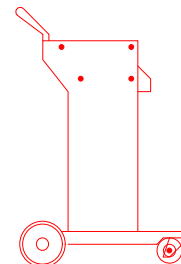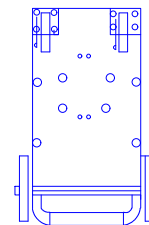

INSTALLATION COMPLETE

VAT-45 INSTALLATION INSTRUCTIONS: _____

1. Remove Vat45 from box..
2. Slide the front of the Vat45 into the two key slots in front on top of the assembled cart.
3. Slowly lower the rear of the Vat45 until it locks into clip attached to top shelf of cart.
4. Connect current probe (EAA0183L02A) to front panel connector.
5. Place volt/ohm leads (24242) on cart shelf.

INSTALLATION COMPLETE

CHARGER INSTALLATION INSTRUCTIONS: _____

1. Remove Charger from box.
2. Place Charger on bottom shelf and align with hole pattern.
3. Secure from the bottom with 4 bolts.

INSTALLATION COMPLETE